LIFETIME®

OUTDOOR STORAGE

MODEL N° 60019

OWNER'S MANUAL

Copy

Keep this Identification Number in case you must contact our Customer Service Department.

IMPORTANT! PLEASE READ BEFORE BEGINNING ASSEMBLY

Copy

Dear Valued Customer,

We would like to congratulate you on your purchase of a Lifetime© Outdoor Storage Shed! We are confident that you have made the perfect choice and you will be very pleased with your new storage solution.

Lifetime© Outdoor Storage is part of the family of products created and manufactured by Lifetime® Products, Inc. Like all of our products, you can be assured that the quality of your Lifetime Outdoor Storage Shed is the best in the world! And, we back that quality up by offering the best warranty in the business – A 10-year warranty that fully covers the Shed!

All of our Sheds are built with the highest-quality steel and high-density polyethylene (HDPE) parts. The design and construction of our steel-reinforced double-Wall Panels is second to none. All of our exposed steel parts and gables are powder coated and we use high-density polyethylene plastic. What makes polyethylene so special? It has superior strength and durability, and, it won't crack or degrade outdoors.

So now that you know the quality you are getting in a Lifetime Outdoor Storage Shed, please take the time to READ THIS INSTRUCTION MANUAL!

We have taken great care in providing the best possible form of instructions to help you put your new Outdoor Storage Shed together. Before you get started, PLEASE read the following preparation tips to help you get started!

We can assure you, your construction experience will be a lot more enjoyable if you do!

PREPARATION TIPS:

- The first step is simple… RELAX! You have made a great purchase, but Rome was not built in a day. Plan to spend a good part of your weekend putting together your fine Outdoor Storage Shed. Our philosophy is, if it comes together quickly and easily, it surely will come apart quickly and easily! Your Lifetime© Outdoor Storage Shed will surely last a long, long time, if you are patient, and take all the time necessary to put it together as we have instructed.

- Grab a friend to join in on the fun! This is not a one-person endeavor. We have found that not only will things go smoother if you have two or more people participating in the construction of the Shed, but it will go quicker as well. So, the more the merrier!

- Make sure you have all the tools necessary for constructing your new Shed. There is a "Tools Required For This Assembly" list on page five of this Owner's Manual.

- The plastic pieces of your Shed may become damaged by over tightening the screws. To avoid this damage, we strongly recommend the use of a low-powered power screwdriver or a drill that has an adjustable clutch that is set on a low-torque setting. If neither is available, use a hand screwdriver. If a hand screwdriver is all you have, take several breaks… your wrist will need it!

- You will also need two small ladders (when it comes time to do the roof!).

IMPORTANT! PLEASE READ BEFORE BEGINNING ASSEMBLY

- Before beginning assembly, remove the Parts List from the center of this Owner's Manual and take an inventory of the parts included with your Outdoor Storage Shed. Also, read through the entire instruction manual. It's always a great practice to get a feel for the flow of the process and to familiarize yourself with the parts involved. But, try not to get ahead of yourself and start the process out of order.

- FOLLOW THE INSTRUCTIONS IN ORDER! Everything goes together in a certain order, and we have learned what that correct order should be. In our state-of-the-art research and testing facility, we have painstakingly created these instructions. The order of construction is there for a reason, and some parts simply will not fit if built out of order. Just follow along with the order in the instructions and everything will fit together and things will go very smooth.

- YOUR SHED MUST BE BUILT ON A LEVEL SURFACE! If the spot you have chosen to place your wonderful new Outdoor Storage Shed is not level, the Shed will not assemble correctly! We recommend a concrete patio, a wood platform or creating a pad with pea gravel. Your Shed is meant to last a lifetime, so provide the proper foundation for it before you start to build.

- Before you build it, make sure you are allowed to build it! Consult all building codes, as well as city and county ordinances, to ensure that you do not require a building permit to construct your Outdoor Storage Shed. Proper building permit documentation may be required in your neighborhood, and it would be quite unfortunate to learn this after your Outdoor Storage Shed is already built!

Now that you're ready to begin the construction of your wonderful new Outdoor Storage Shed, step back, take a deep breath, get yourself a large cold beverage and enjoy yourself. We guarantee that after spending the right amount of time in building your Shed, you will be able to enjoy it for years to come.

Thanks for choosing Lifetime©, and have fun!

ABOUT LIFETIME PRODUCTS, INC.

Lifetime Products, Inc., has applied innovation and cutting-edge technology in plastics and metals to create a family of affordable lifestyle products that feature superior strength and durability. The world's leading manufacturer of folding tables and chairs, Lifetime was founded in 1986 as the maker of portable basketball systems that revolutionized the industry with patented technology. With diverse offerings such as outdoor storage sheds and steel utility trailers, Lifetime continues to develop innovative products that outfit the way you live.

Lifetime makes the things you need for the lifestyle you want. By innovating products in and around the home, Lifetime simplifies your everyday life and enables you to get the most out of your free time.

LIFETIME®

OUTDOOR STORAGE

REGISTER YOUR LIFETIME PRODUCT TODAY!

There are benefits to registering your Lifetime product. With our new online product registration form, it's fast and easy! Register with us at www.lifetime.com and enjoy these great benefits:

- Receive exclusive money-saving offers from BuyLifetime.com, our online store, as well as NEW product notifications and special closeout promotions!
- In the unlikely event of a product recall or safety modification, we will notify you.
- Registering your product guarantees you warranty service. If you do not register your product, your warranty rights will not be diminished. But you will need to provide a sales receipt to verify your product purchase date before warranty service will be provided.

LIFETIME'S PROMISE TO YOU:

Maintaining your privacy is our long-standing policy at Lifetime. And you can rest assured that Lifetime will not sell or provide your personal data to other third parties, or allow them to use your personal data for their own purposes.

We invite you to read our privacy policy at www.lifetime.com

REGISTER today!

****U.S. and Canada customers ONLY****

IF ASSISTANCE IS NEEDED,

DO NOT CONTACT THE STORE!

CALL OUR CUSTOMER SERVICE DEPARTMENT at 1 (800) 225-3865

HOURS: 7:00 a.m. to 5:00 p.m. Monday through Friday (Mountain Standard Time)

Call, or visit our Web site for Saturday hours

For customers outside the U.S. or Canada, please contact the store for assistance.

⚠ SAFETY INSTRUCTIONS ⚠

FAILURE TO FOLLOW THESE WARNINGS MAY RESULT IN SERIOUS INJURY OR PROPERTY DAMAGE AND WILL VOID WARRANTY.

To ensure safety, do not attempt to assemble this product without following the instructions carefully. Check entire box and inside all packing material for parts and/or additional instruction material. Before beginning assembly, read the instructions and identify parts using the hardware identifier and parts list in this document. Proper and complete assembly, use and supervision are essential to reduce the risk of accident or injury.

- Do not use or store hot objects such as grills, blowtorches, welding equipment, etc. near the product.
- If using a ladder during assembly, use extreme caution.
- Two capable adults are required for assembly. (It is also recommended that a third adult function as an instruction reader.)

Most injuries are caused by misuse and/or not following instructions. Use caution when using this product.

BEFORE BEGINNING ASSEMBLY

Keep the hardware bags and their contents separate. If any parts are missing, call our Customer Service Department.

Read the "Congratulations" letter on page 2-3. Identify and inventory all parts and hardware using the parts and hardware lists and identifiers in this document.

*Two adults required to complete assembly*

(+ one adult suggested as an instruction reader)

Only adults should set up the product. Do not allow children in the set-up area until assembly is complete.

TOOLS REQUIRED FOR THIS ASSEMBLY

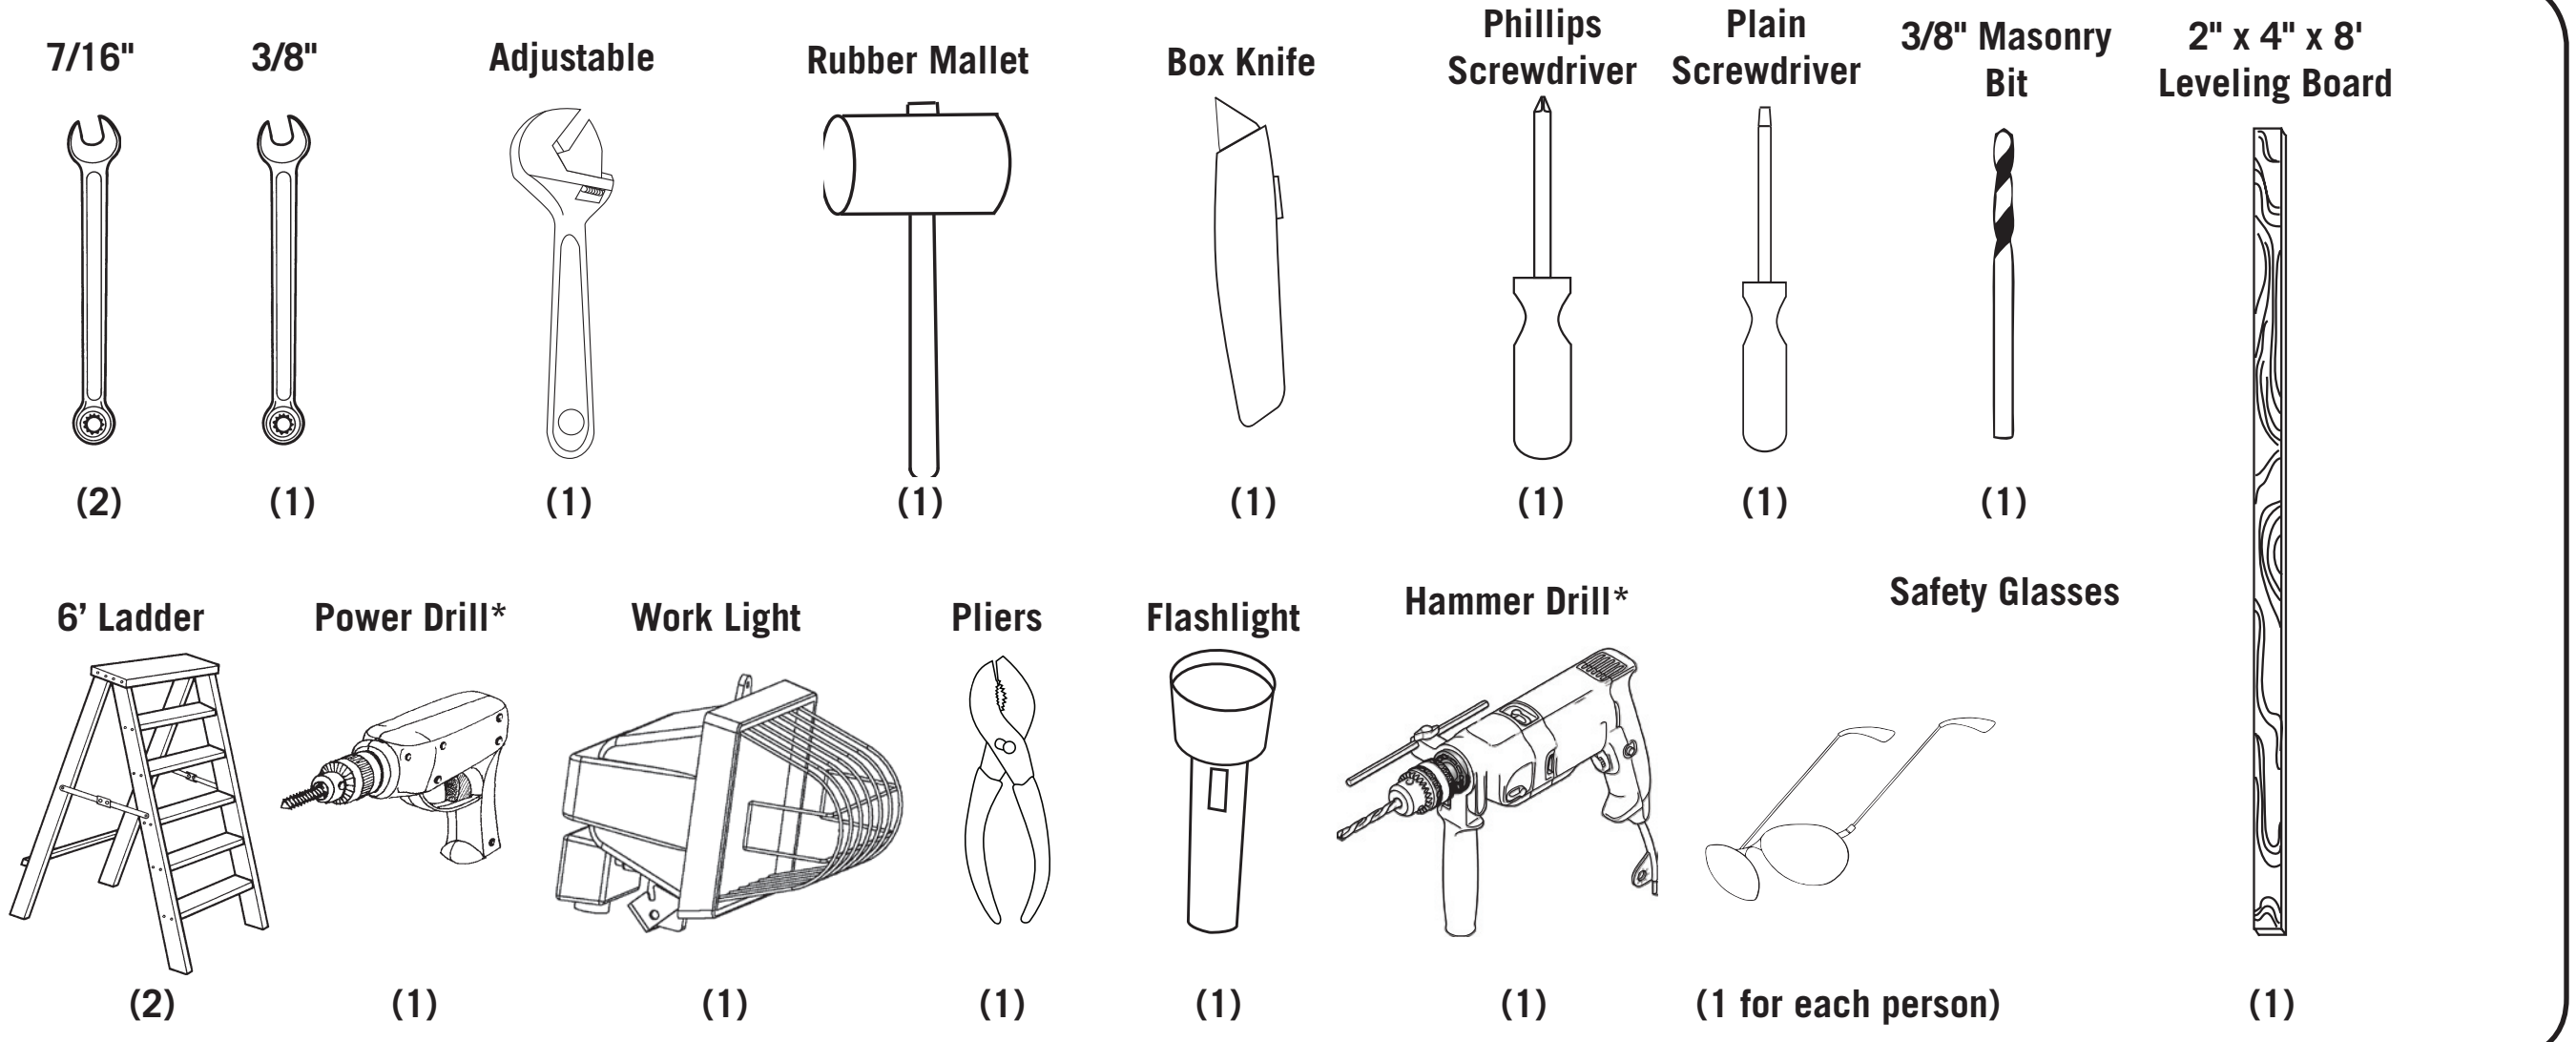
7/16"
(2)
3/8"
(1)
Adjustable
(1)
Rubber Mallet
(1)
Box Knife
(1)
Phillips Screwdriver
(1)
Plain Screwdriver
(1)
3/8" Masonry Bit
(1)
2" x 4" x 8' Leveling Board
(1)
6' Ladder
(2)
Power Drill*
(1)
Work Light
(1)
Pliers
(1)
Flashlight
(1)
Hammer Drill*
(1)
Safety Glasses
(1 for each person)

*See "Screwdriver Notice" on page 7.

ASSEMBLY GUIDES

Refer to the following areas throughout the instructions to assist in the assembly process:

This area is located at the top, left-hand corner of the page and indicates which tools and hardware are needed to complete the assembly steps on a page.

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

This area is located at the top, right-hand corner of the page and shows an image of the product with shaded parts indicating which section is being assembled.

SEC #

This area is usually located in the bottom, left-hand corner of a step and indicates that special attention is needed to perform a particular part of a step.

! *Note:*

These areas are usually located in the bottom, right-hand corner of a step and indicate that damage to the product or serious injury may occur if the caution or warning is not heeded.

⚠ **CAUTION**

⚠ **WARNING**

Throughout the Parts & Hardware List, Part & Hardware Identifiers, and instructions are three-letter IDs. These IDs are below the images of the parts and hardware to help you locate and identify the parts and hardware during assembly. These IDs are not necessarily on the parts themselves.



ADZ (x10)
1/4” x 5/8” Pan-Head Screw

Level Surface Notice:

Surface must be leveled before installation. We recommend building a level work space with a concrete or patio style surface. If the surface is not properly leveled, the Outdoor Shed will not assemble correctly. Proper surface leveling will save you time in the long run, so please do not ignore this step.

Building Code Notice:

Consult all local building codes, as well as city and county ordinances, to ensure that the construction of the Outdoor Shed does not require a building permit. Proper building permit documentation may be required in your neighborhood, and it would be unfortunate to learn this after constructing the Shed.

Screwdriver Notice:

You may use a #2 Phillips head screwdriver bit and a power screwdriver or drill, instead of a hand screwdriver. However, be aware that the plastic pieces of your Shed can be damaged by overtightening of screws. To avoid damage we strongly recommend the use of a low-powered power screwdriver or a drill that has an adjustable clutch that is set on a low torque setting. If neither is available, use a hand screwdriver. In any case use caution to avoid overtightening the screws.

Floor Puncture Notice:

Sharp objects may damage your floor. If resting sharp, heavy objects on your Shed floor, place a block of wood between the sharp object and floor.

⚠ CAUTION:

If more than six (6) inches of snow accumulate on the roof of the shed, carefully remove the snow to avoid possible roof collapse. While standing on the ground, remove the snow from the roof with a broom or snow shovel. Do not stand on the roof to remove snow.

PARTS & HARDWARE LIST

BOX 1

SHED PARTS BOX

ID	Description	Qty
AGZ	Right Door	1
AGO	Left Door	1
AGF	Entry Gable	1
AGH	Rear Gable 1	1
AGI	Rear Gable 2	1
AGR	Outer Floor Panel	2
AFX	Center Floor Panel	2
AFV	90” Shelf	1
AFY	Center Roof Cap	3
AGQ	Roof Panel	6
AHB	Roof Panel for Domed Skylight	2

CTD METAL PARTS KIT

AFH	Truss Gutter Channel	6
AFG	Roof Truss Brace	3
AFM	Wall/Shelf Support Channel	2
AFC	Door End Channel	2
AFE	Entry Header Bar	1
CRD	Door Hinge Tube	2

BOX 2

SHED PARTS BOX

AGY	Corner Wall Panel 104	1
AGN	Corner Wall Panel 105	1
AGW	Corner Wall Panel 106	1
AGL	Corner Wall Panel 107	1
AHD	Wall Panel	7
AHH	Window Wall Panel	1

BON SMALL PARTS KIT

AFZ	Corner Shelf	2
AHC	Skylight	4
AFL	Roof Support Strip	10
AHE	Window	1
AGB	Domed Skylight	2
AGG	Front Roof Cap	1
AFW	Rear Roof Cap	1

BOO SMALL PARTS BOX

AIX	Wood Shim	4
AIW	Wood Block	1
BQH	**FLOOR ASSEMBLY HARDWARE**	
BQC	#8 x 1/2” Pan-Head Screw	20
AHO	Door Hinge Bushing	2
ADC	#2 Phillips Bit	1
BEA	**TRUSS FRAME ASSEMBLY HARDWARE (x3)**	
ADJ	1/4” Cap Nut	2
ADY	#10 x 3/8” Pan-Head Screw	6
ADK	#10 Cap Nut	6
AIP	Truss Connector	1
ADH	1/4” Threaded Rod	1
BHY	**WALL INSTALLATION HARDWARE**	
ADZ	1/4” x 5/8” Pan-Head Screw	58
SHELF INSTALLATION HARDWARE		
BHI	***Corner Shelf Installation Hardware (x2)***	
ADZ	1/4” x 5/8” Pan-Head Screw	4
BHH	***90” Long Shelf Installation Hardware***	
ADZ	1/4” x 5/8” Pan-Head Screw	14
AIY	Shelf Support Bracket	2

ID	Description	Qty
BHV	**GABLE ASSEMBLY HARDWARE (x2)**	
AGP	Louvered Vent	1
AIQ	Vent Screen	1
ADW	#10 x 3/4” Pan-Head Screw	5
AEE	#10 x 1/2” Flat Washer	5
ADZ	1/4” x 5/8” Pan-Head Screw	4
AHS	3/4” End Plug	2
ADV	1/4” x 1 1/8” Pan-Head Screw	6
ACB	#10 x 1 1/8” Pan-Head Screw (Not used)	1
BEF	**LEFT DOOR ASSEMBLY HARDWARE**	
AHZ	Left Door Handle	1
AHM	Deadbolt Latch	2
ABU	1/4” x 1 1/2” Carriage Bolt	2
ADW	#10 x 3/4” Pan-Head Screw	3
AEE	#10 x 1/2 Flat Washer	3
ADJ	1/4” Cap Nut	2
AIA	Left Door Lock Bracket	1
AIB	Left Door Strike Plate	1
BEG	**RIGHT DOOR ASSEMBLY HARDWARE**	
AIK	Right Door Handle	1
ABV	1/4” x 2” Carriage Bolt	2
ADB	3/8” x 1/2” Steel Spacer	2
AAB	1/4” Centerlock Nut	2
AHY	Latch Spring	1
AHW	Latch Block	1
AIO	Thumb Lever	1
ADW	#10 x 3/4” Pan-Head Screw	4
AHX	Latch Cover Plate	1
AHV	Latch, Door	1
AIL	Right Door Lock Bracket	1
AEB	1/4” Flat Washer	2
AEE	#10 x 1/2” Flat Washer	5
BHZ	**DOOR & ENTRY GABLE INSTALLATION HARDWARE**	
ADZ	1/4” x 5/8” Pan-Head Screw	6
AHP	Cotter Pin	2
AIC	Left Gap Flap	1
AIM	Right Gap Flap	1
ADX	#10 x 1/2” Pan-Head Screw	4
BEC	**DOMED SKYLIGHT ASSEMBLY PARTS (x2)**	
ACR	#10 x 5/8” Carriage Bolt	12
AEE	#10 x 1/2” Flat Washer	12
ADK	#10 Cap Nut	12
AHI	6.25’ x 3/4” Butyl Tape	1
BHX	**TRUSS, REAR GABLE, & ROOF INSTALLATION HARDWARE**	
ADZ	1/4” x 5/8” Pan-Head Screw	126
AED	#10 x 1” Fender Washer	24
ADX	#10 x 1/2” Pan-Head Screw	24
AXX	Truss Hole Insert	2
BEJ	**WINDOW INSTALLATION HARDWARE**	
ADZ	1/4” x 5/8” Pan-Head Screw	4
AIS	Window Latch Bracket	2
ADY	#10 x 3/8” Pan-Head Screw	1

BOX 1

SHED PARTS BOX

Parts shown at 4% of actual size

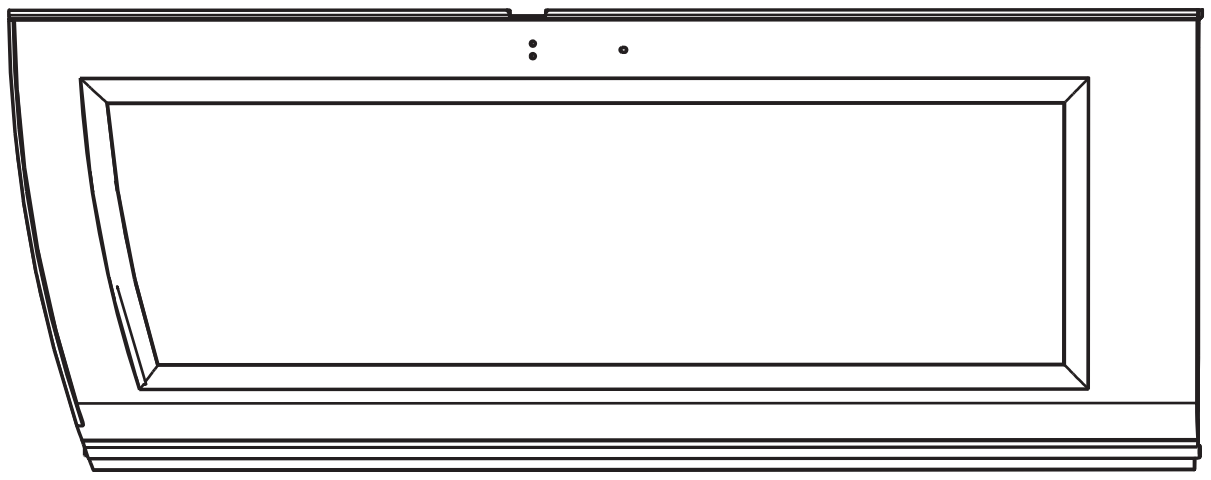

AGO (x1)
Left Door

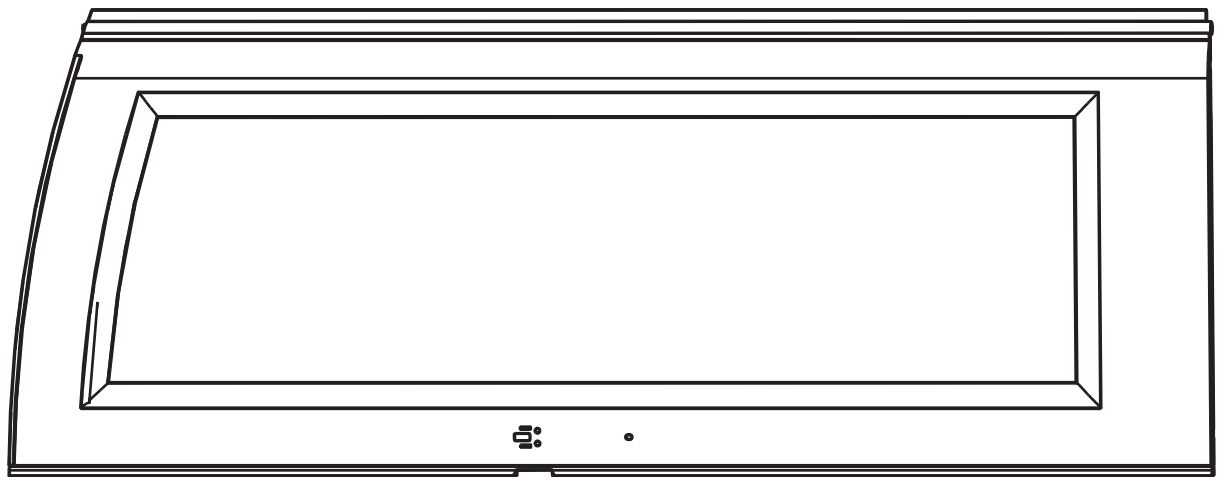

AGZ (x1)
Right Door

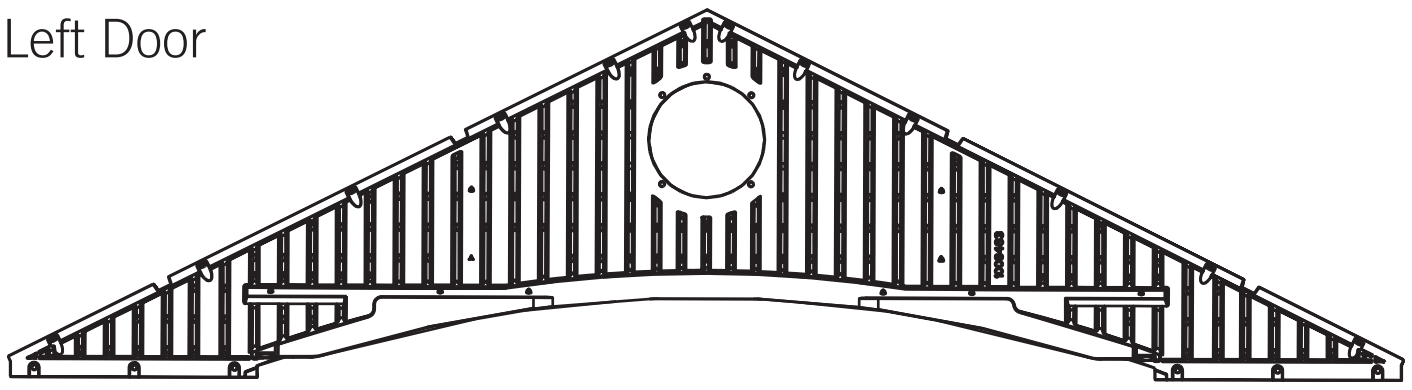

(Rear View)

AGF (x1)
Entry Gable



AFV (x1)
90" Shelf

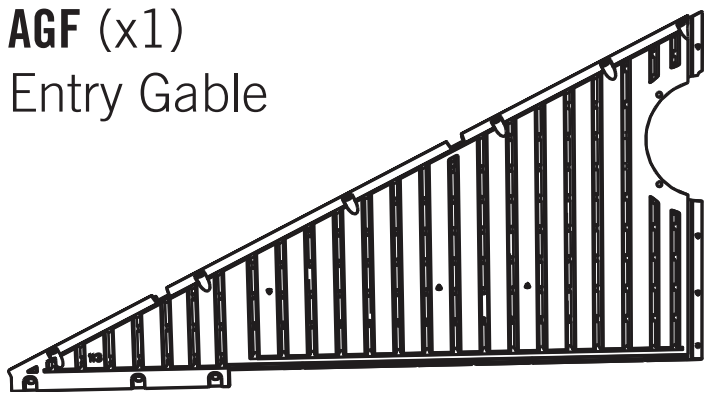

(Rear View)

AGH (x1)
Rear Gable 1

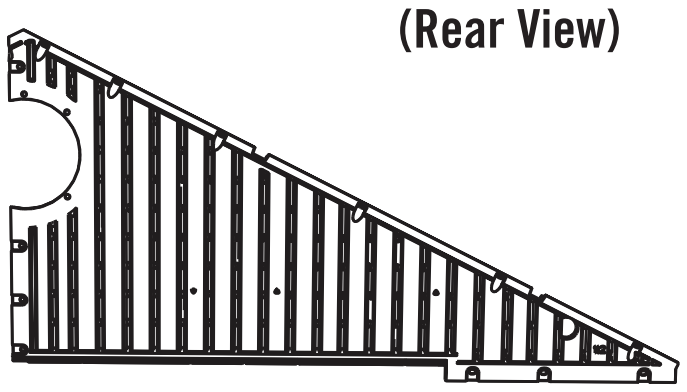

(Rear View)

AGI (x1)
Rear Gable 2

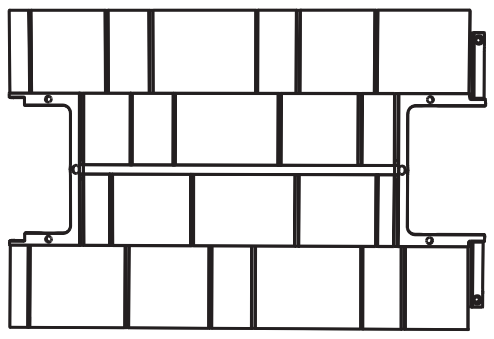

AFY (x3)
Center Roof Cap

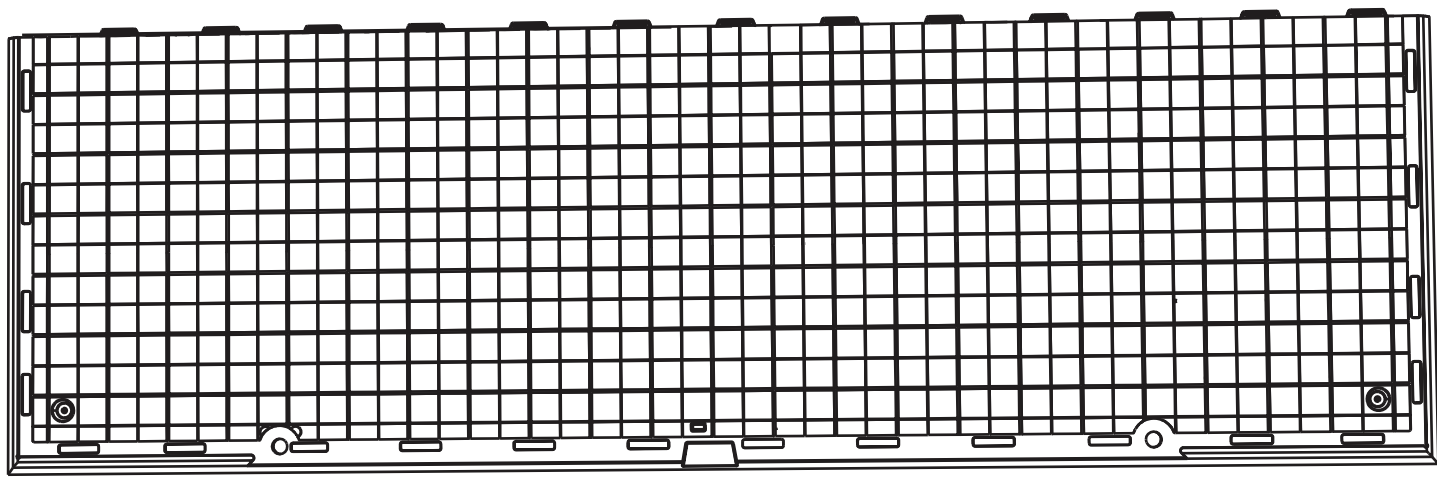

AGR (x2)
Outer Floor Panel

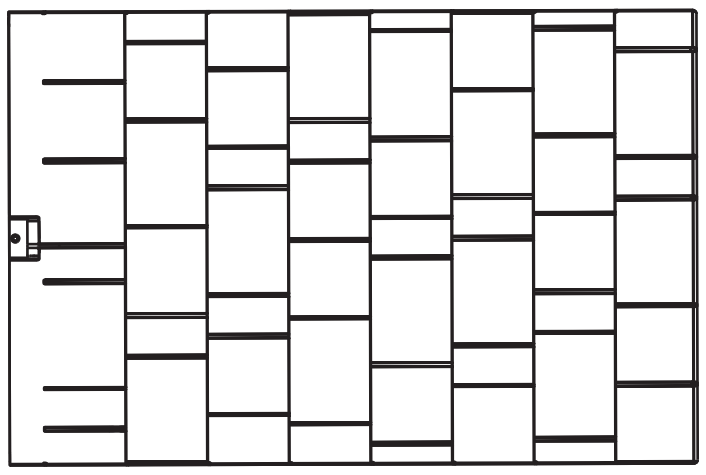

AGQ (x6)
Roof Panel

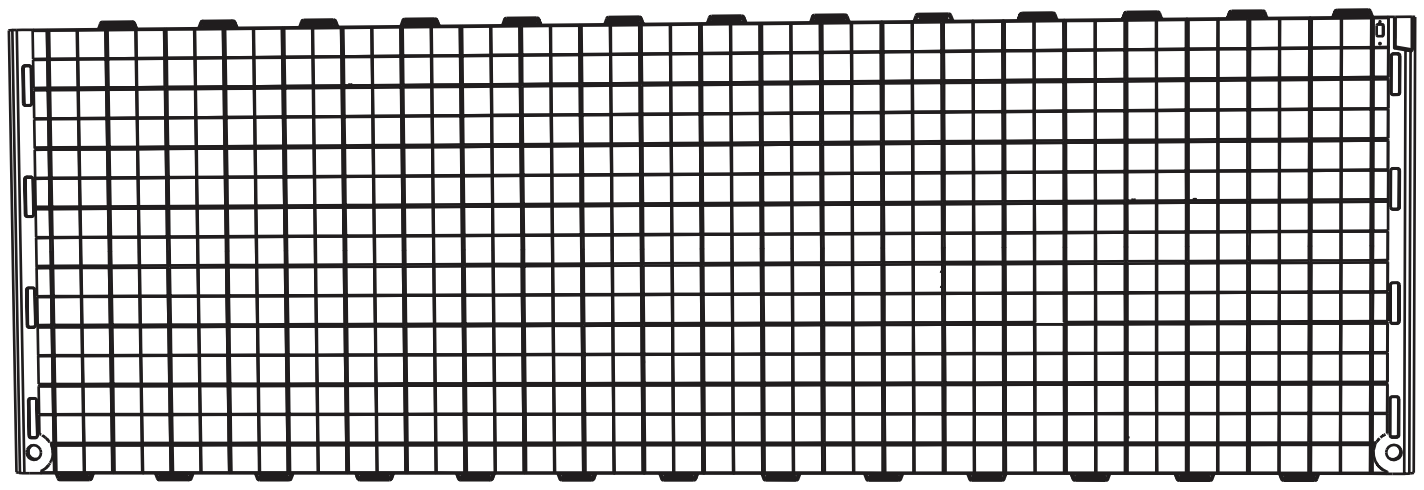

AFX (x2)
Center Floor Panel

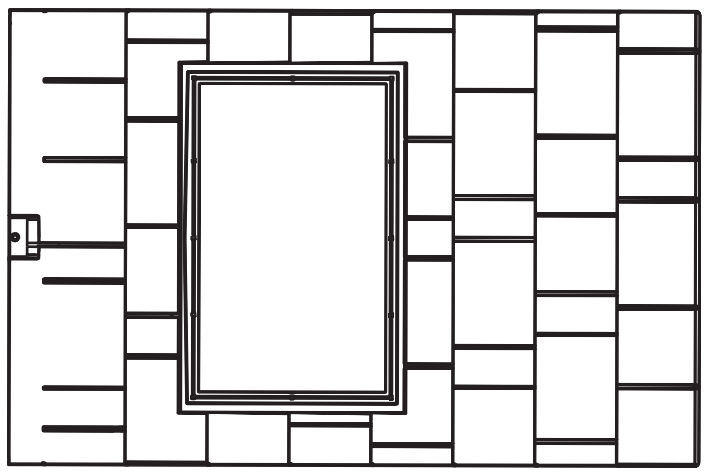

AHB (x2)
Roof Panel for Domed Skylight

! *Note: Throughout the Parts & Hardware List, Part & Hardware Identifiers, and instructions are three-letter IDs. These IDs are below the images of the parts and hardware to help you locate and identify the parts and hardware during assembly. These IDs are not necessarily on the parts themselves.*

PARTS IDENTIFIER

BOX 1

METAL PARTS KIT [CTD]

Parts shown at 8% of actual size

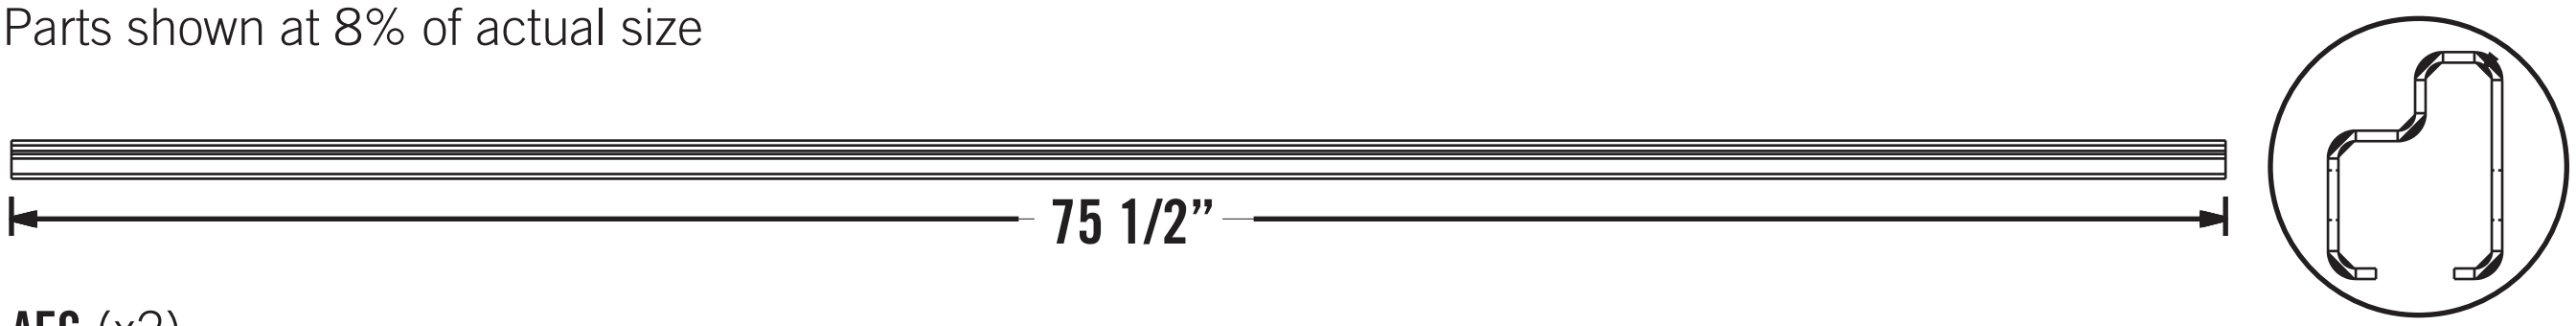

AFC (x2)
Door End Channel

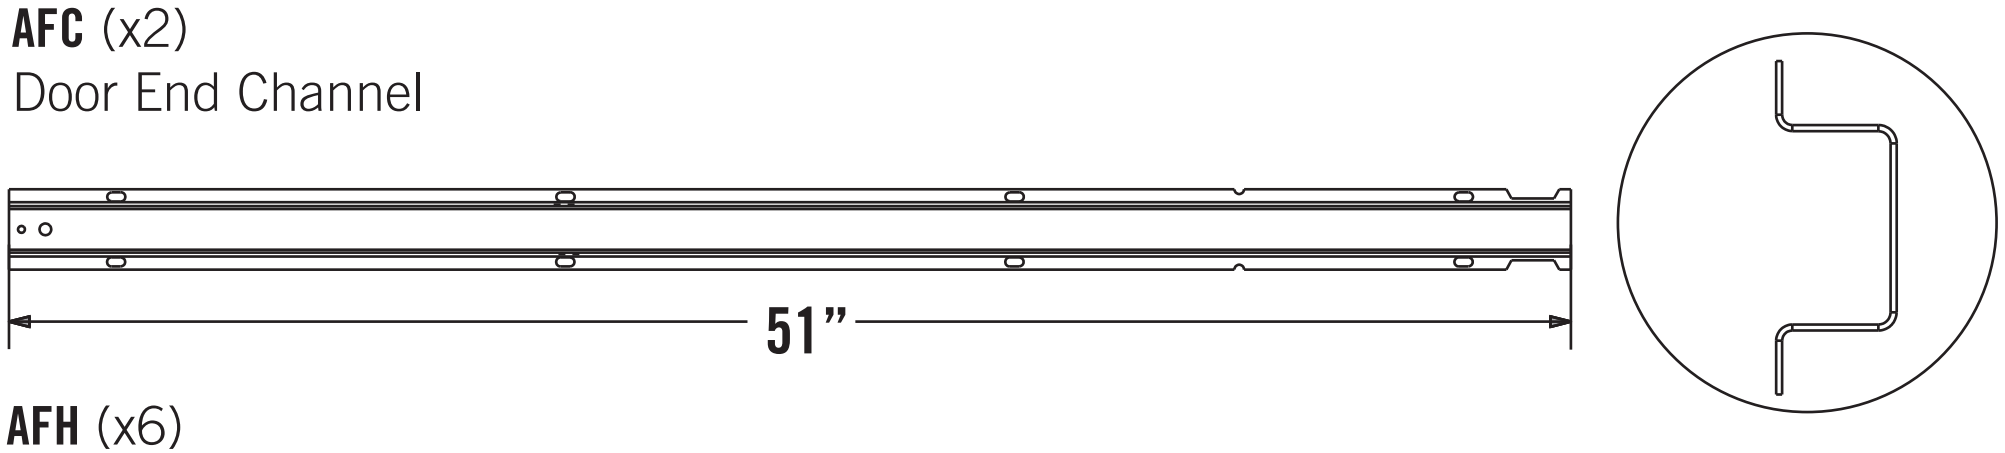

AFH (x6)
Truss Gutter Channel

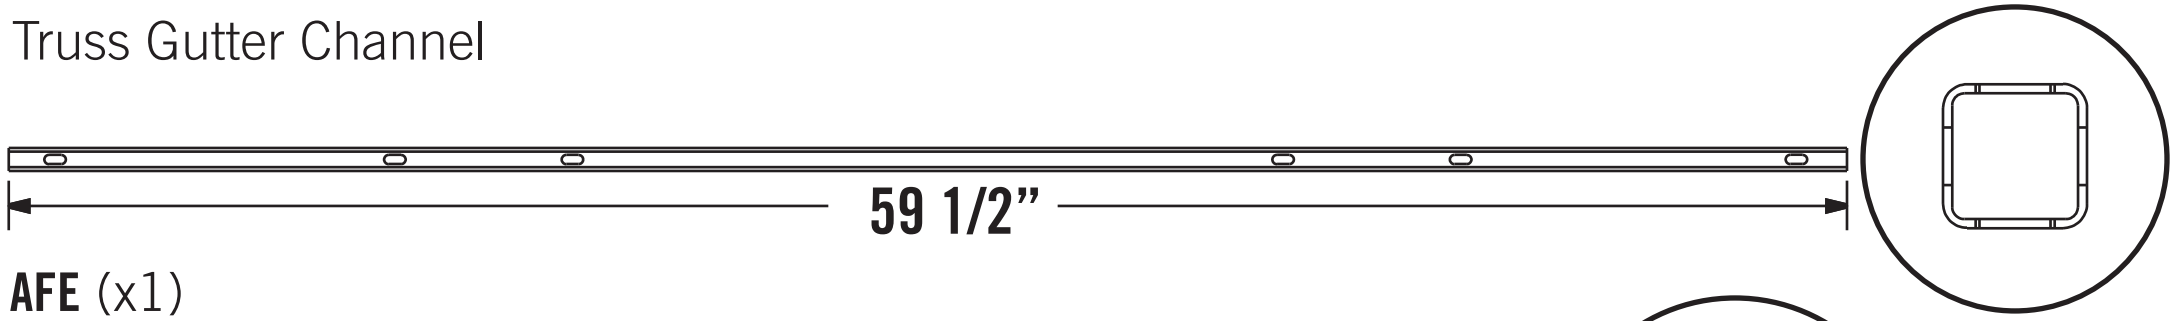

AFE (x1)
Entry Header Bar

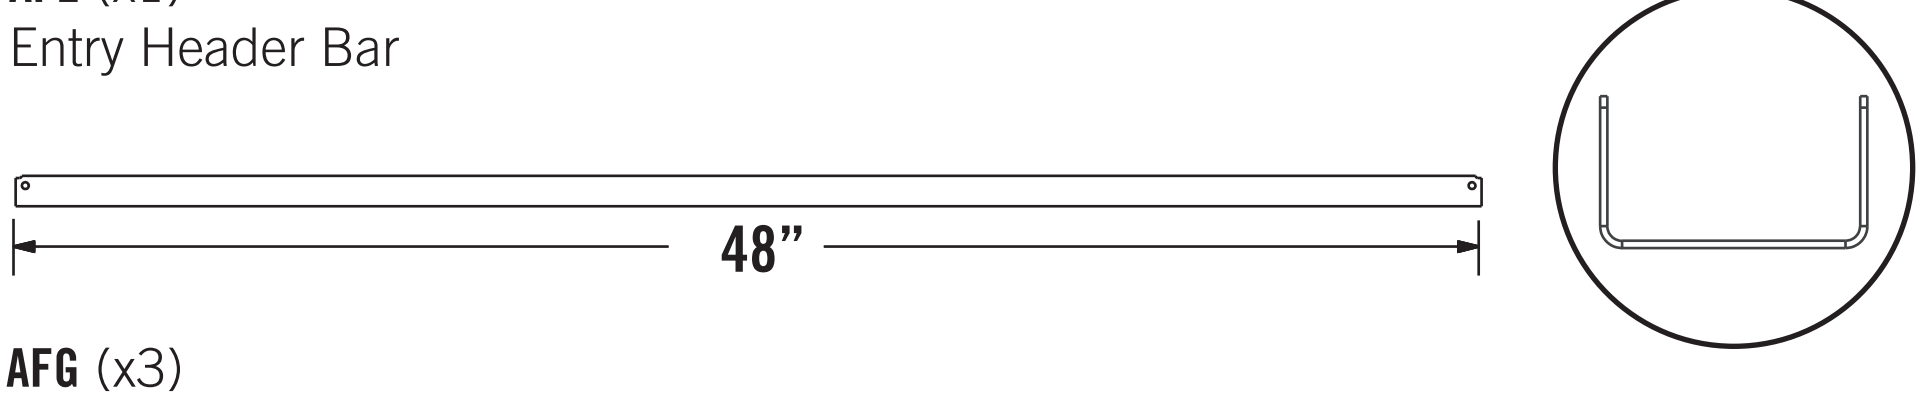

AFG (x3)
Roof Truss Brace

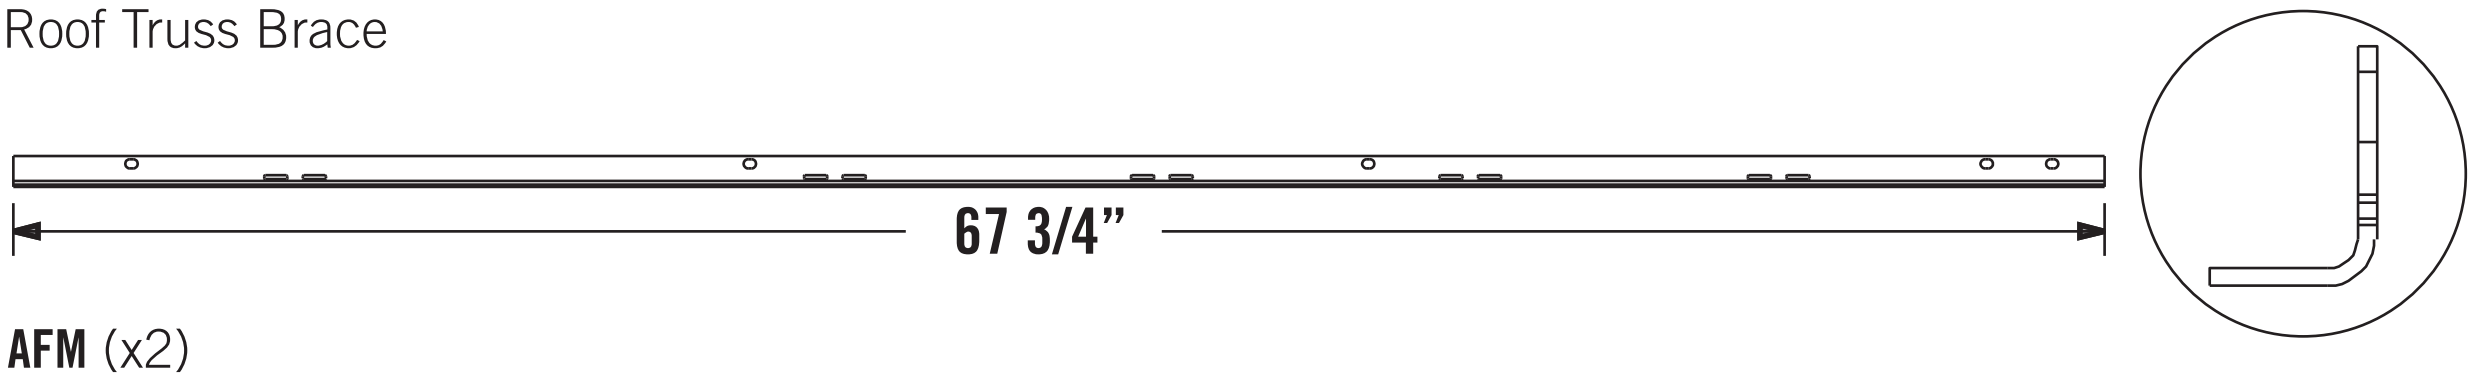

AFM (x2)
Wall/Shelf Support Channel



CRD (x2)
Door Hinge Tube

PARTS IDENTIFIER

BOX 2

SHED PARTS BOX

Parts shown at 4% of actual size

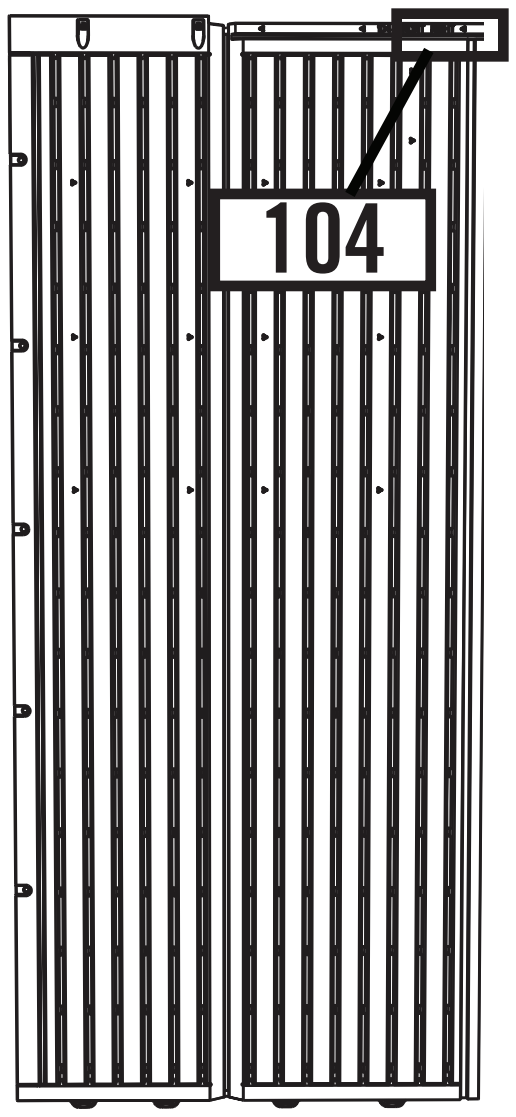

AGY (x1)
Corner Wall Panel 104

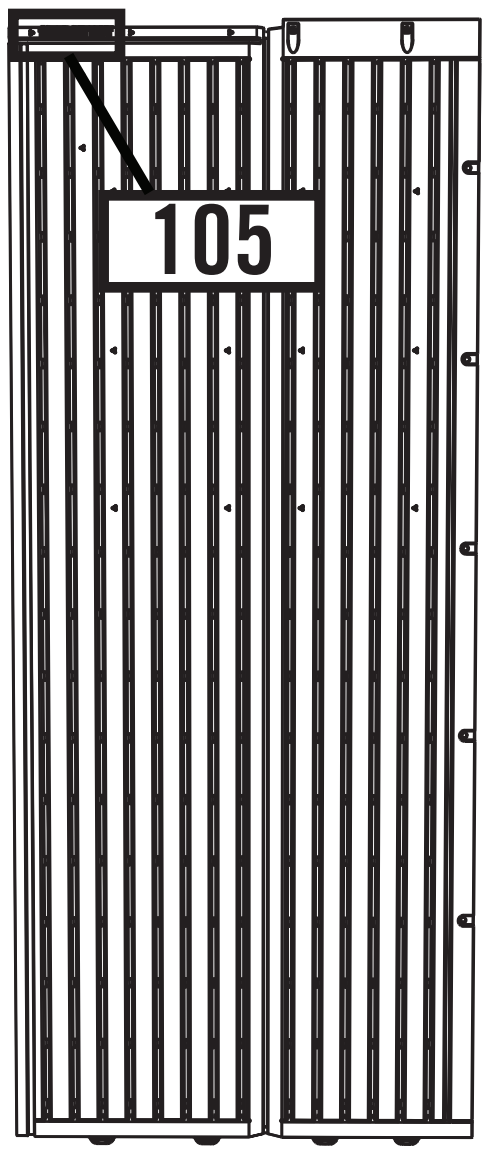

AGN (x1)
Corner Wall Panel 105

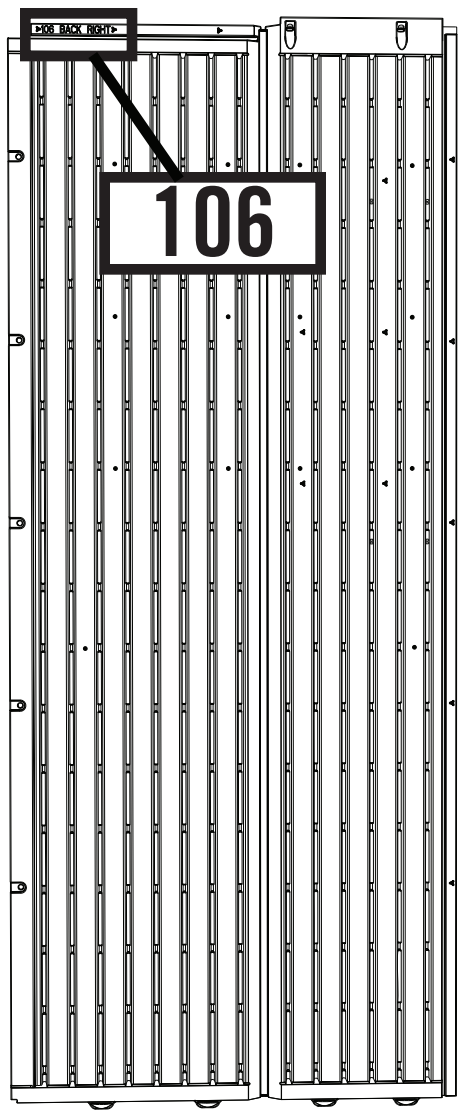

AGW (x1)
Corner Wall Panel 106

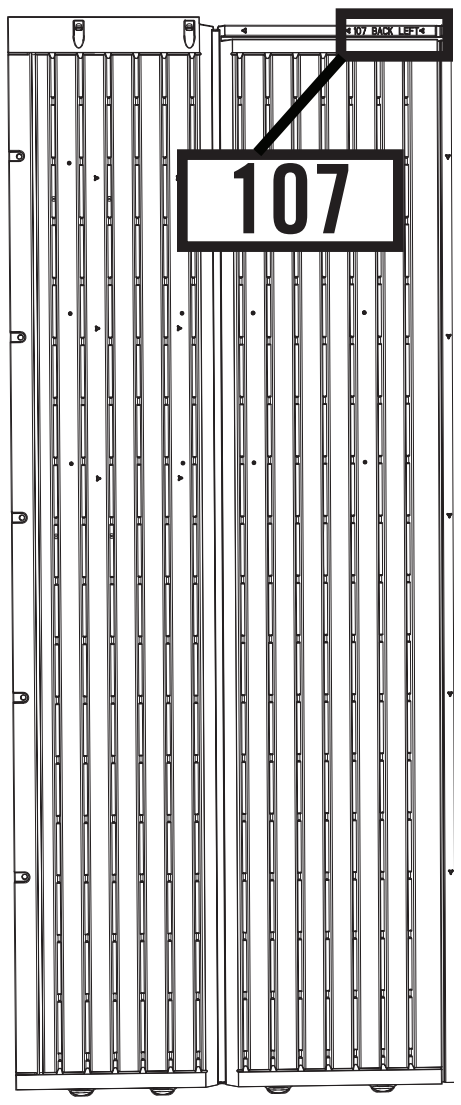

AGL (x1)
Corner Wall Panel 107

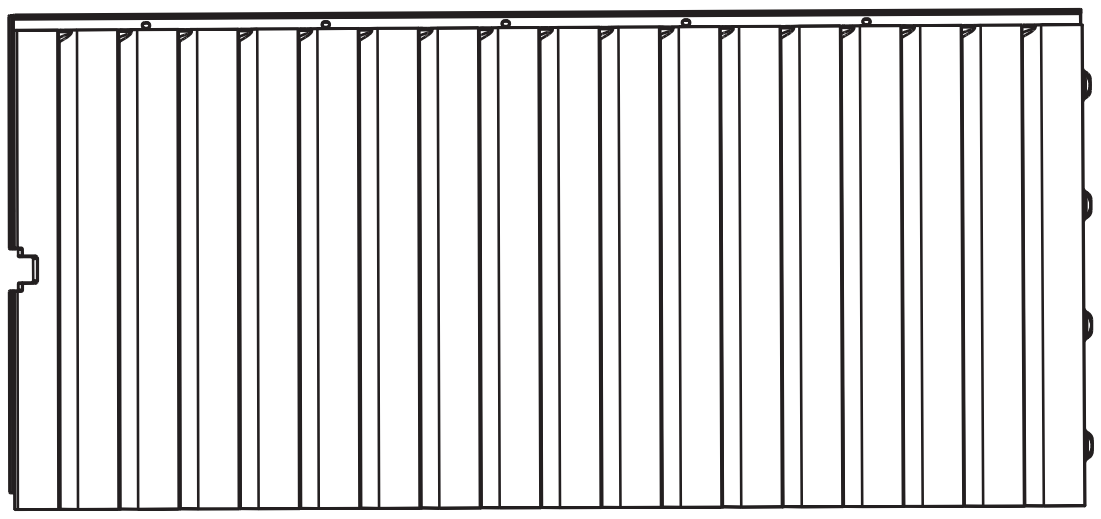

AHD (x7)
Wall Panel

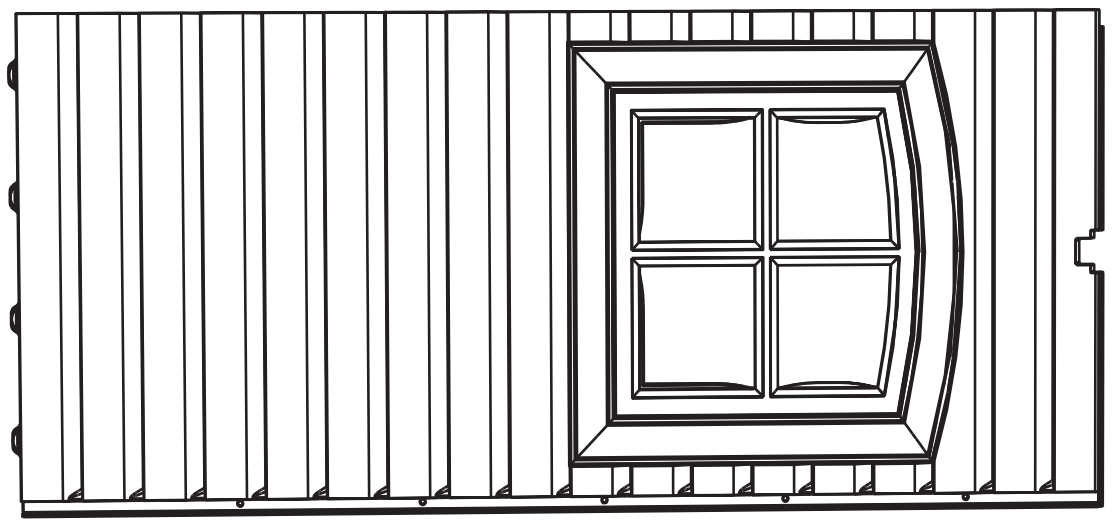

AHH (x1)
Window Wall Panel

SMALL PARTS KIT [BON]

Parts shown at 8% of actual size

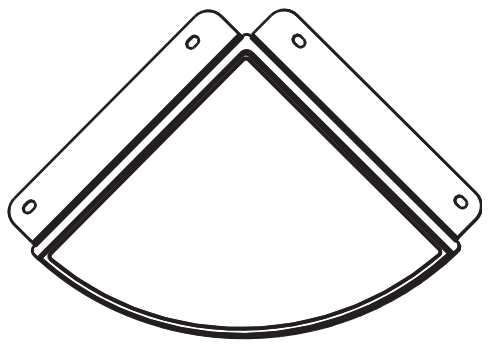

AFZ (x2)
Corner Shelf

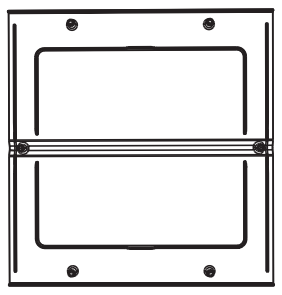

AHC (x4)
Skylight

Parts shown at 4% of actual size

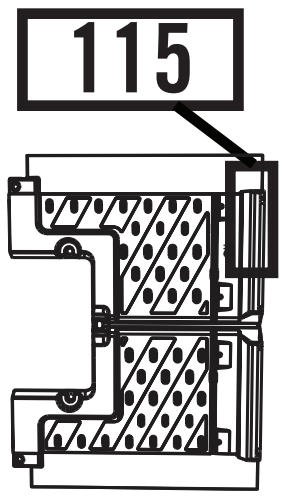

AGG (x1)
Front Roof Cap

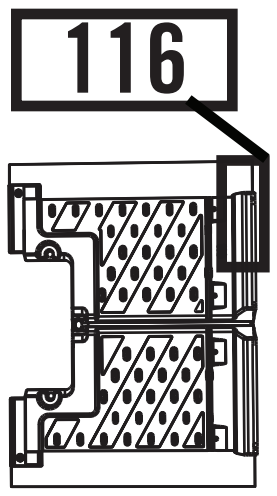

AFW (x1)
Rear Roof Cap

SMALL PARTS BOX [BOO]

Parts are not shown to scale



AIW (x1)
Wood Block



AIX (x4)
Wood Shim

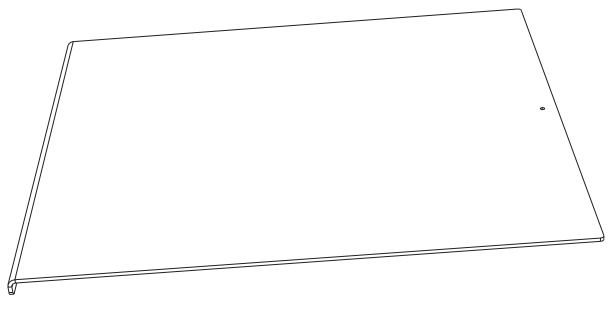

AHE (x1)
Window

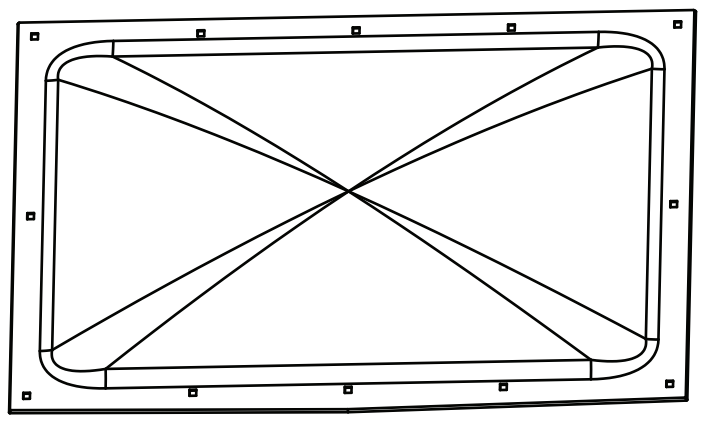

AGB (x2)
Domed Skylight



AFL (x10)
Roof Support Strip

PARTS & HARDWARE IDENTIFIER

BOX 2

FLOOR ASSEMBLY HARDWARE [BQH]

Hardware shown at actual size



BQC (x20)
#8 x 1/2” Pan-Head Screw
(Only 12 used)

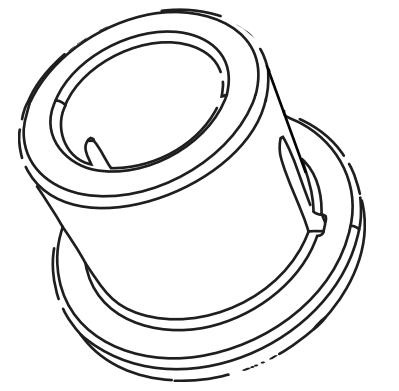

AHO (x2)
Door Hinge Bushing



ADC (x1)
#2 Phillips Bit

TRUSS FRAME ASSEMBLY HARDWARE [BEA] x3

Parts shown to scale (*Unless otherwise noted)



ADJ (x2)
1/4” Cap Nut



ADK (x6)
#10 Cap Nut



ADY (x6)
#10 Pan-Head Screw

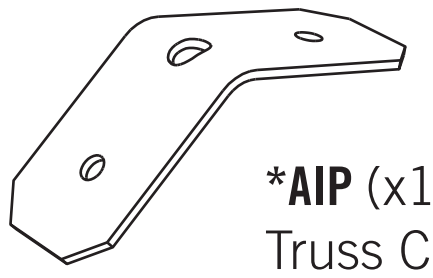

***AIP** (x1)
Truss Connector



***ADH** (x1)
1/4” Threaded Rod

WALL INSTALLATION HARDWARE [BHY]

Parts shown to scale (*Unless otherwise noted)



ADZ (x58)
1/4” x 5/8” Pan-Head Screw

SHELF INSTALLATION HARDWARE

Parts shown to scale (*Unless otherwise noted)

Corner Shelf Installation Hardware [BHI] x2



ADZ (x4)
1/4” x 5/8” Pan-Head Screw

90” Long Shelf Installation Hardware [BHH]



ADZ (x14)
1/4” x 5/8” Pan-Head Screw



***AIY** (x2)
Shelf Support Bracket

PARTS & HARDWARE IDENTIFIER

BOX 2

GABLE ASSEMBLY HARDWARE [BHV] x2

Parts shown to scale (*Unless otherwise noted)

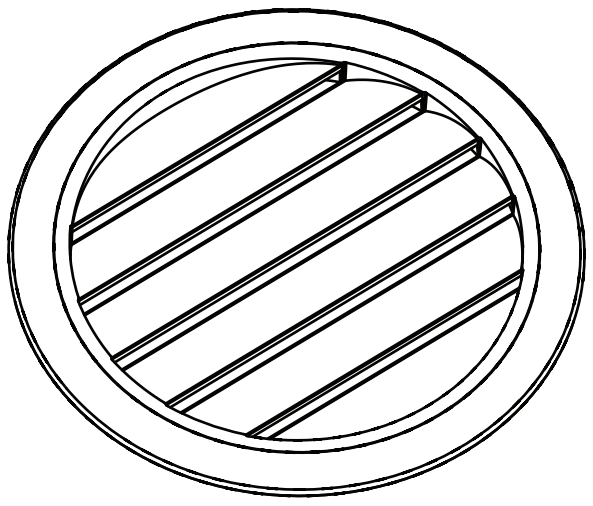

***AGP** (x1)
Louvered Vent

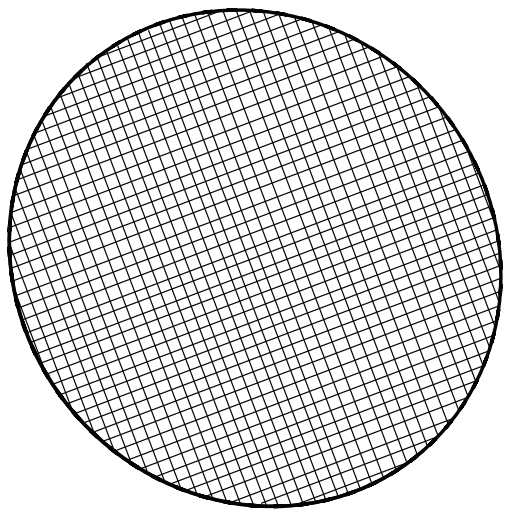

***AIQ** (x1)
Vent Screen



ADZ (x4)
1/4” x 5/8” Pan-Head Screw
(Only 4 used)

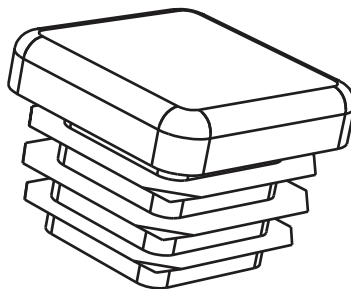

AHS (x2)
3/4” End Plug
(Only 2 used)



AEE (x5)
#10 x 1/2”
Flat Washer



ADV (x6)
1/4” x 1 1/8” Pan-Head Screw
(Only 6 used)



ADW (x5)
#10 x 3/4” Pan-Head Screw



ACB (x1)
#10 x 1 1/8” Pan-Head Screw
(Not used in this model)

LEFT DOOR ASSEMBLY HARDWARE [BEF]

Parts shown to scale (*Unless otherwise noted)



***AHM** (x2)
Deadbolt Latch



ABU (x2)
1/4” x 1 1/2” Carriage Bolt



ADW (x3)
#10 x 3/4” Pan-Head Screw



AEE (x3)
#10 x 1/2” Flat Washer

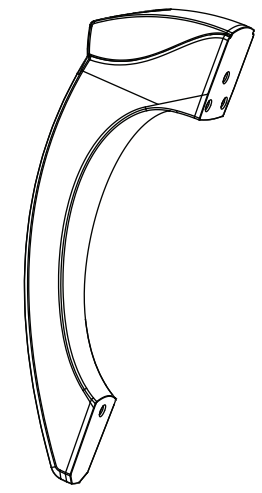

***AHZ** (x1)
Left Door Handle



ADJ (x2)
1/4” Cap Nut



***AIA** (x1)
Left Door Lock Bracket



***AIB** (x1)
Left Door Strike Plate

RIGHT DOOR ASSEMBLY HARDWARE [BEG]

Parts shown to scale (*Unless otherwise noted)



AEE (x5)
#10 x 1/2” Flat Washer
(Only 3 used)



ADB (x2)
3/8” x 1/2” Steel Spacer



ABV (x2)
1/4” x 2” Carriage Bolt



***AIK** (x1)
Right Door Handle



AAB (x2)
1/4” Centerlock Nut

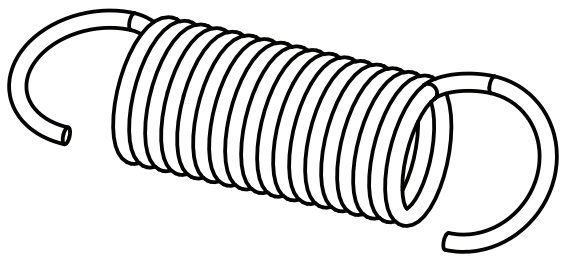

AHY (x1)
Latch Spring



***AHW** (x1)
Latch Block

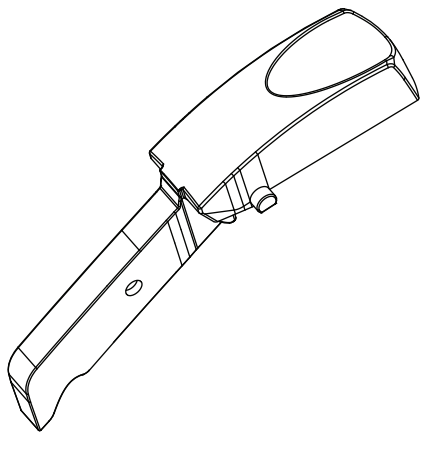

***AIO** (x1)
Thumb Lever



ADW (x4)
#10 x 3/4” Pan-Head Screw

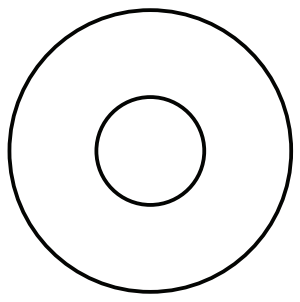

AEB (x2)
1/4” Flat Washer



***AHX** (x1)
Latch Cover Plate



***AHV** (x1)
Door Latch



***AIL** (x1)
Right Door Lock Bracket

PARTS & HARDWARE IDENTIFIER

BOX 2

DOOR & FRONT GABLE INSTALLATION HARDWARE [BHZ]

Parts shown to scale (*Unless otherwise noted)



ADZ (x6)
1/4” x 5/8” Pan-Head Screw

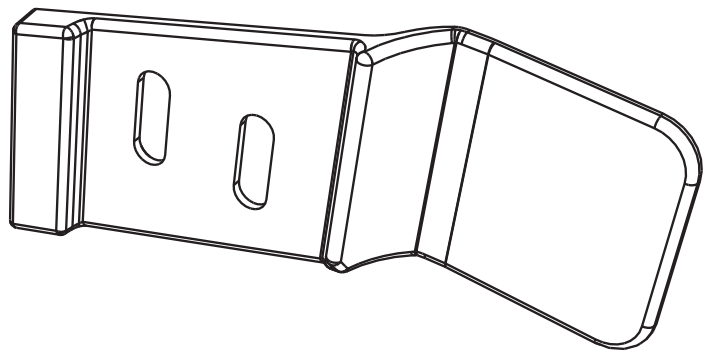

***AIC** (x1)
Left Gap Flap

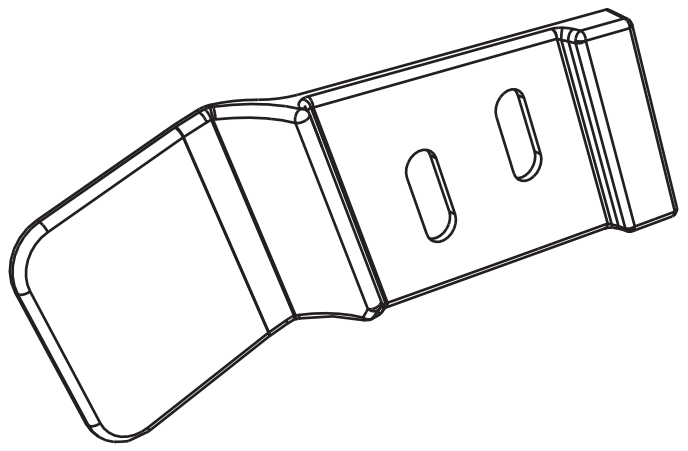

***AIM** (x1)
Right Gap Flap



AHP (x2)
Cotter Pin



ADX (x4)
#10 x 1/2” Pan-Head Screw

DOMED SKYLIGHT ASSEMBLY HARDWARE [BEC] x2

Parts shown to scale (*Unless otherwise noted)



ACR (x12)
#10 x 5/8” Carriage Bolt



AEE (x12)
#10 x 1/2” Flat Washer



ADK (x12)
#10 Cap Nut

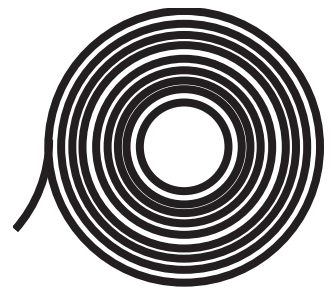

***AHI** (x1)
Butyl Tape

TRUSS, REAR GABLE, & ROOF INSTALLATION HARDWARE [BHX]

Parts shown to scale (*Unless otherwise noted)



ADZ (x126)
1/4” x 5/8” Pan-Head Screw



ADX (x24)
#10 x 1/2” Pan-Head Screw

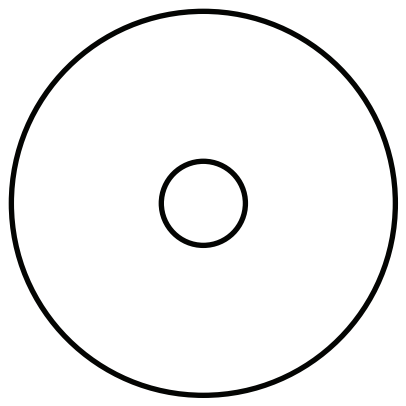

AED (x24)
#10 x 1” Fender Washer

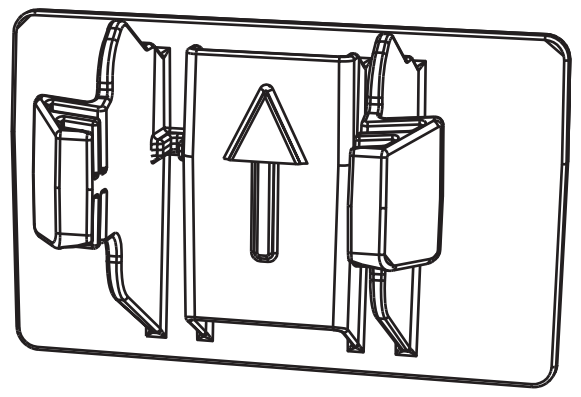

***AXX** (x2)
Truss Hole Insert

WINDOW INSTALLATION HARDWARE [BEJ]

Parts shown to scale (*Unless otherwise noted)



ADZ (x4)
1/4” x 5/8” Pan-Head Screw



ADY (x1)
#10 x 3/8” Pan-Head Screw

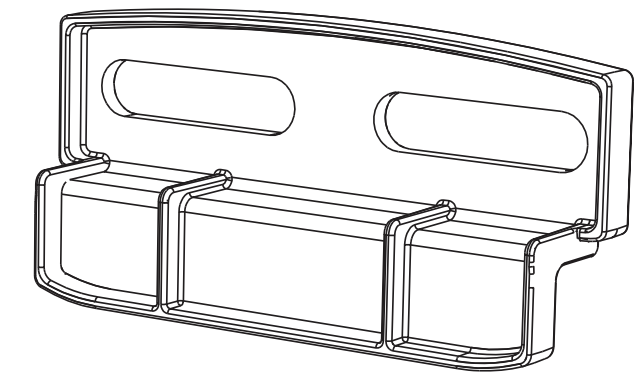

***AIS** (x2)
Window Latch

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



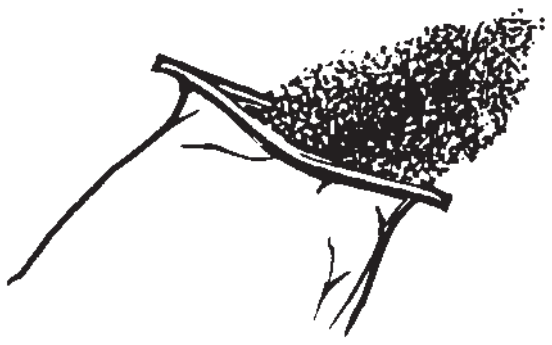

Concrete (1 cu. yd.)

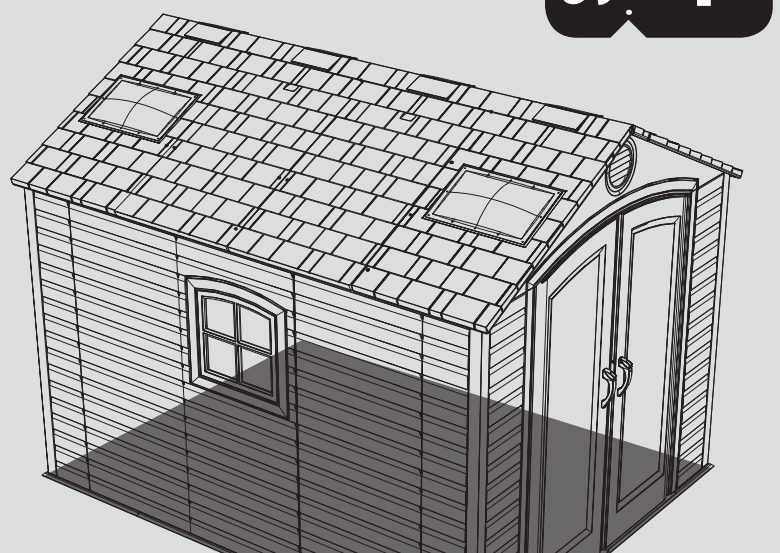

SEC 1.1

SITE PREPARATION - CONCRETE PLATFORM PREPARATION

The actual dimensions of your shed (at its widest and longest points) are 8’ x 10’. Ensure you select a site that will accommodate these measurements. The base of the shed is slightly smaller than this, so you will need to create a level surface that is at least 93 1/2” x 118 1/4”. We recommend using a level cement or patio style surface. This will provide the best long-term performance for your shed.

! *Note: Shed Extension Kits are available for this shed. Please consider possible shed expansion when planning the site for your shed. See back cover of this manual for information on ordering accessories.*

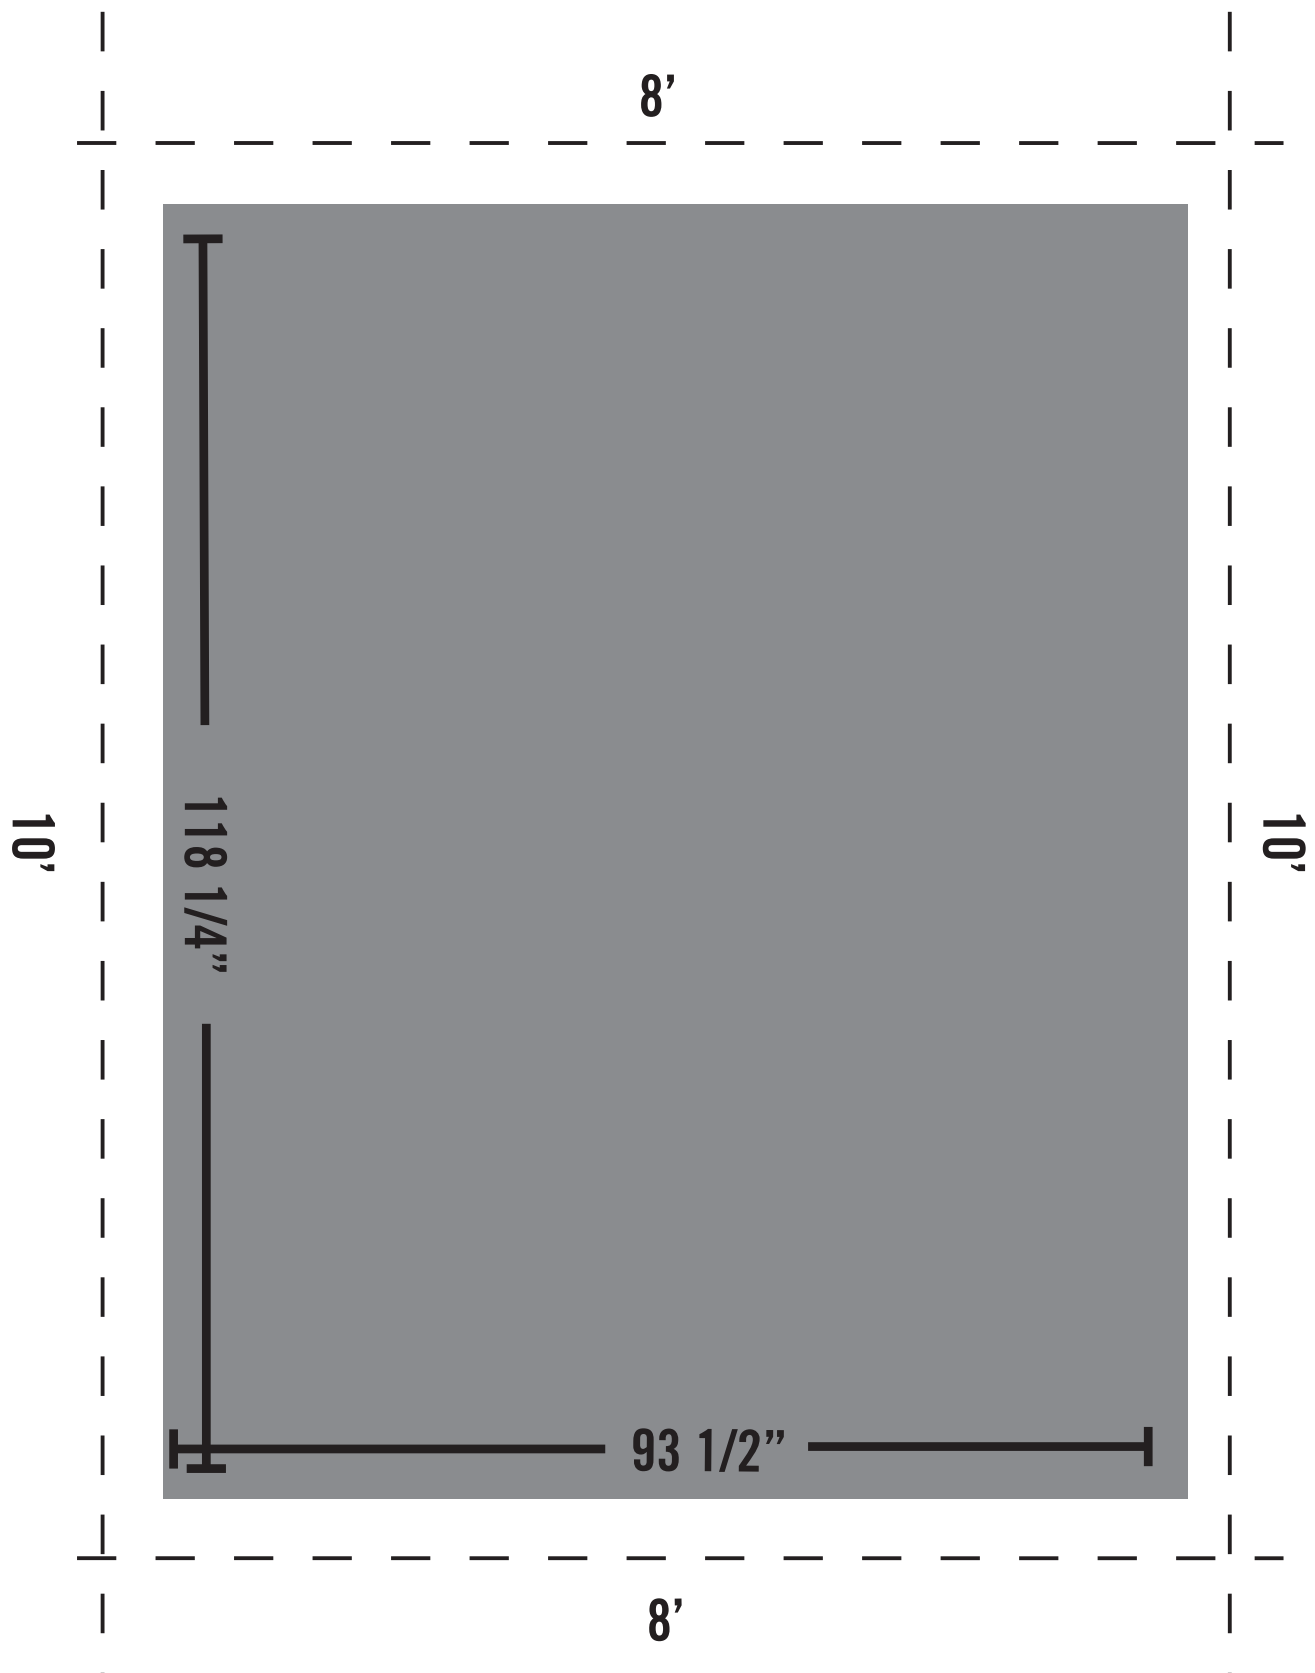

Front End

! *Note: Surface must be leveled before installation. If the surface is not properly leveled, the Outdoor Shed will not assemble or function correctly. Proper surface leveling will save you time in the long run, so please do not ignore this step.*

! *Note: Any platform or similar structure should be built above ground in order to avoid water pooling inside the Shed.*

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE





2” x 4” x 90 1/2” (x9) (Not included)



2” x 4” x 118 1/4” (x2) (Not included)

16d 3” Common Nail (x32) (Not included)

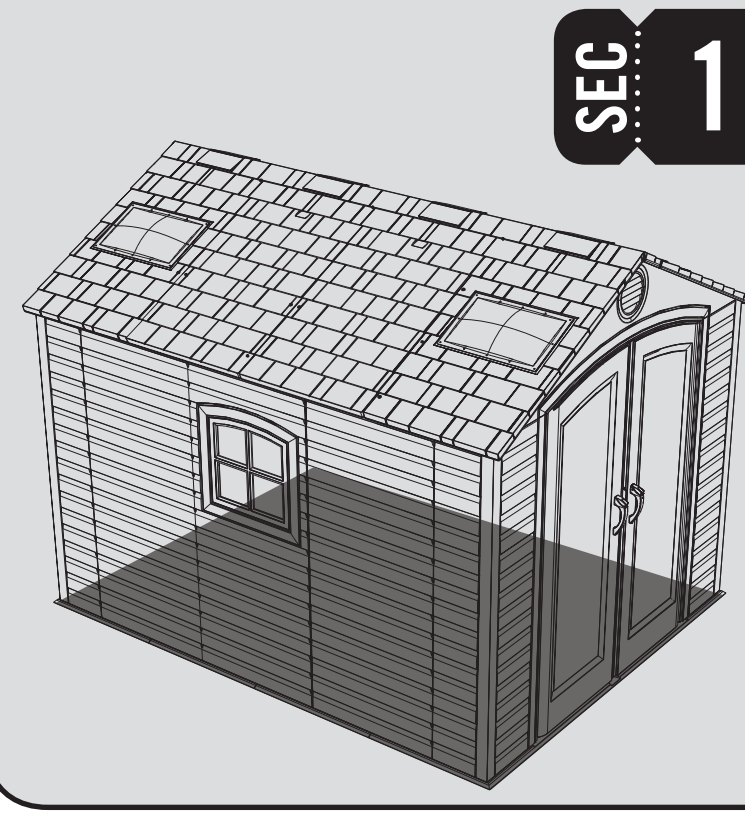

SEC 1.2 ALTERNATIVE SITE PREPARATION: OPTION 1 - WOOD PLATFORM ASSEMBLY

Ensure all lumber used is treated and approved for outdoor use. Build outside frame to 93 1/2” x 118 1/4” outside dimensions:

Note: Whenever possible, you should use the surfaces described on Page 7. When this is not possible, we recommend you use a wood platform or a filled wood frame.

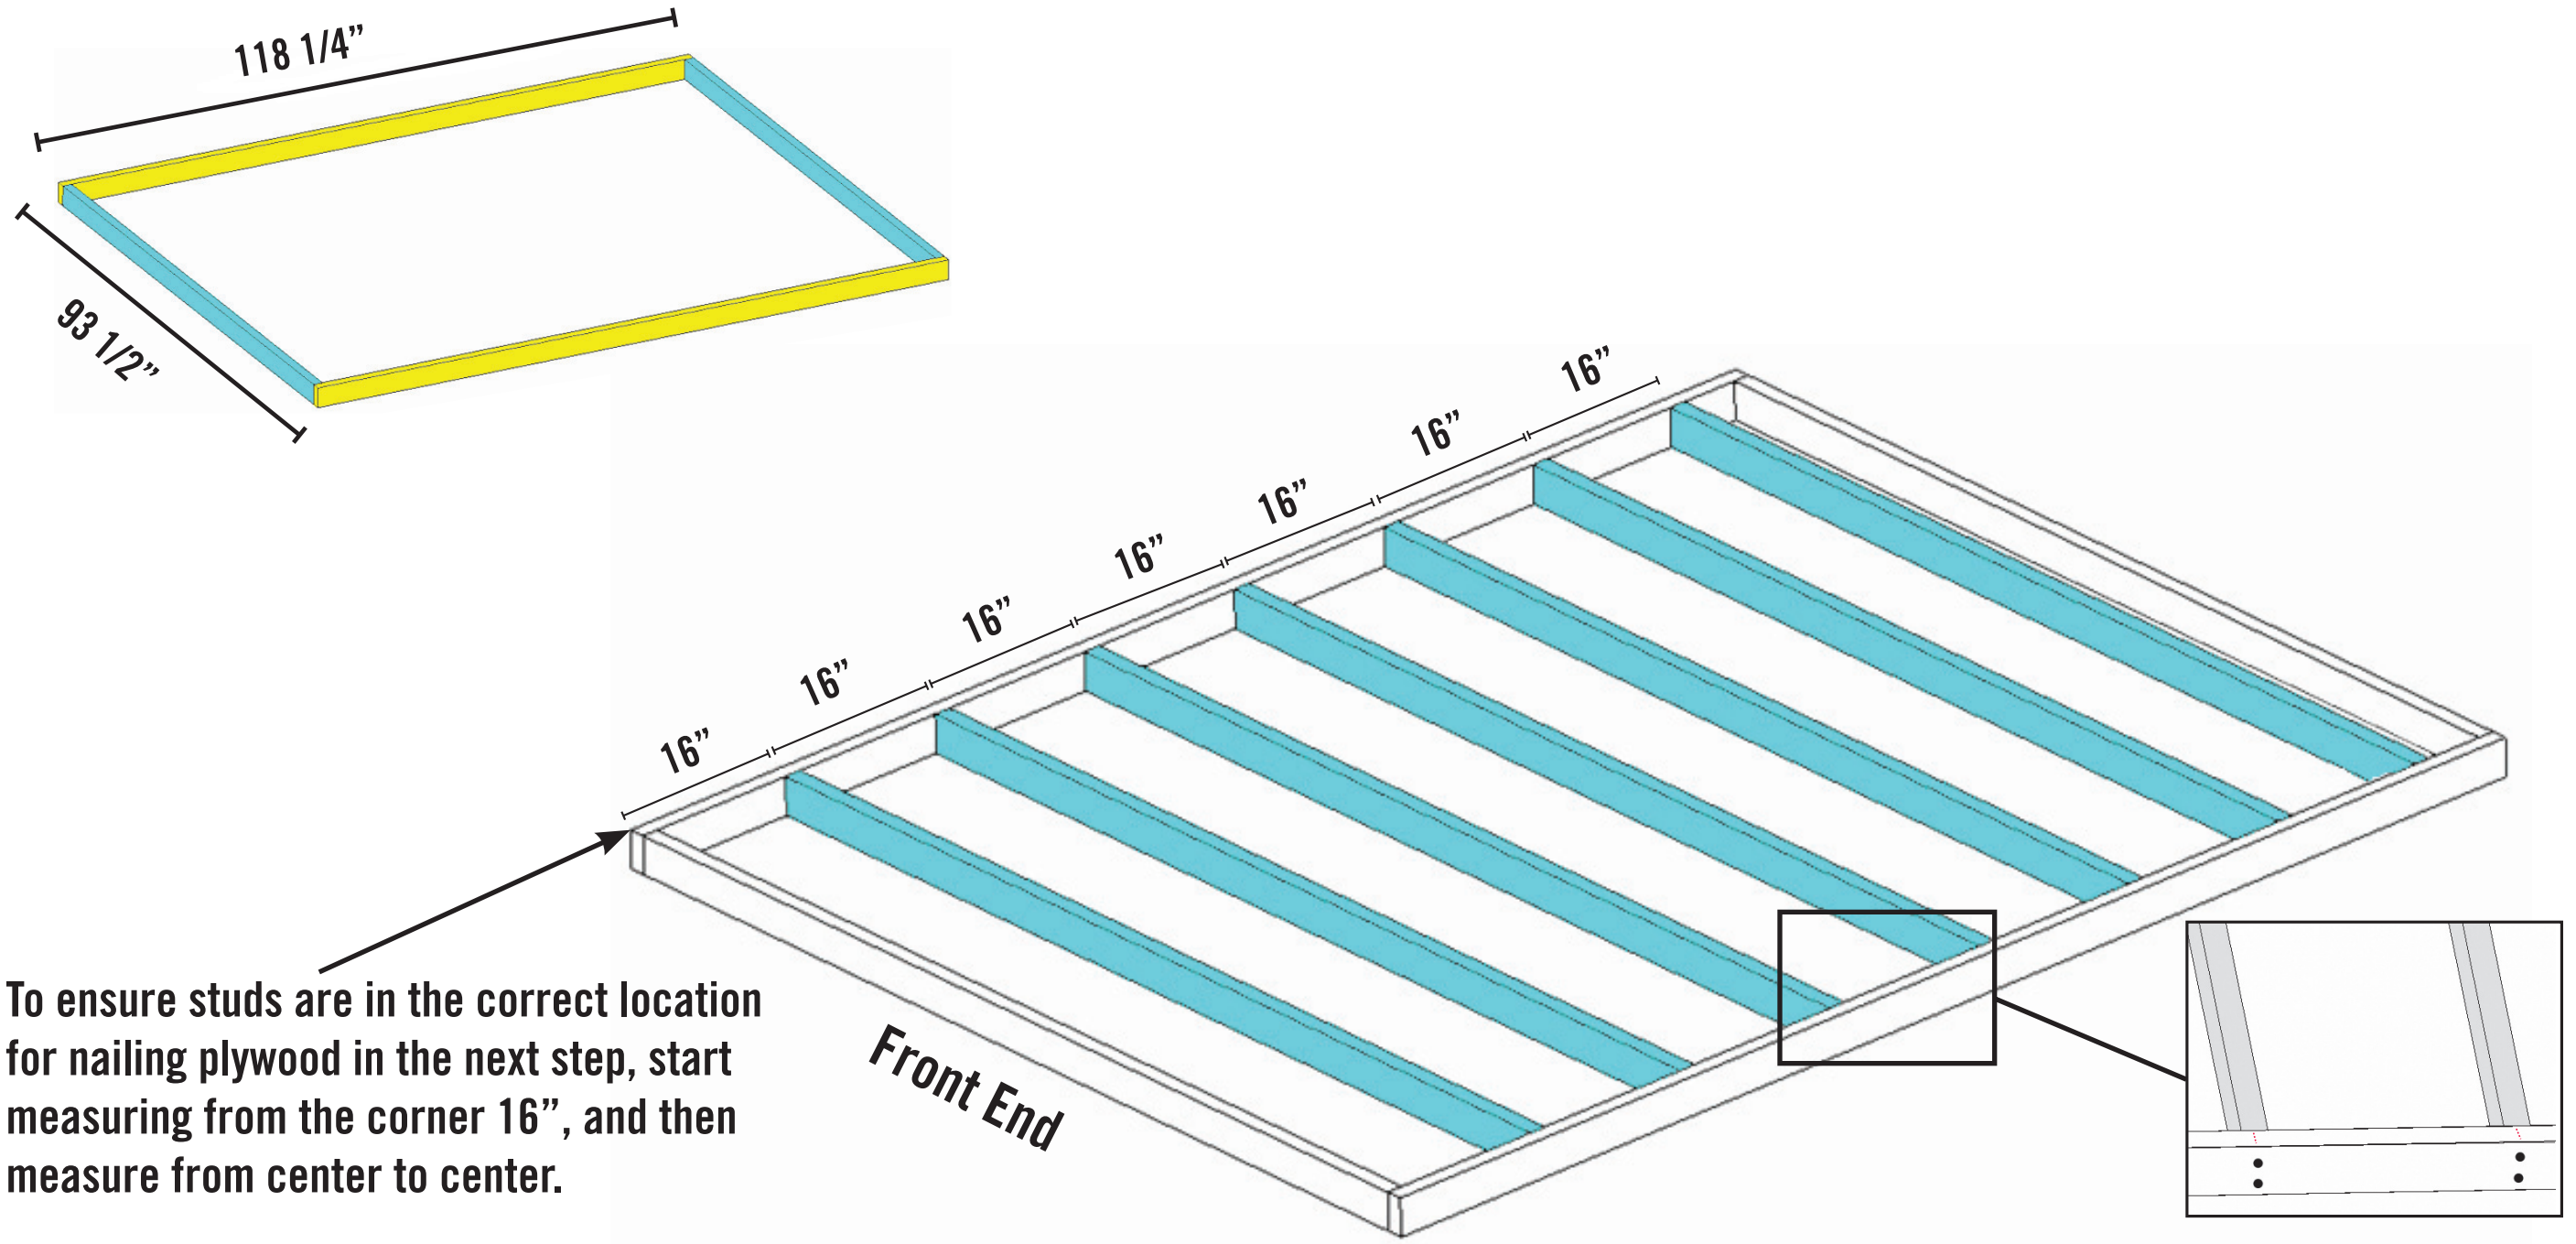

To ensure studs are in the correct location for nailing plywood in the next step, start measuring from the corner 16”, and then measure from center to center.

Place the 2” x 4” x 90 1/2” boards on the inside of the frame. Nail each board in place with the 16d nails.

Note: All lumber must be rated for outdoor use.

Note: Surface must be leveled before installation. If the surface is not properly leveled, the Outdoor Shed will not assemble or function correctly. Proper surface leveling will save you time in the long run, so please do not ignore this step.

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



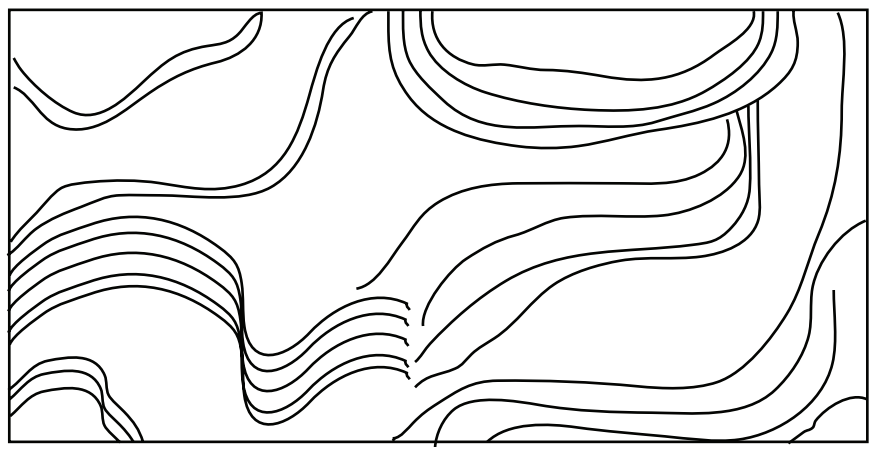

48” x 93 1/2” x 3/4” Treated Plywood (x2)
(Not included)

22 1/4” x 93 1/2” x 3/4” Treated Plywood (x1)
(Not included)



8d 1 1/2” Common Nail (x36)
(Not included)

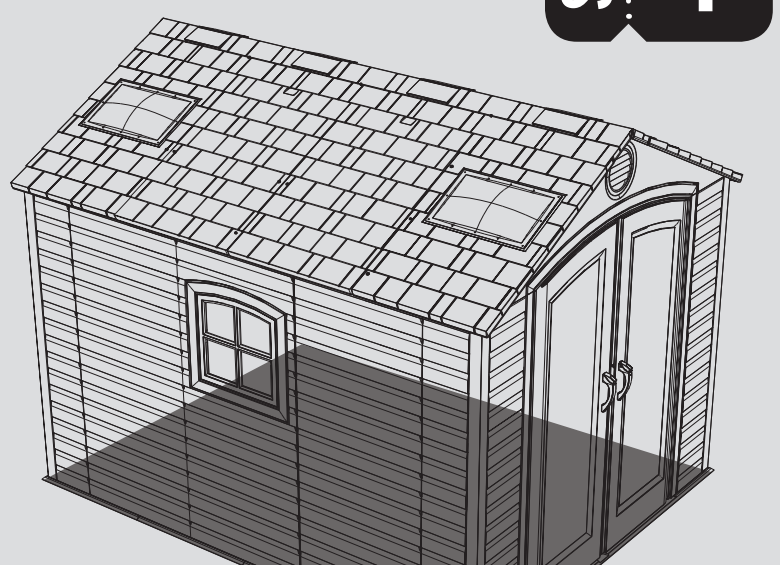

SEC 1.3

ALTERNATIVE SITE PREPARATION: OPTION 1 - WOOD PLATFORM ASSEMBLY (CONT)

Square up the frame by measuring from corner to corner. Measurement A should equal Measurement B.

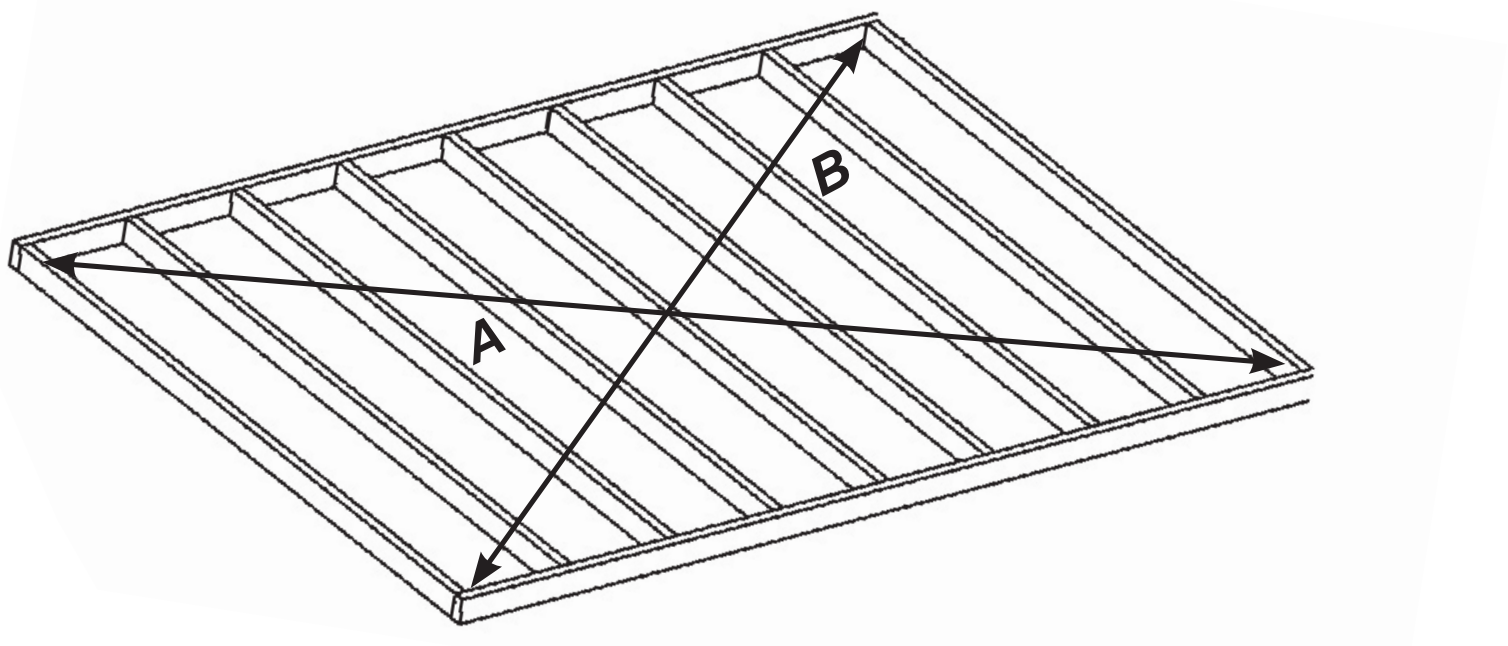

Note: All lumber must be rated for outdoor use.

SEC 1.4

Cut Plywood into sizes called for on previous page. Arrange the Plywood according to the diagram and nail into place with 8d x 1 1/2” nails. Place platform in the desired location. If platform does not rest level on the ground, build up low points with loose dirt until platform is stable. Drill three evenly spaced 1/2” drain holes in plywood between each 2” x 4” joist.

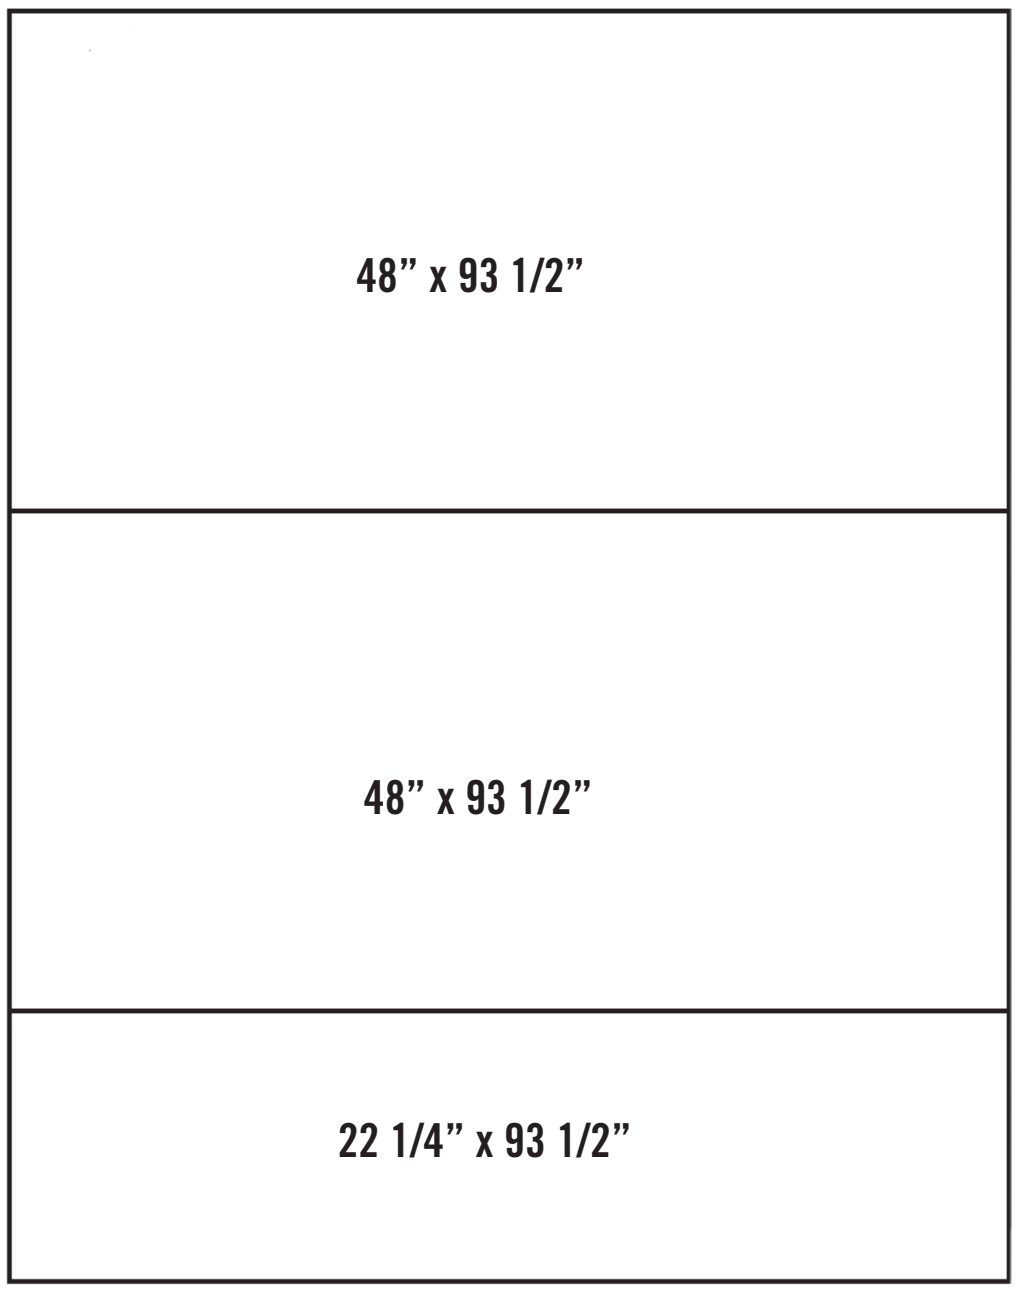

Front End

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



2” x 4” x 120” (x2) (Not included)





2” x 6” x 89” (x2) (Not included)



8d 1 1/2” Common Nail (x16)
(Not included)

Pea Gravel (9.8 Cubic Feet)
(Not included)



L-Bracket (x4)
(Not included)

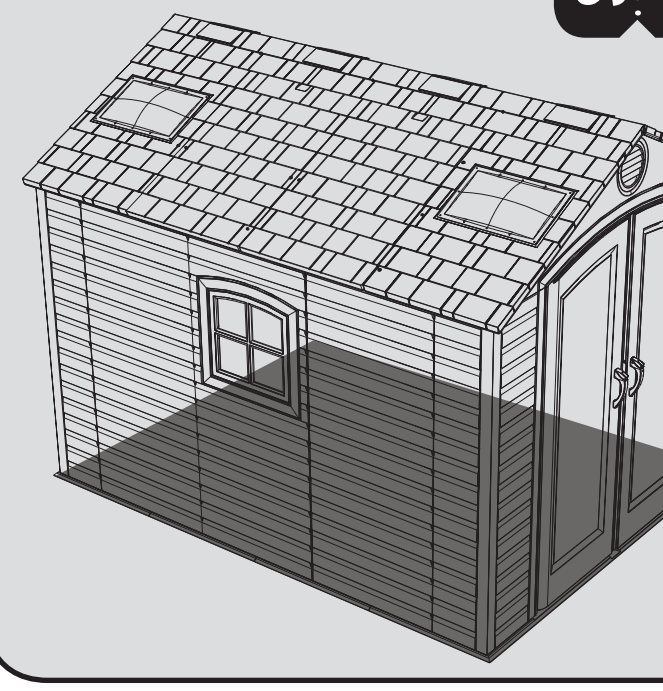

SEC 1.5

ALTERNATIVE SITE PREPARATION: OPTION 2 - FILLED WOOD FRAME ASSEMBLY

Cut outside frame to 8’ x 10’ outside dimensions. Lay boards flat so widest parts face up. Ensure frame is level. Square up the frame by measuring from corner to corner. Measurement A should equal Measurement B. Nail an L-Bracket on each corner of the frame with 8d nails. Place platform in the desired location. If platform does not rest level on the ground, build up low points with loose dirt or “Pea” gravel, until platform is stable.

! *Note: Whenever possible you should use the surfaces described on Page 7.*

! *Note: All lumber must be rated for outdoor use.*

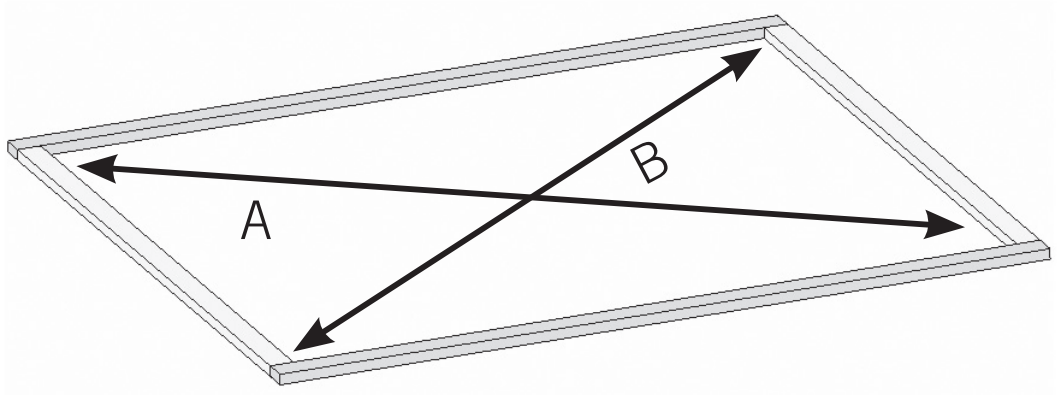

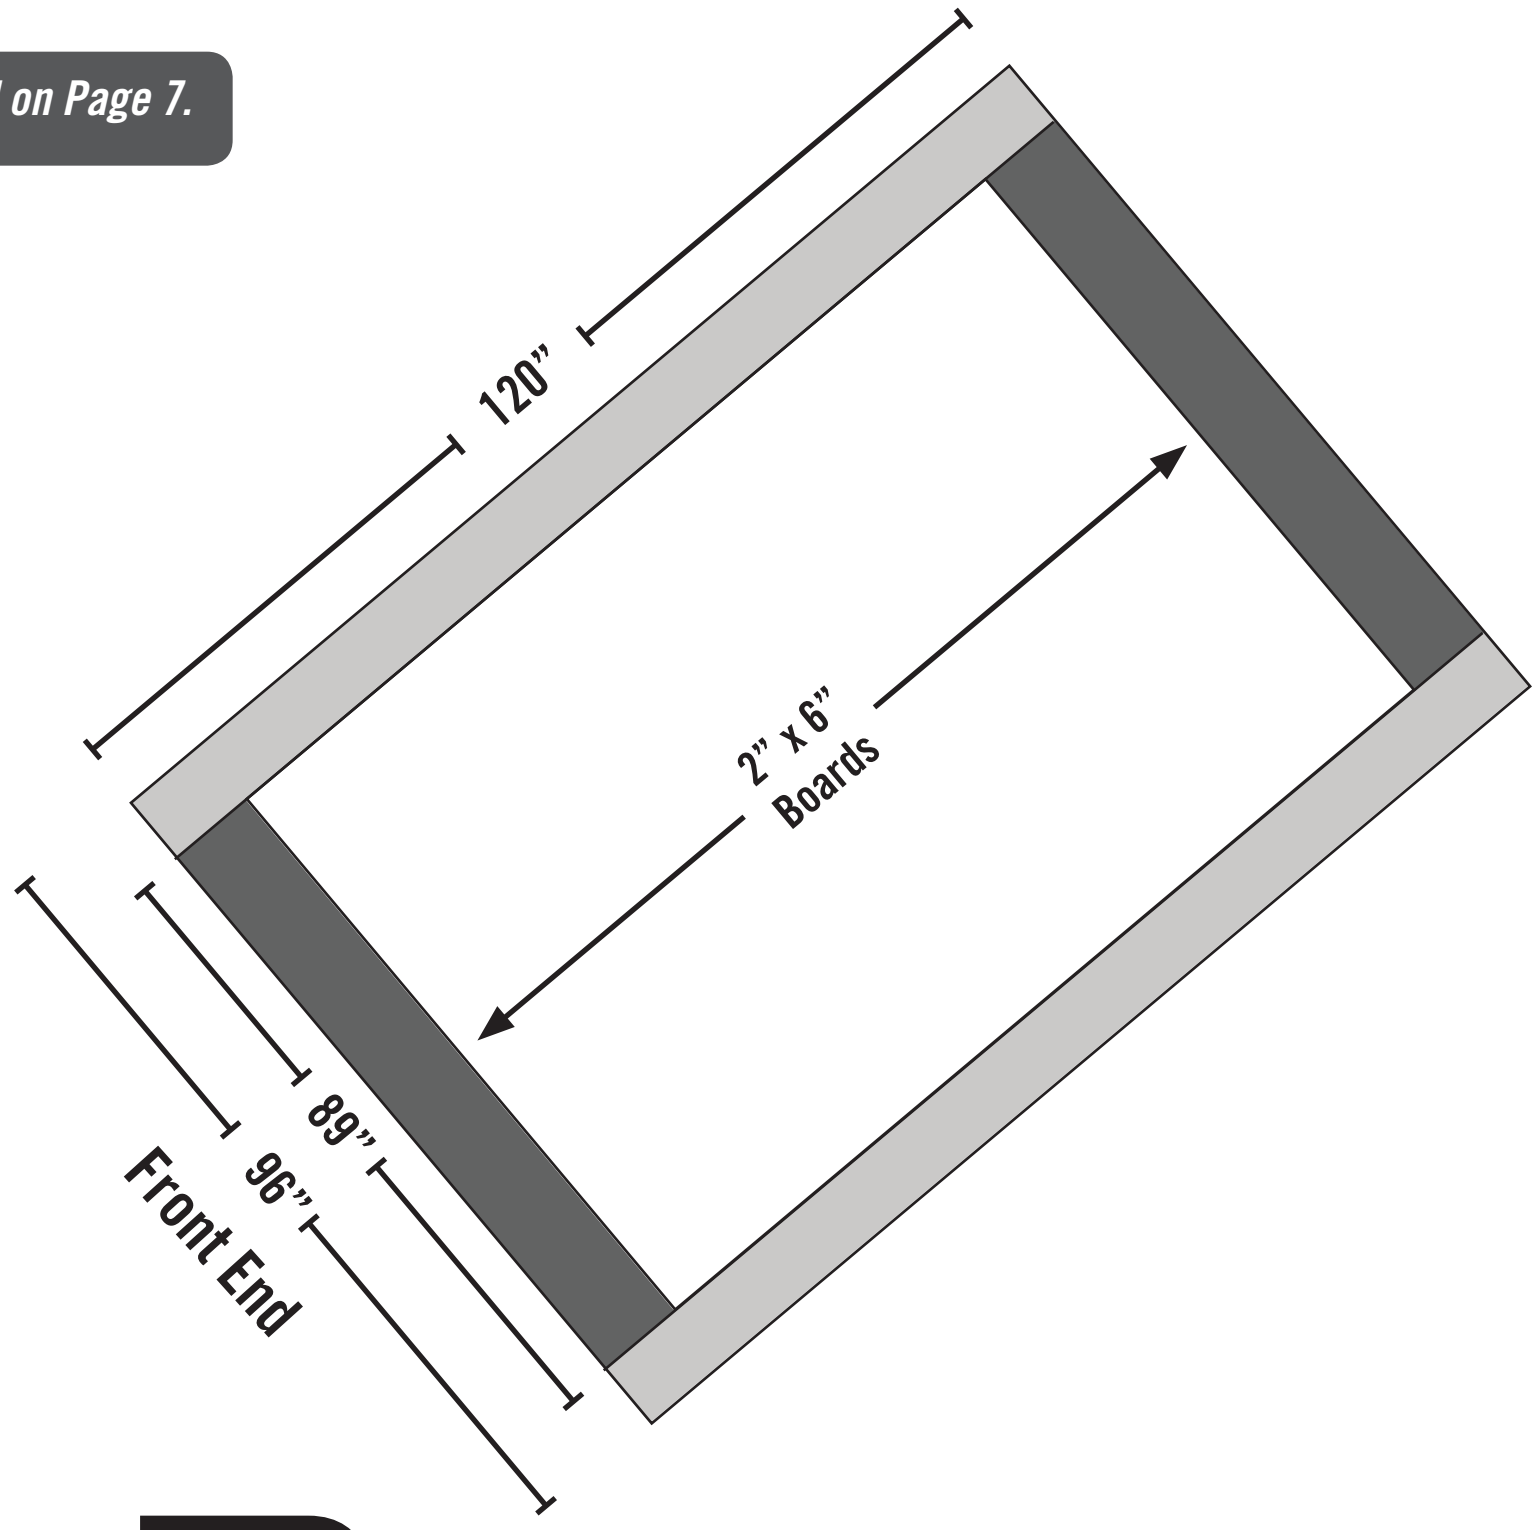

SEC 1.6

Once all boards are level and do not wobble, pack “Pea” gravel around the outside of the frame, and slope away from frame.

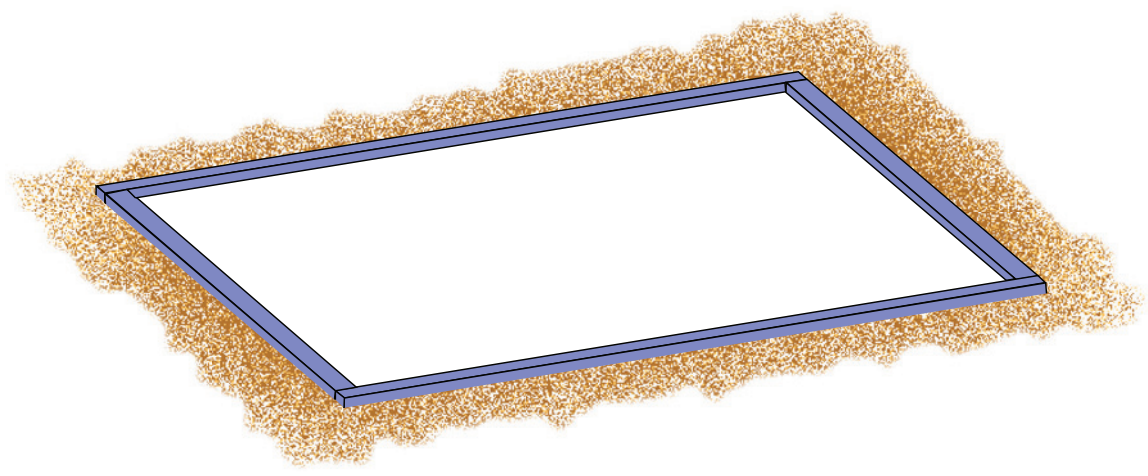

SEC 1.7

Now fill the inside of the frame with “Pea” gravel. Use a leveling board to scrape off extra fill material and to level the surface.

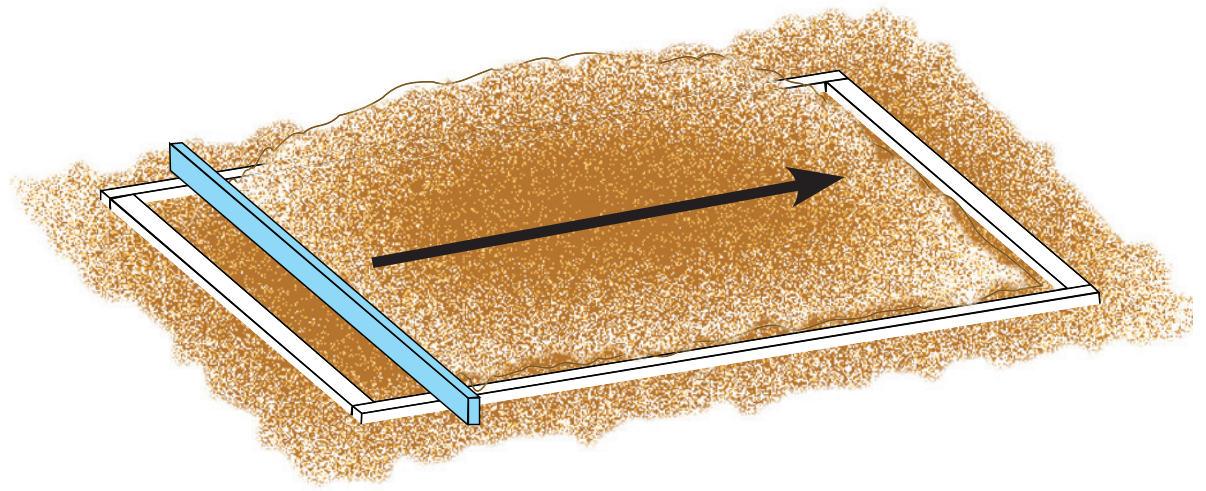



2” x 4” x 8’ Leveling Board (x1)

FLOOR ASSEMBLY

HARDWARE REQUIRED

HARDWARE BAG REQUIRED: BQH

Hardware shown at actual size



BQC (x20)
#8 x 1/2” Pan-Head Screw
(Only 12 used)

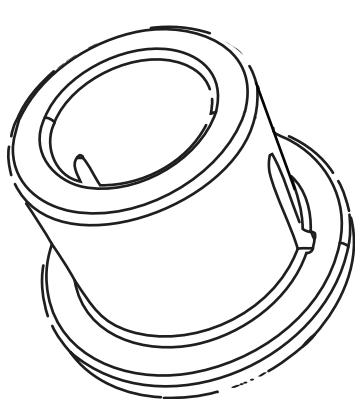

AHO (x2)
Door Hinge Bushing



ADC (x1)
#2 Phillips Bit

PLASTIC PARTS REQUIRED

LOCATED IN BOX 1

Parts shown at 4% of actual size

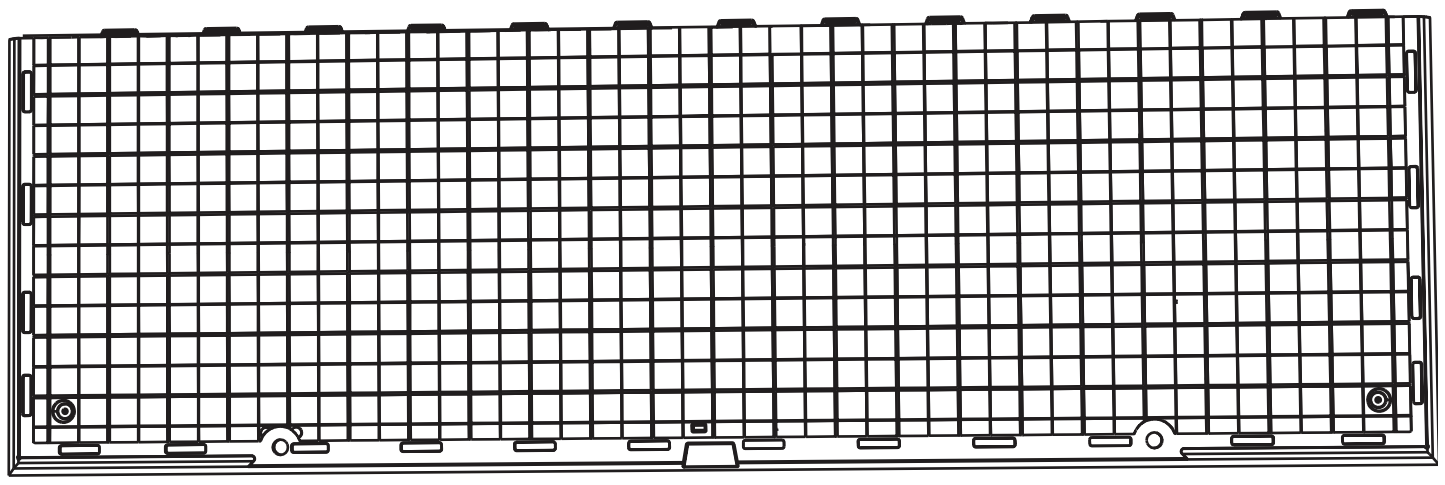

AGR (x2)
Outer Floor Panel

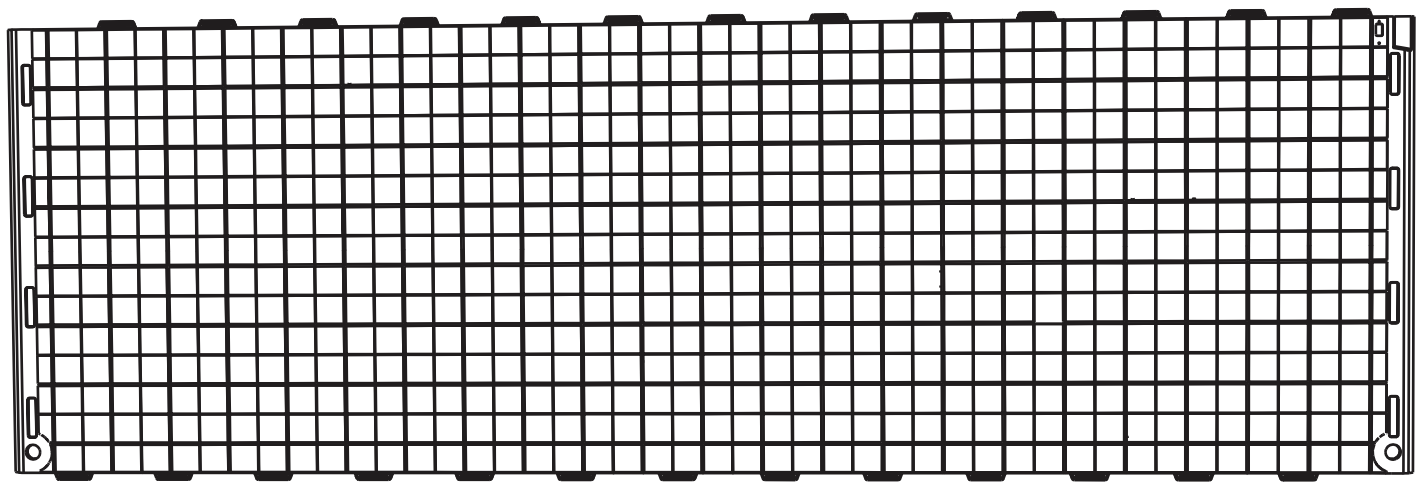

AFX (x2)
Center Floor Panel

TOOLS REQUIRED

HARDWARE BAG REQUIRED: BQH



Phillips Screwdriver



Safety Glasses



ADC (x1)
#2 Phillips Bit

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



NO HARDWARE REQUIRED FOR THIS STEP

SEC 2

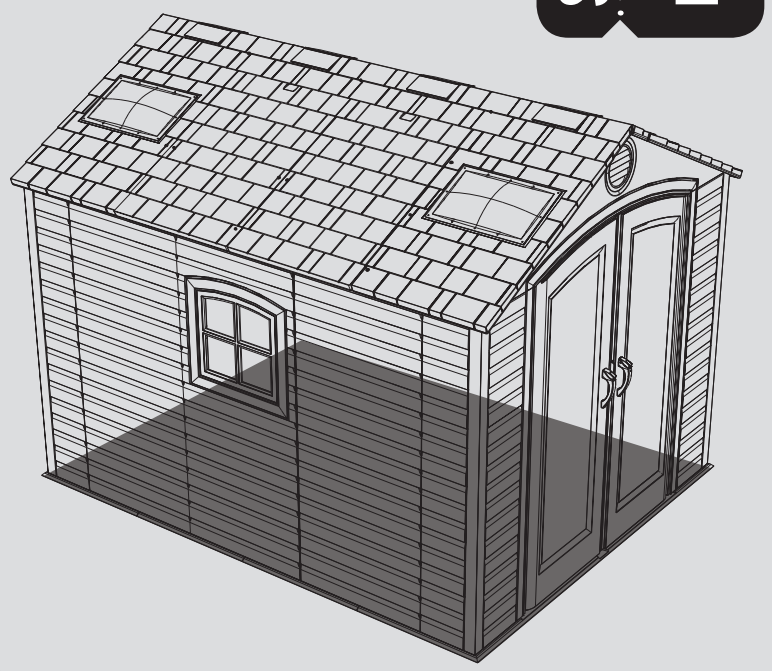

SEC 2.1

FLOOR ASSEMBLY

Lay an **Outer Floor Panel (AGR)** flat on the ground. Hold a **Center Floor Panel (AFX)** at an angle as shown and fit tabs into slots. Lay Center Floor Panel flat.

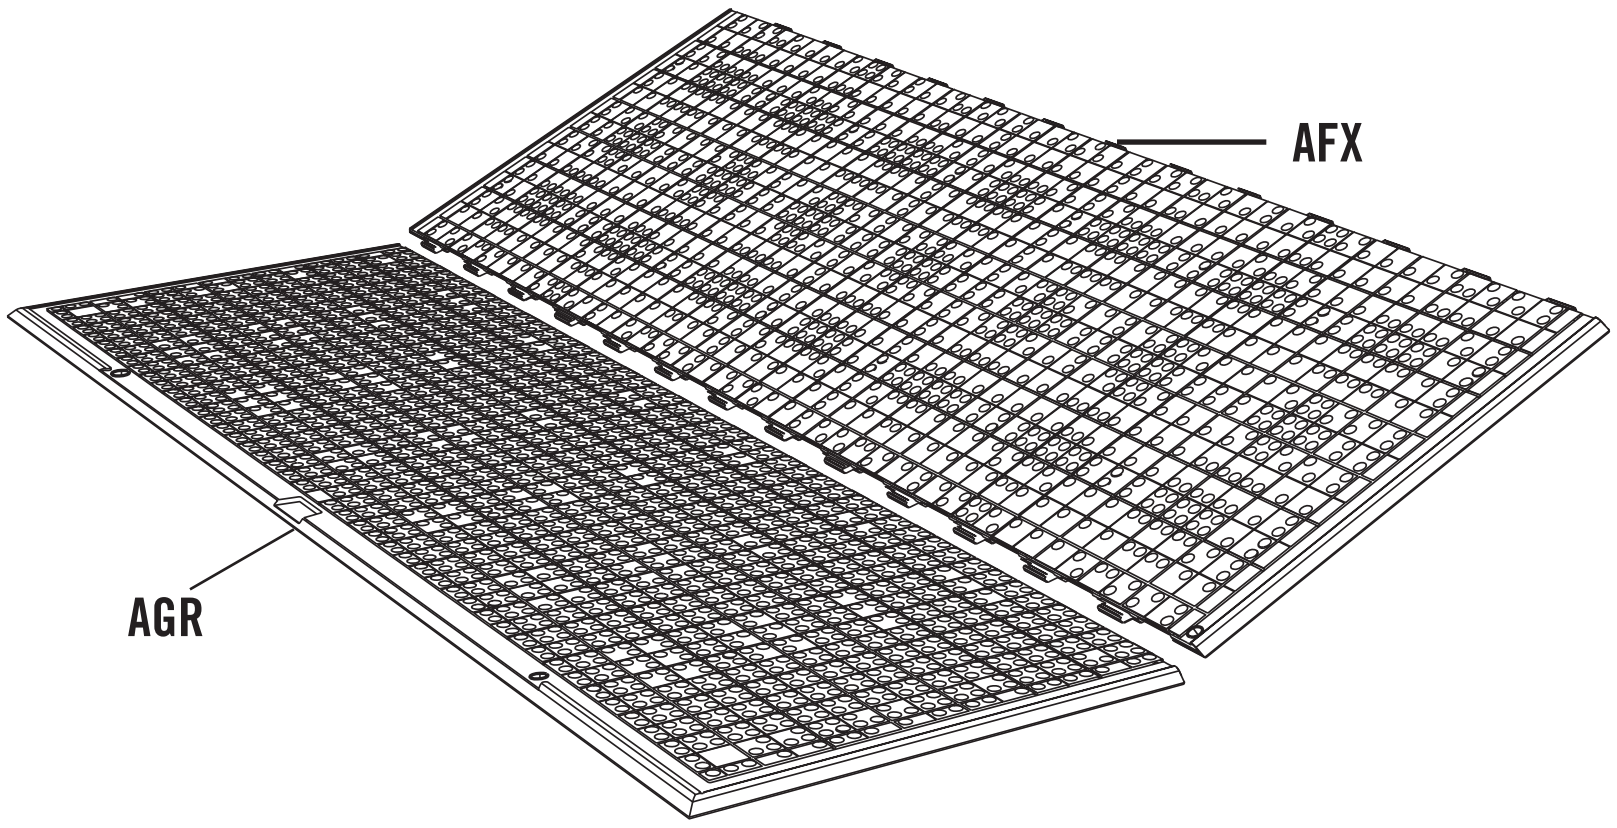

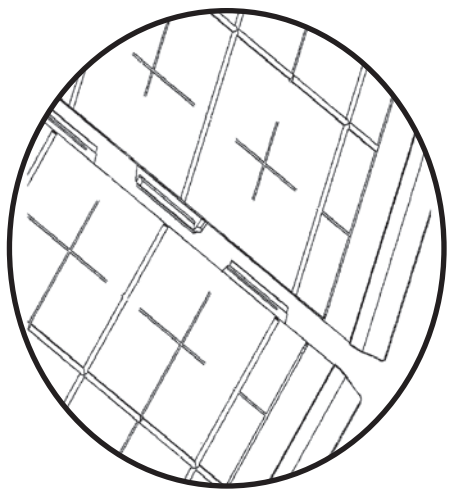

SEC 2.2

Hold the second **Center Floor Panel (AFX)** at an angle as shown and fit tabs into slots. Lay Center Floor Panel flat.

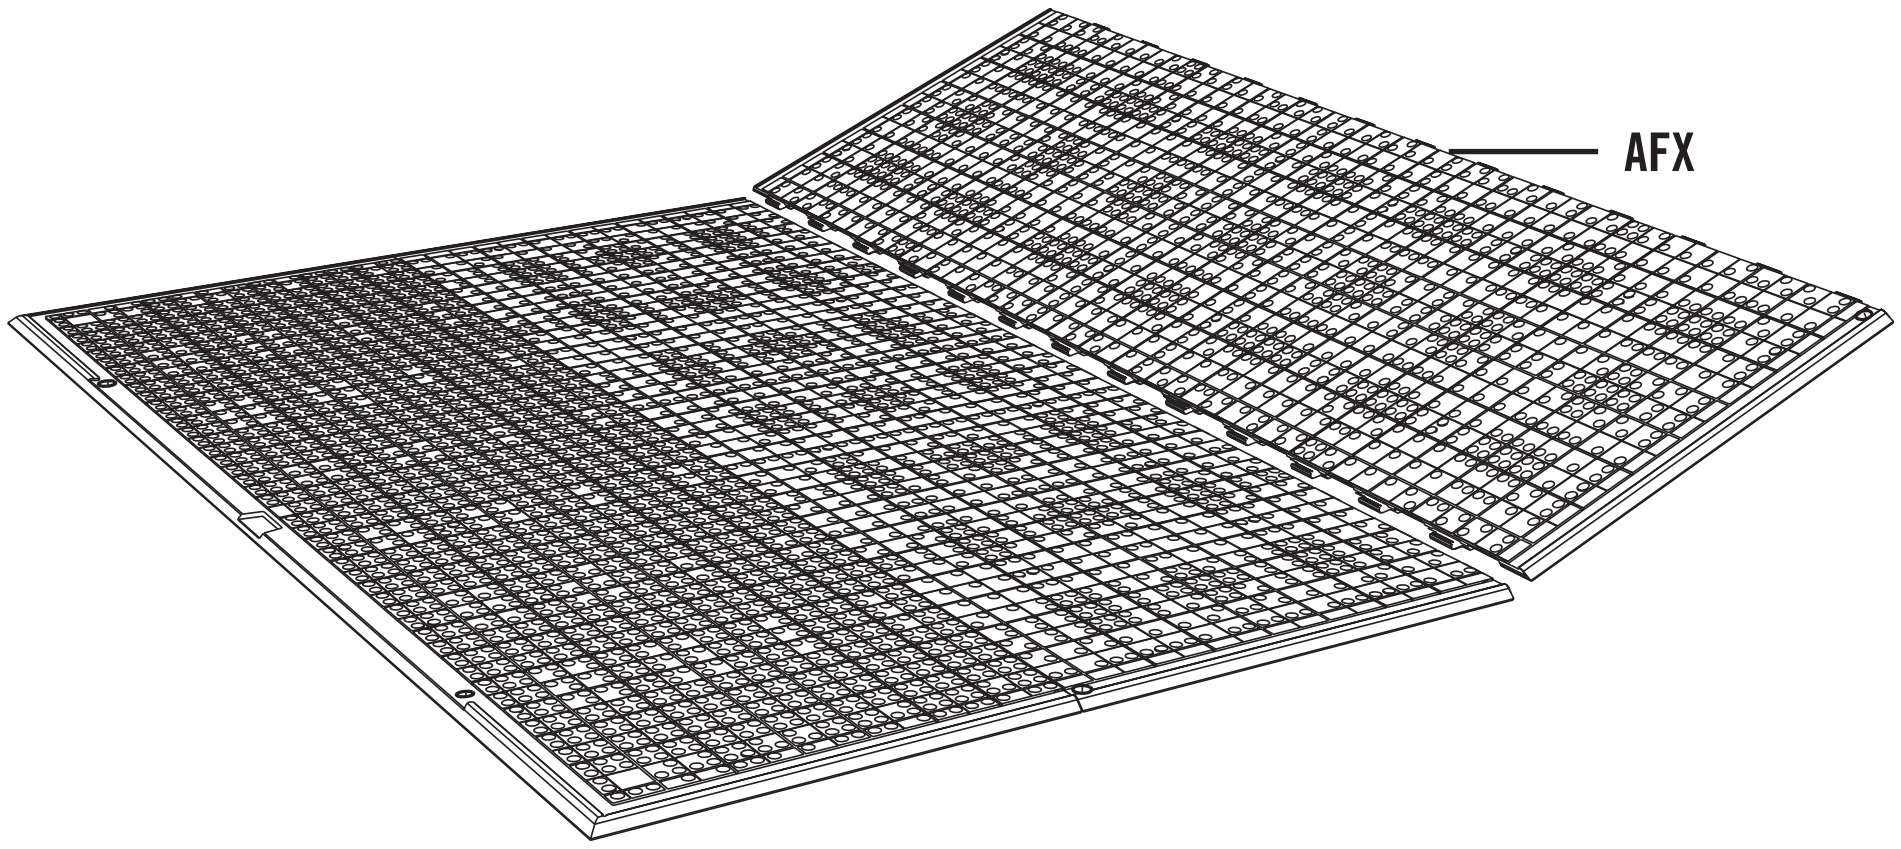

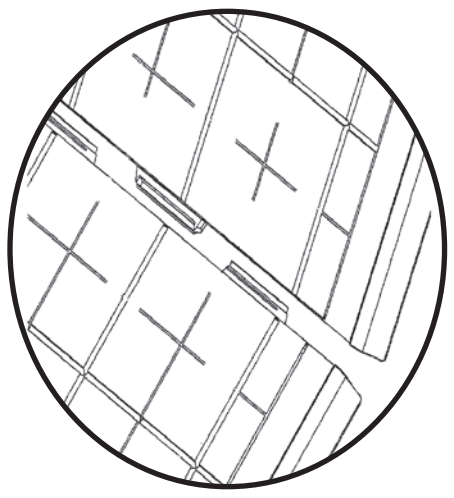

⚠ CAUTION

Sharp objects may damage your floor. If resting sharp, heavy objects on your shed floor, place a block of wood between the sharp object and floor.

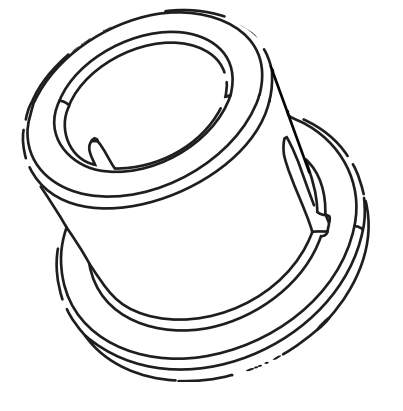

AHO (x2)

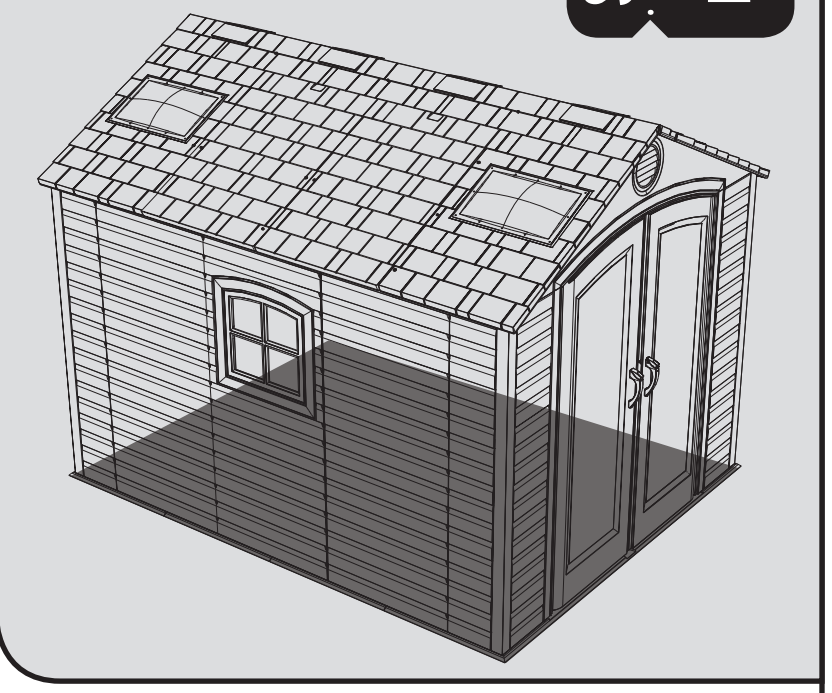

SEC 2.3

Finally, connect the last **Outer Floor Panel (AGR)** to the second Center Floor Panel and lay flat.

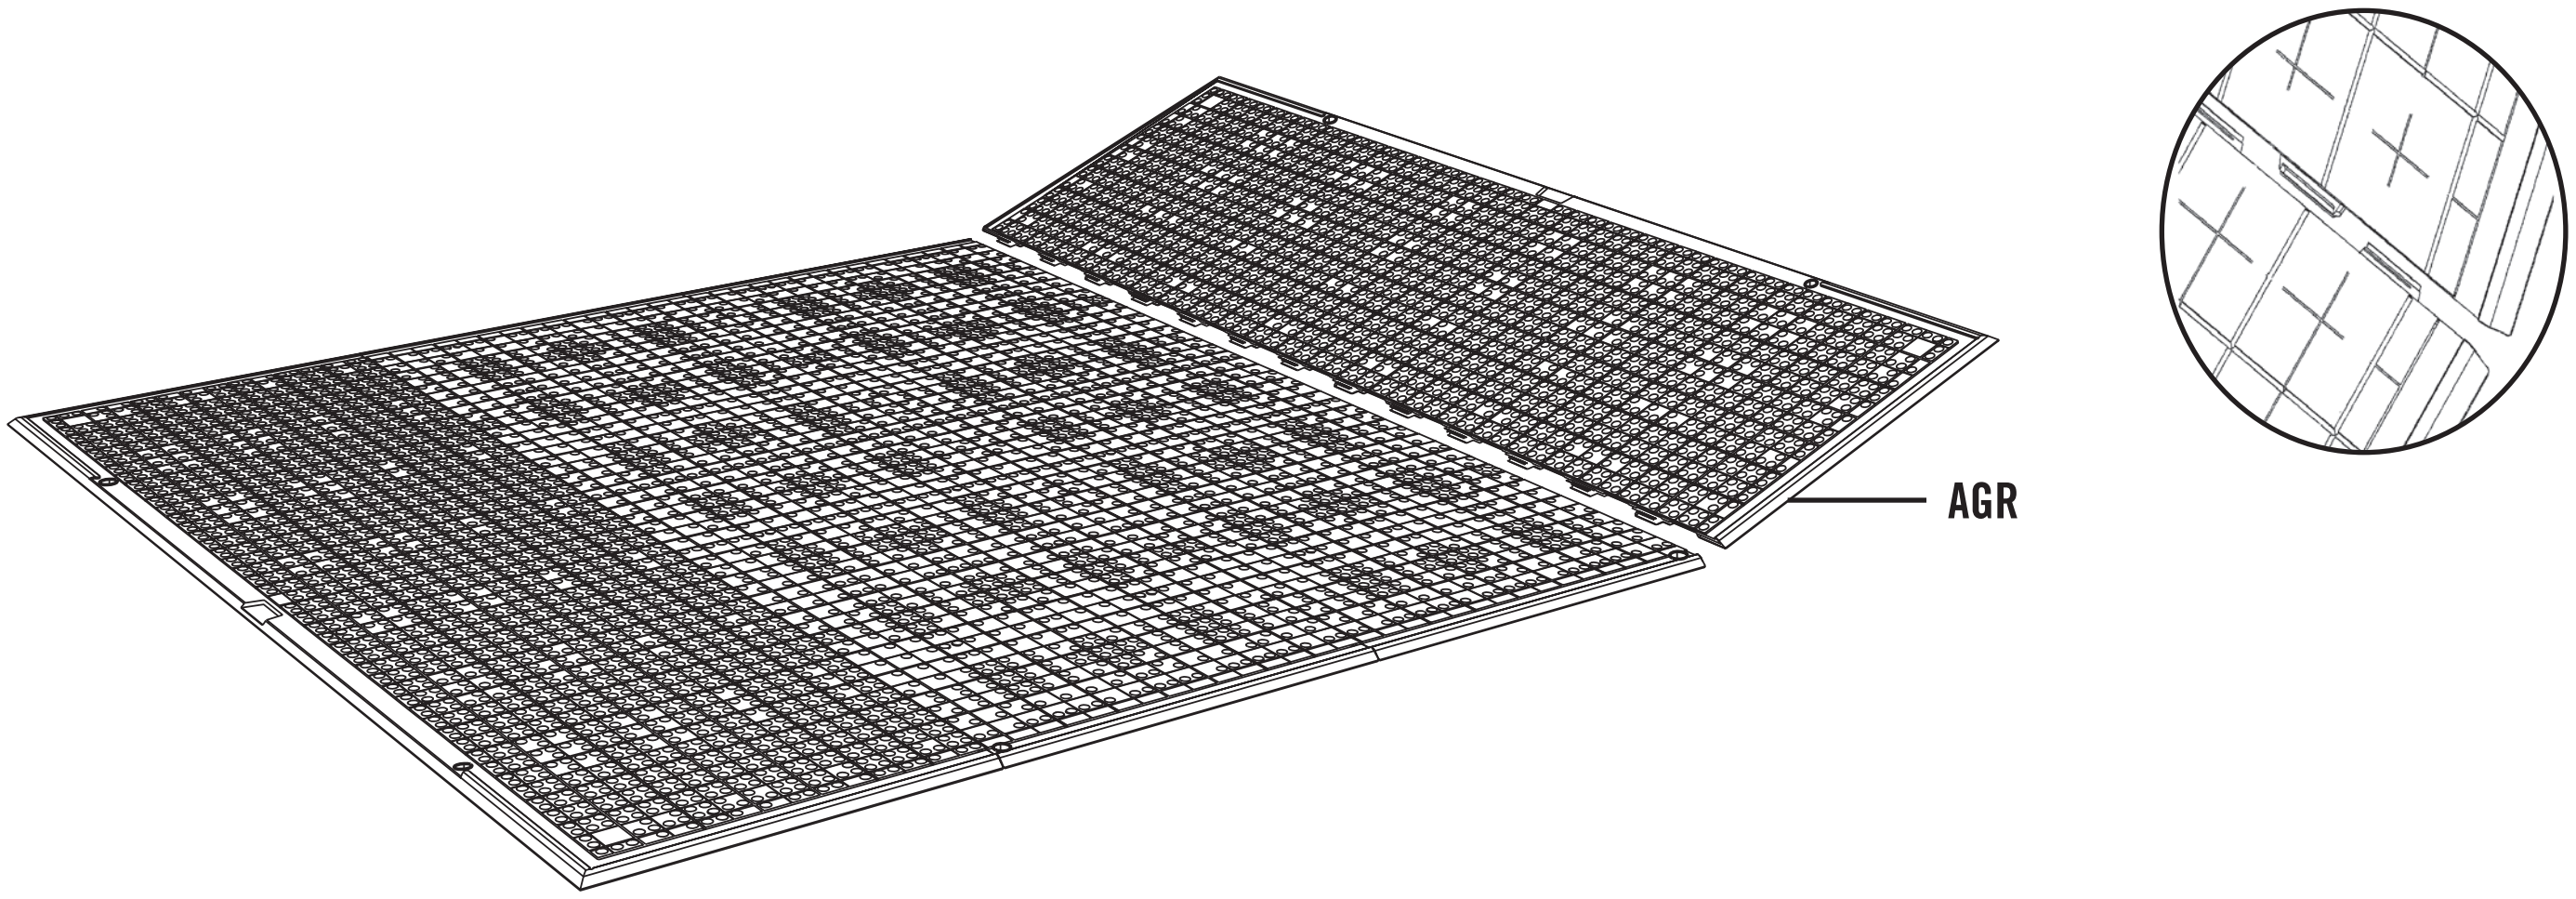

SEC 2.4

Decide which end will be the front of your shed. Lift the Floor Panels up enough to slide the two (2) **Door Hinge Bushings (AHO)** under and up through the holes in the Floor Panels as shown.

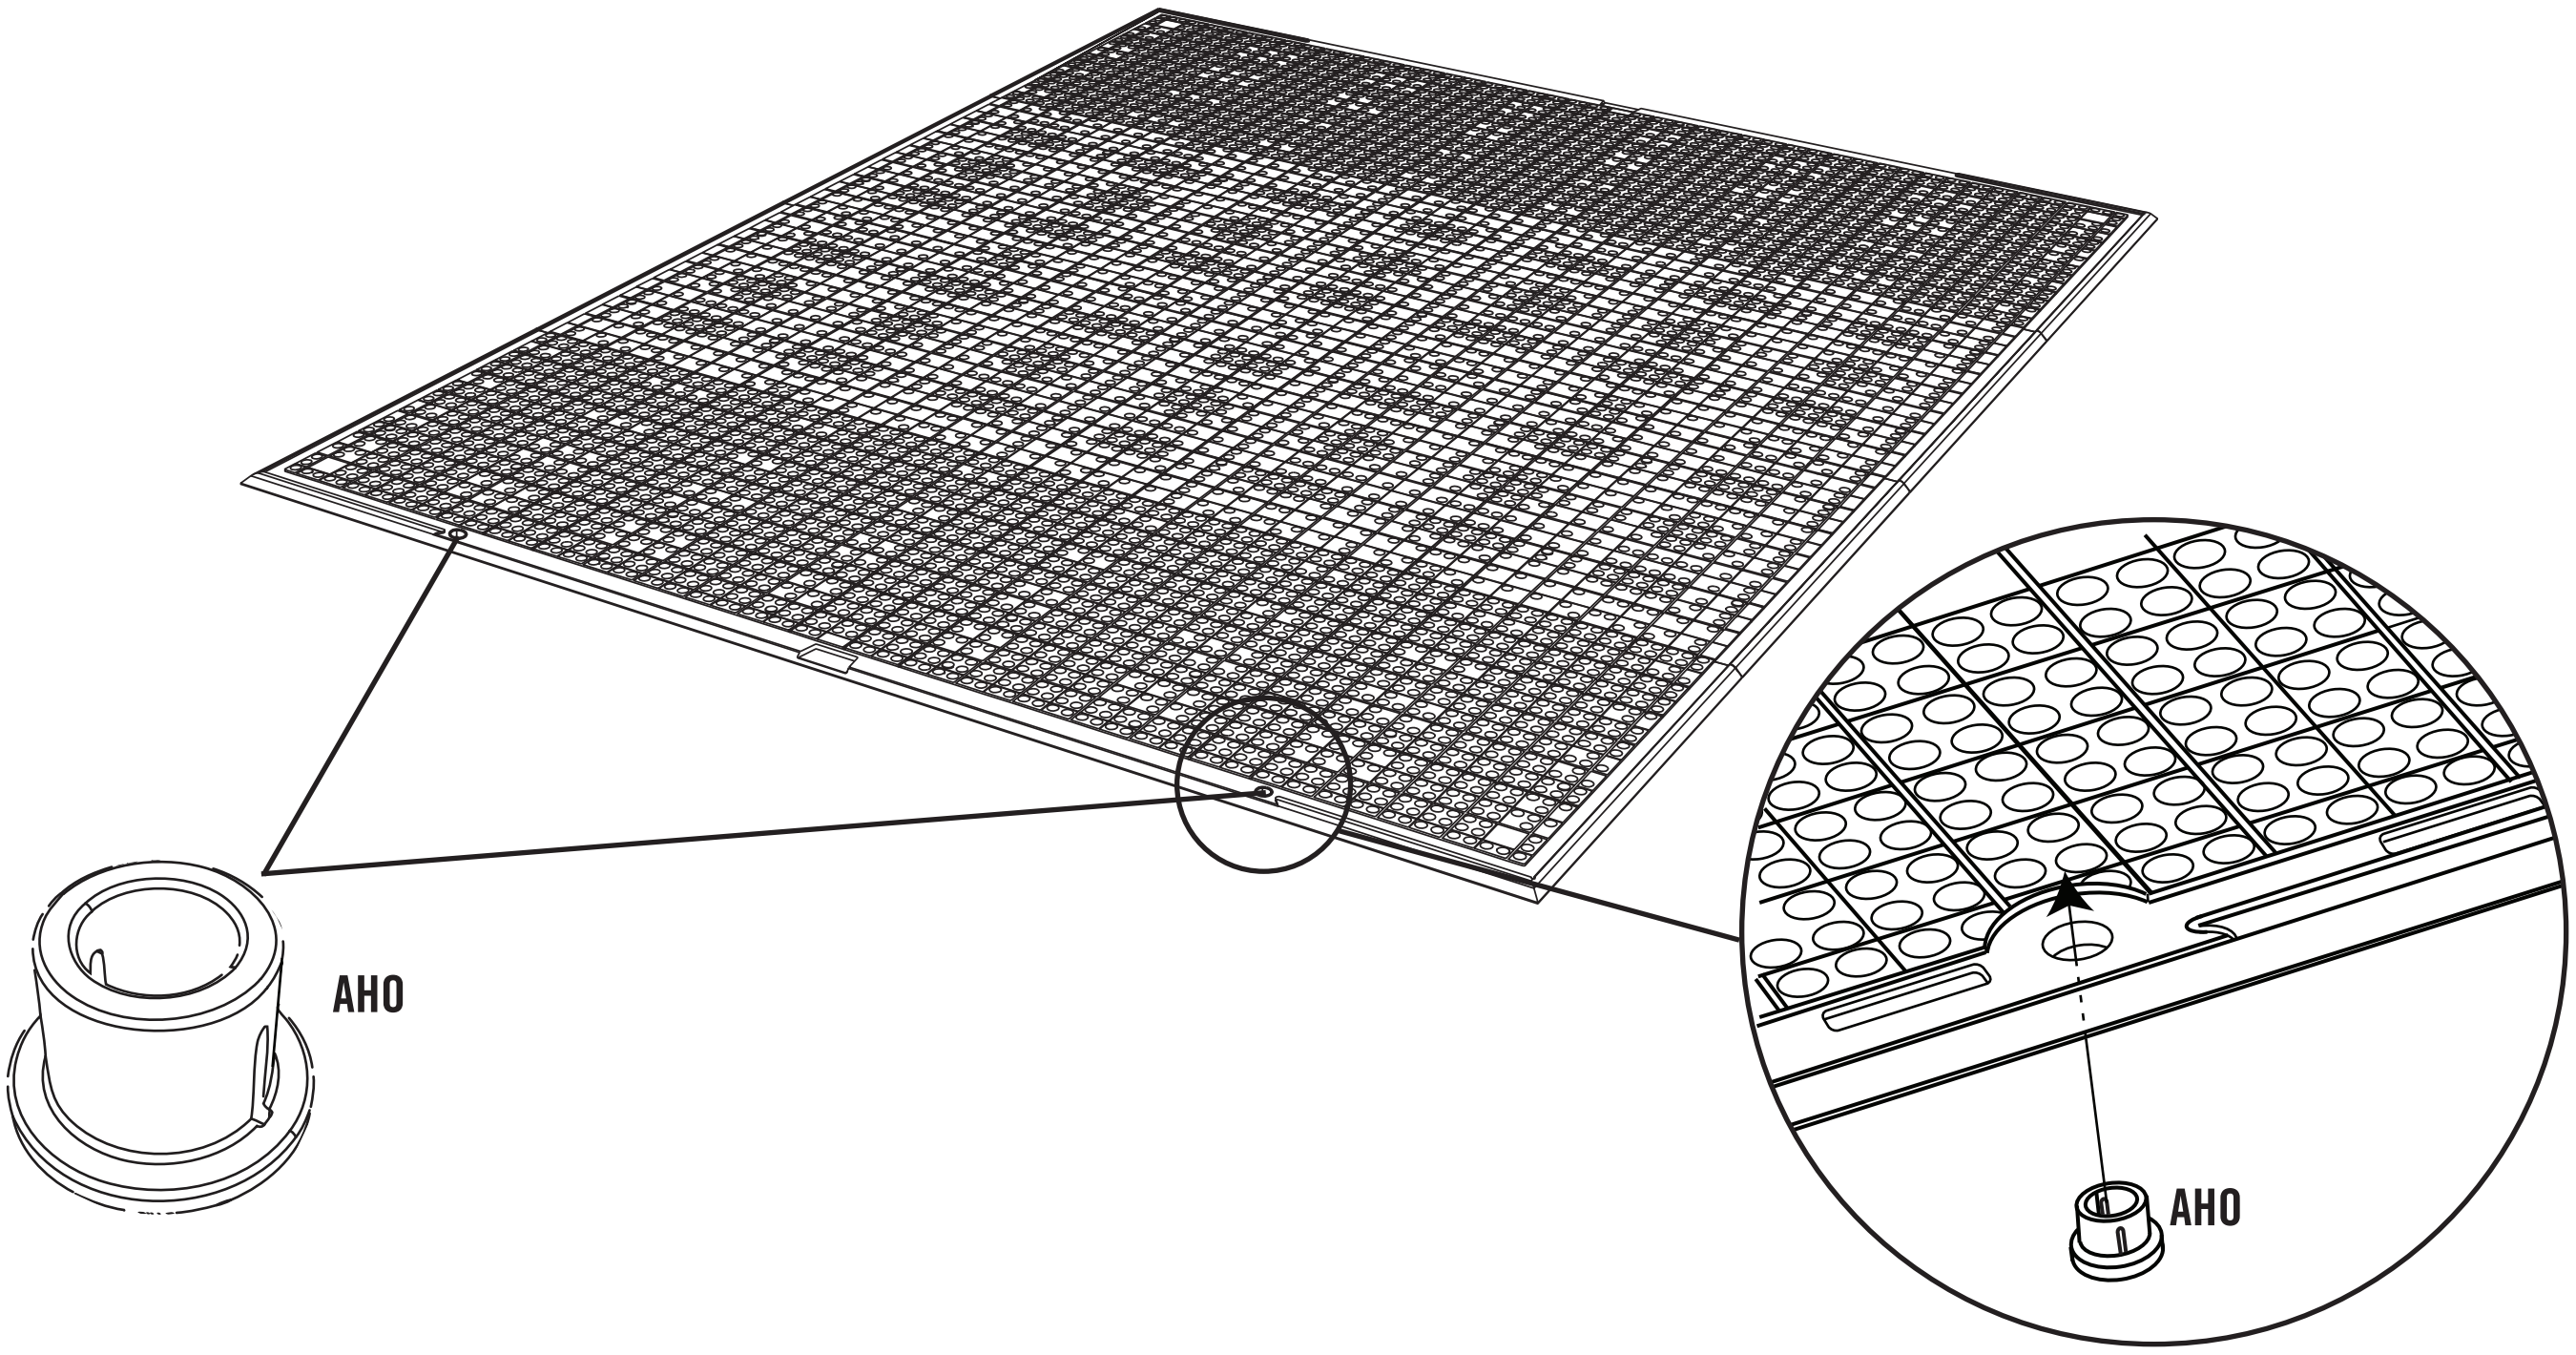

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE





BQC (x20)
(Only 12 used)

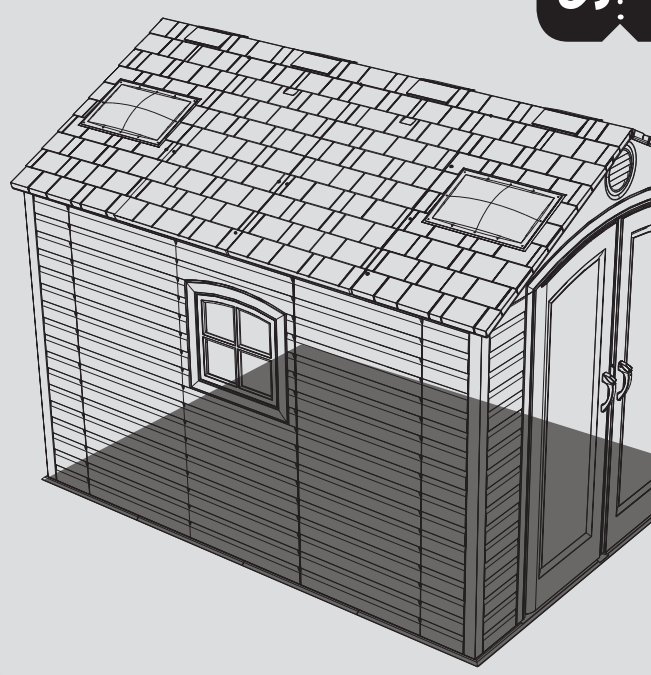

SEC 2.5

Face the seam of the two adjacent Floor Panels. Insert two (2) **#8 x 1/2" Pan-Head Screws (BQC)** near the seam of a Floor Panel and down into the tab of the adjacent Floor Panel at the locations shown. **Repeat this step for both sides of each seam as shown.**

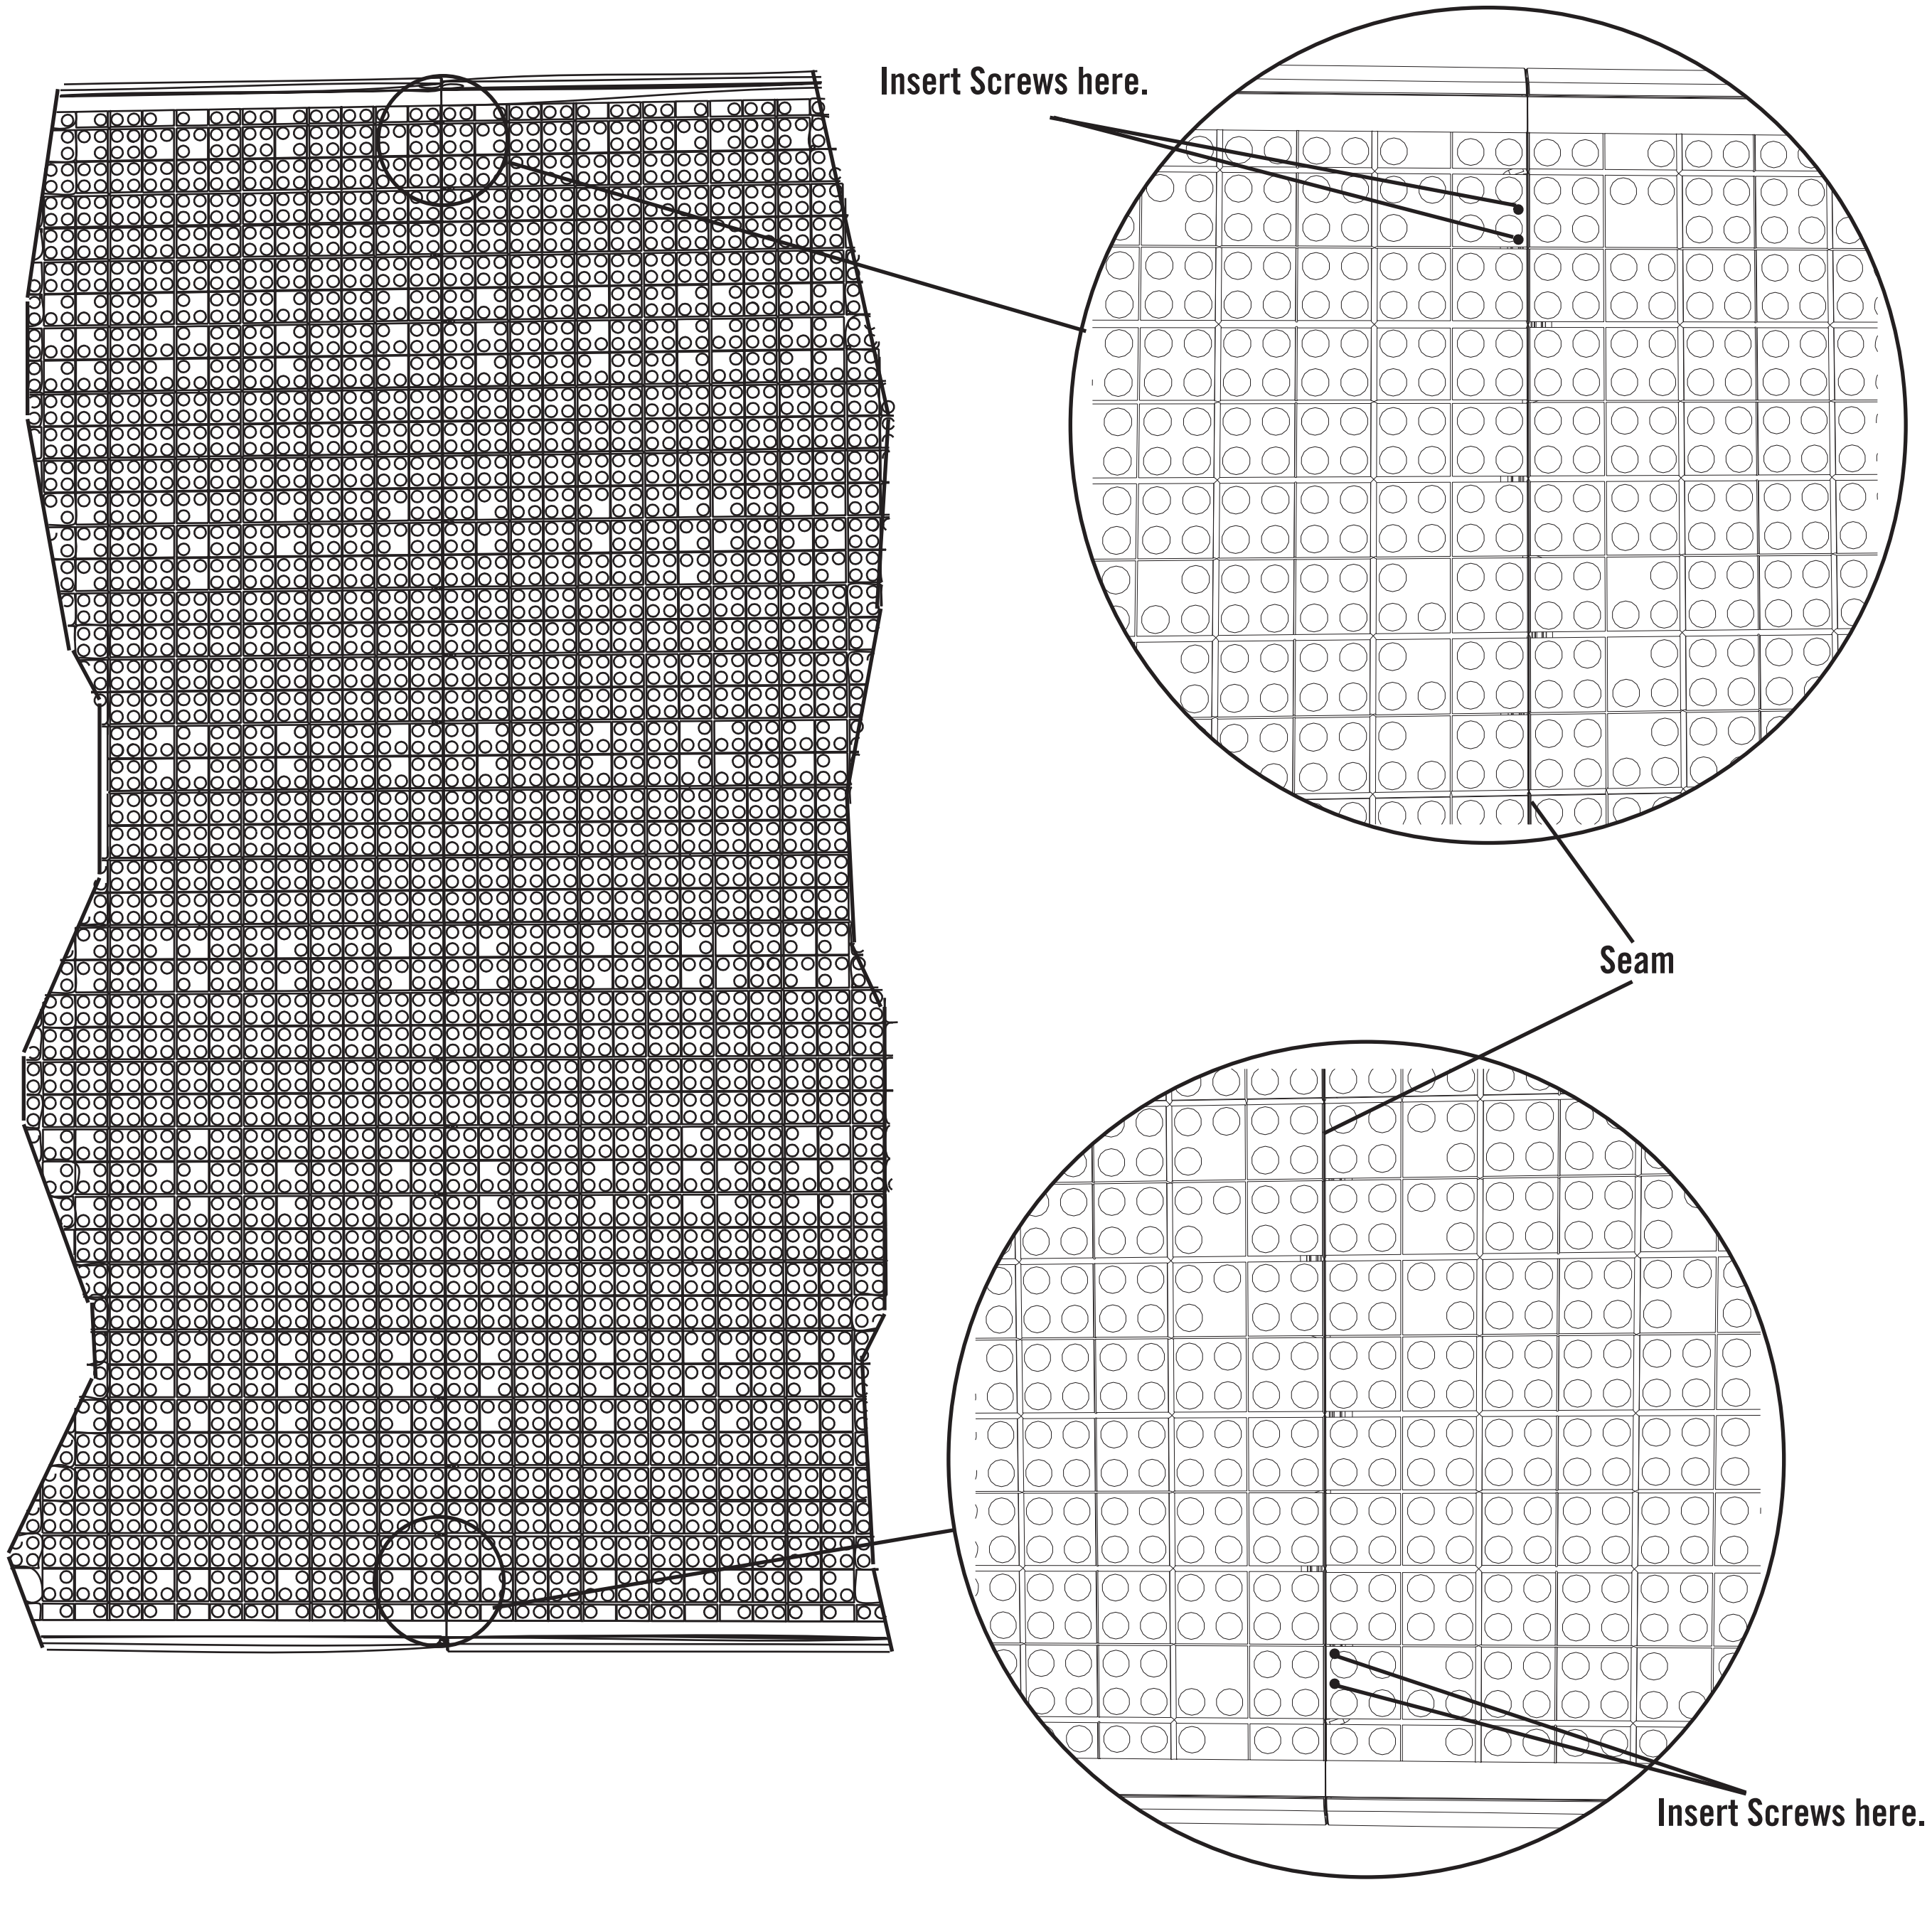
Insert Screws here.
Seam
Insert Screws here.

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



IF YOU PLAN ON ANCHORING YOUR SHED, CHECK WITH YOUR LOCAL HARDWARE STORE FOR SUITABLE HARDWARE.

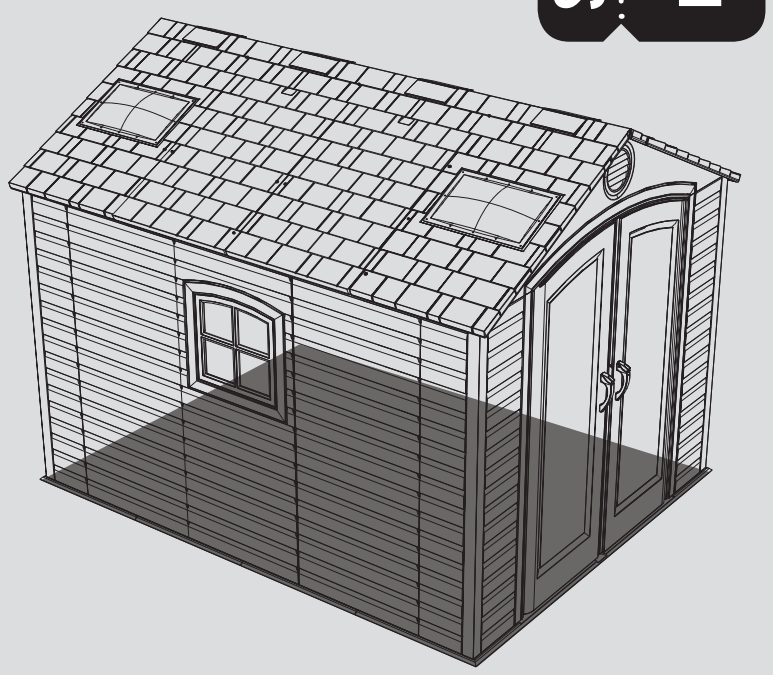

SEC 2.6

ANCHORING THE SHED

If you plan on anchoring your shed, you can anchor it to your platform through the four indentations near the corners of the floor. The anchoring hardware used depends on the platform. If you have a concrete platform, we recommend using four (4) 3/8" Anchor Bolts and four (4) 3/8" x 1" Flat Washers. If you have a wood framed platform, we recommend using four (4) 3/8" Lag Bolts and four (4) 3/8" x 1" Flat Washers. Do not exceed a 3/8" diameter bolt. Refer to your local hardware store for this hardware. **Do not tighten anchoring hardware until instructed to do so at the end of these instructions.**

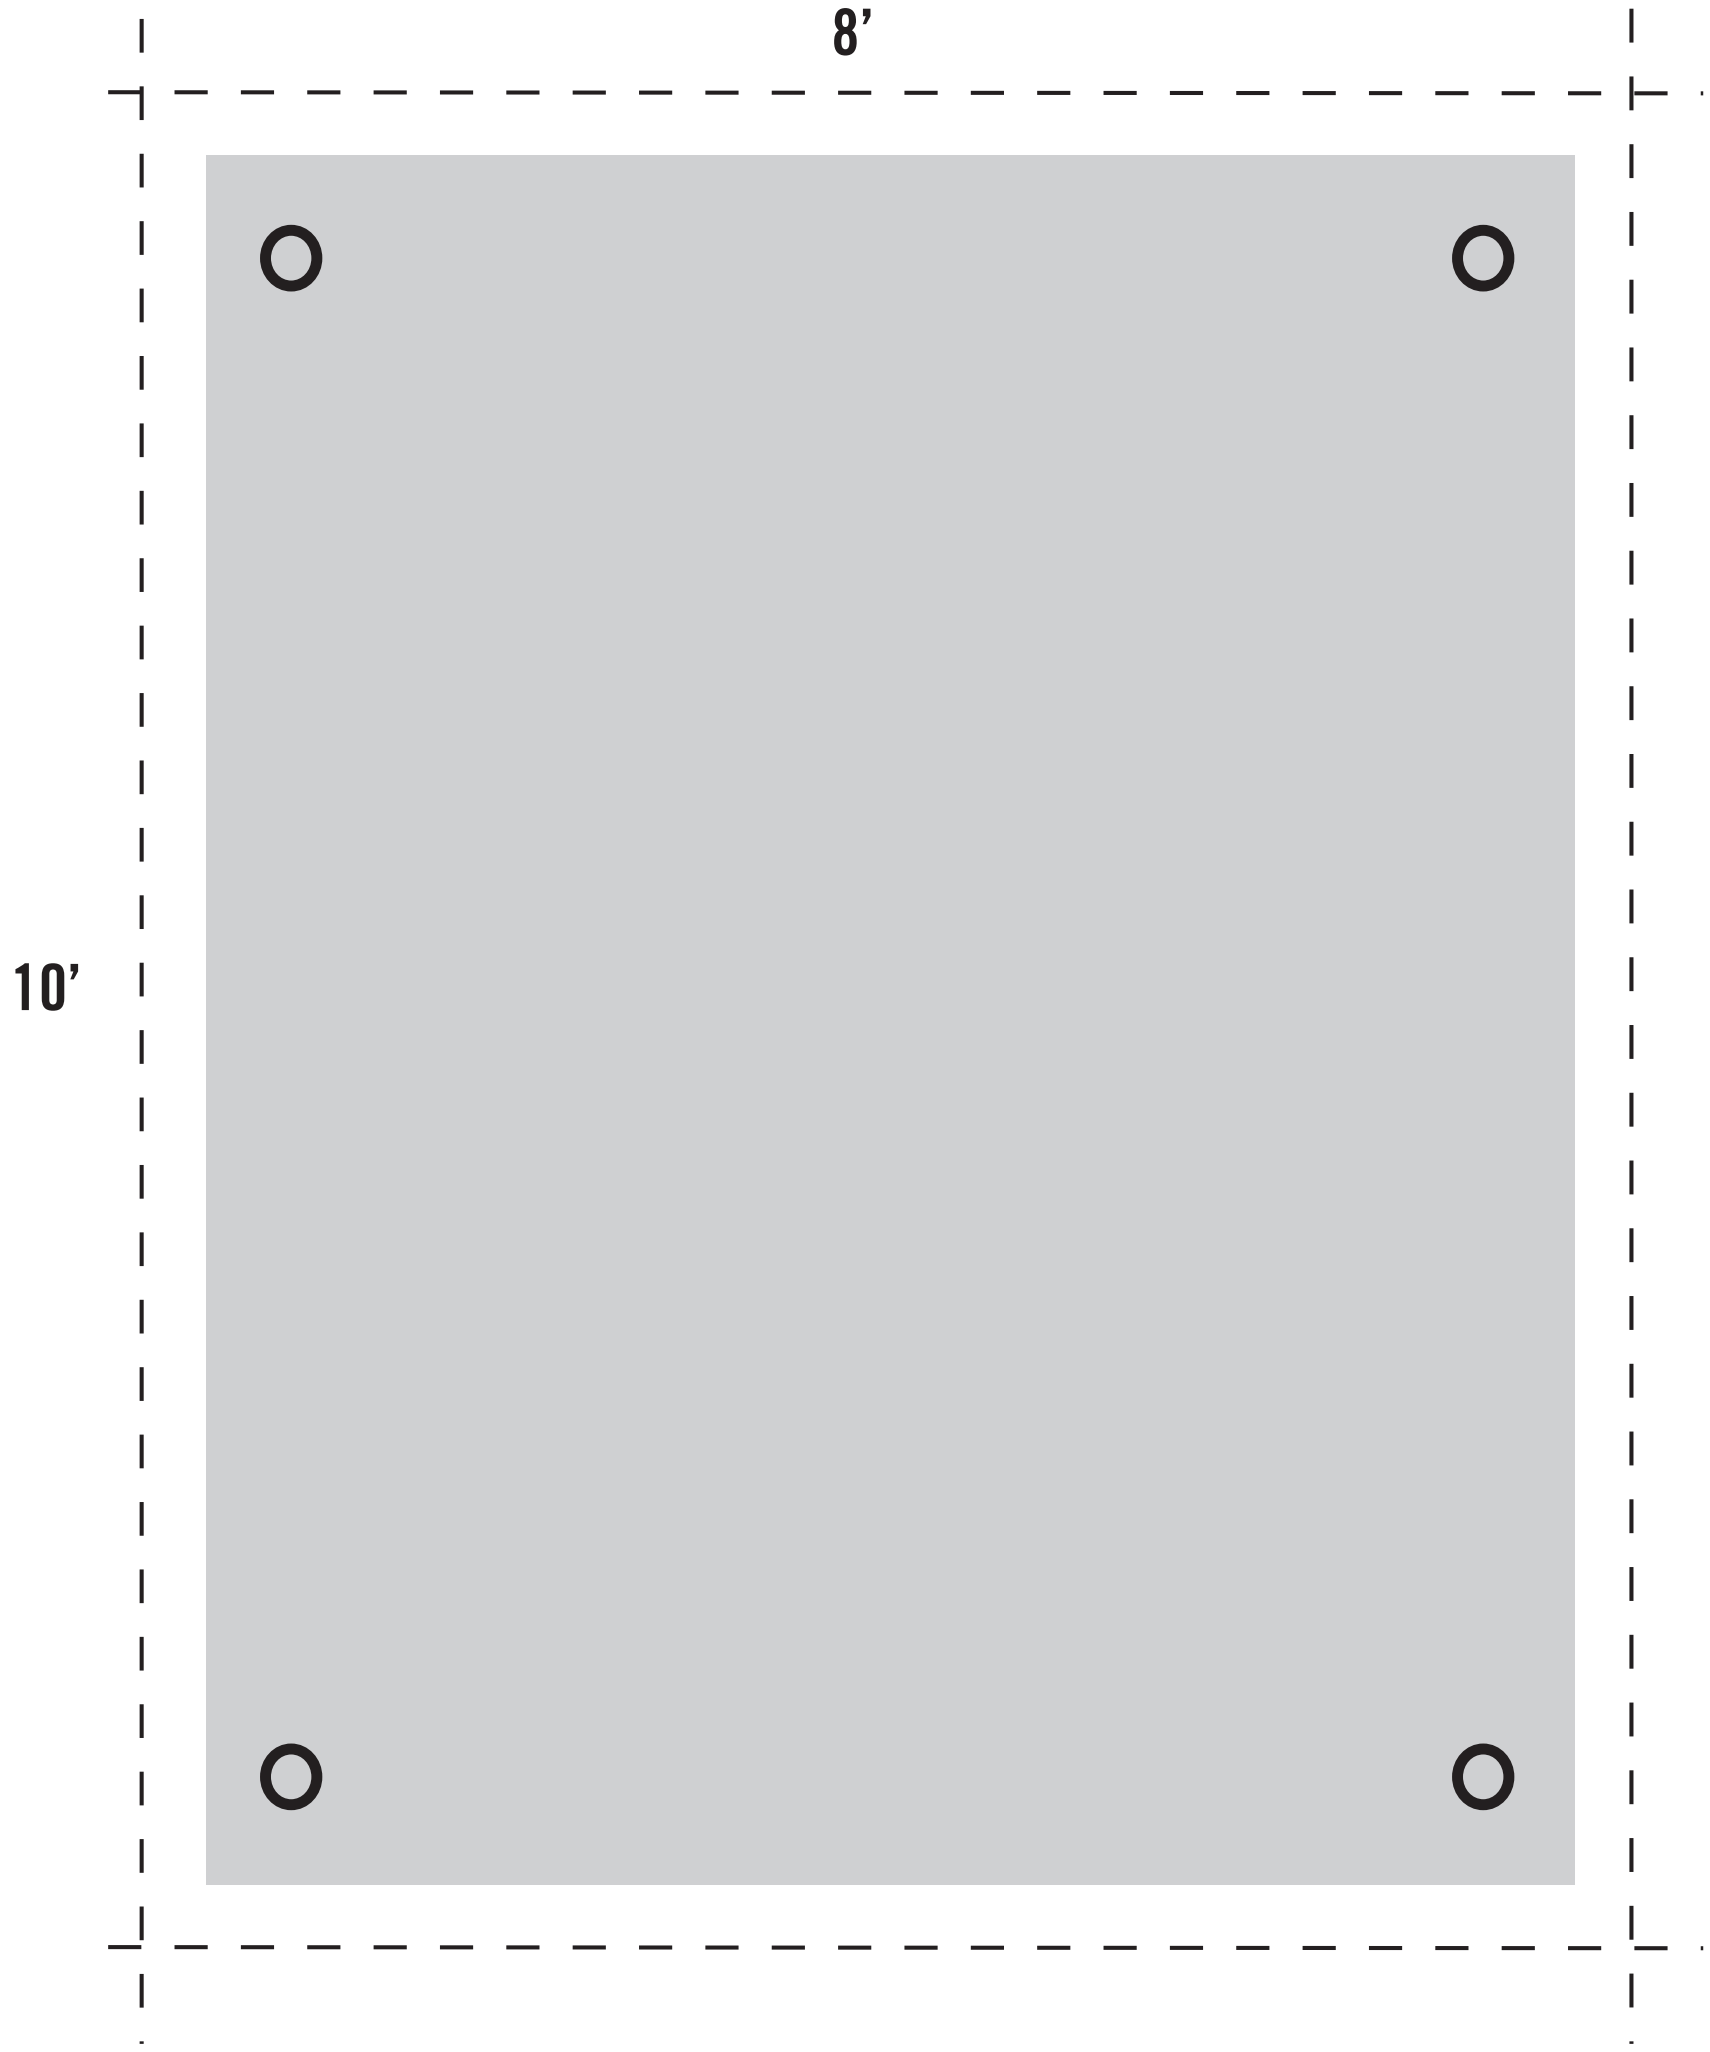

⚠ WARNING

Failure to anchor the shed may result in property damage and/or personal injury.

SEC 3 TRUSS ASSEMBLY

HARDWARE REQUIRED

HARDWARE BAG REQUIRED: BEA (x3)

Hardware shown at actual size (*Unless noted otherwise)



ADY (x18)
#10 x 3/8” Screw



ADJ (x6)
1/4” Cap Nut



ADK (x18)
#10 Cap Nut

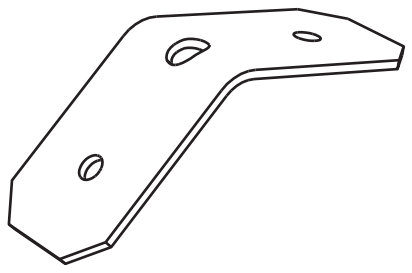

***AIP** (x3)
Truss Connector

Part shown at 50% of actual size



ADH (x3)
1/4” Threaded Rod

METAL PARTS REQUIRED

METAL PARTS KIT REQUIRED: CTD

Parts shown at 8% of actual size (*Unless indicated otherwise)

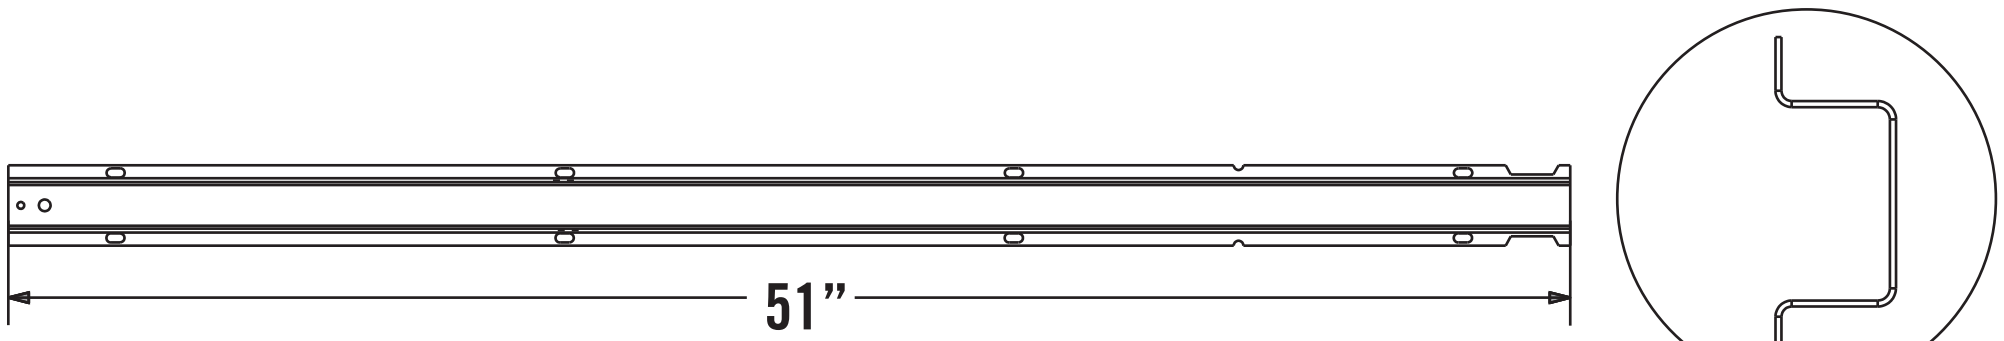

AFH (x6)
Truss Gutter Channel

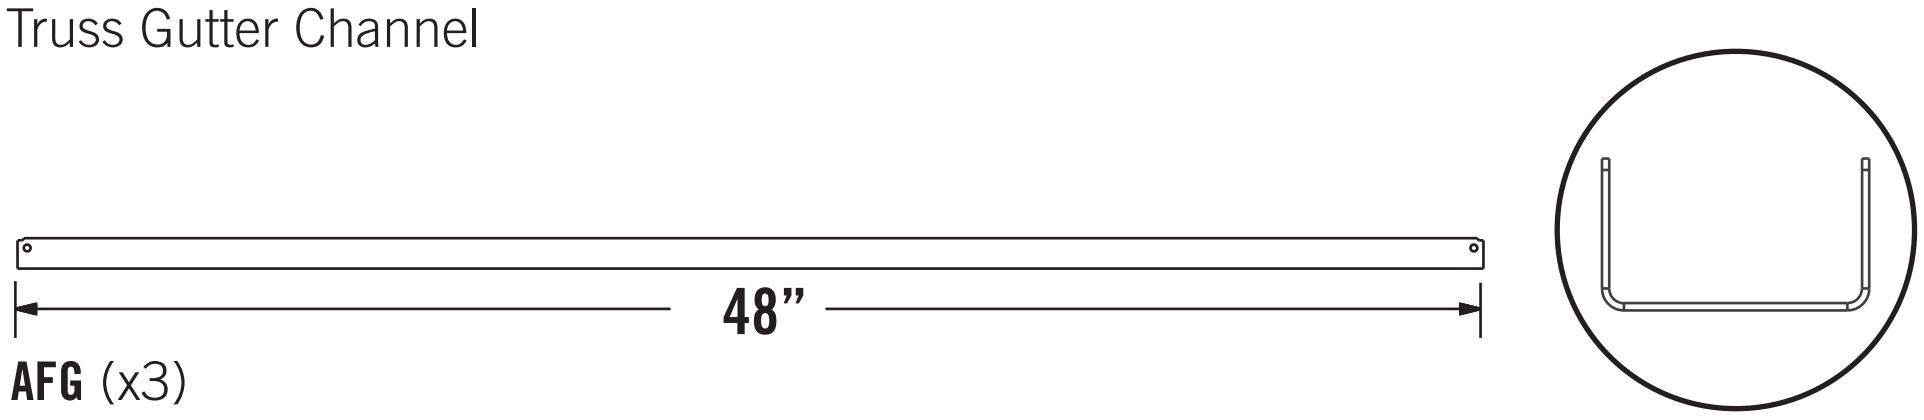

AFG (x3)
Roof Truss Brace

TOOLS REQUIRED



Phillips Screwdriver



7/16” Wrench (x2)



3/8” Wrench



Safety Glasses

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

3/8”





ADY (x3)



ADK (x3)

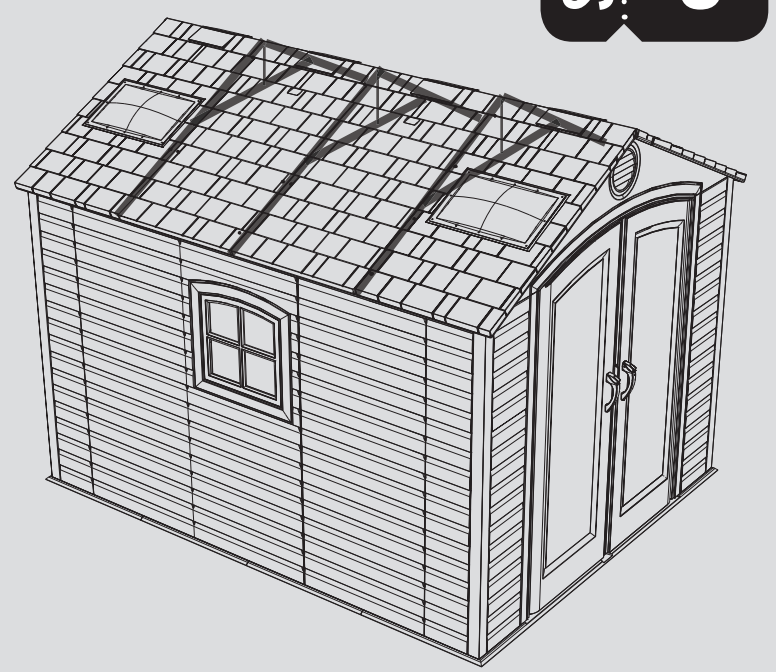

SEC 3.1

TRUSS ASSEMBLY

Stand a **Truss Gutter Channel (AFH)** upright and set a **Truss Connector (AIP)** inside the end of the Channel as shown. Align the holes and secure with one (1) **#10 x 3/8” Pan-Head Screw (ADY)** and one (1) **#10 Cap Nut (ADK)**.

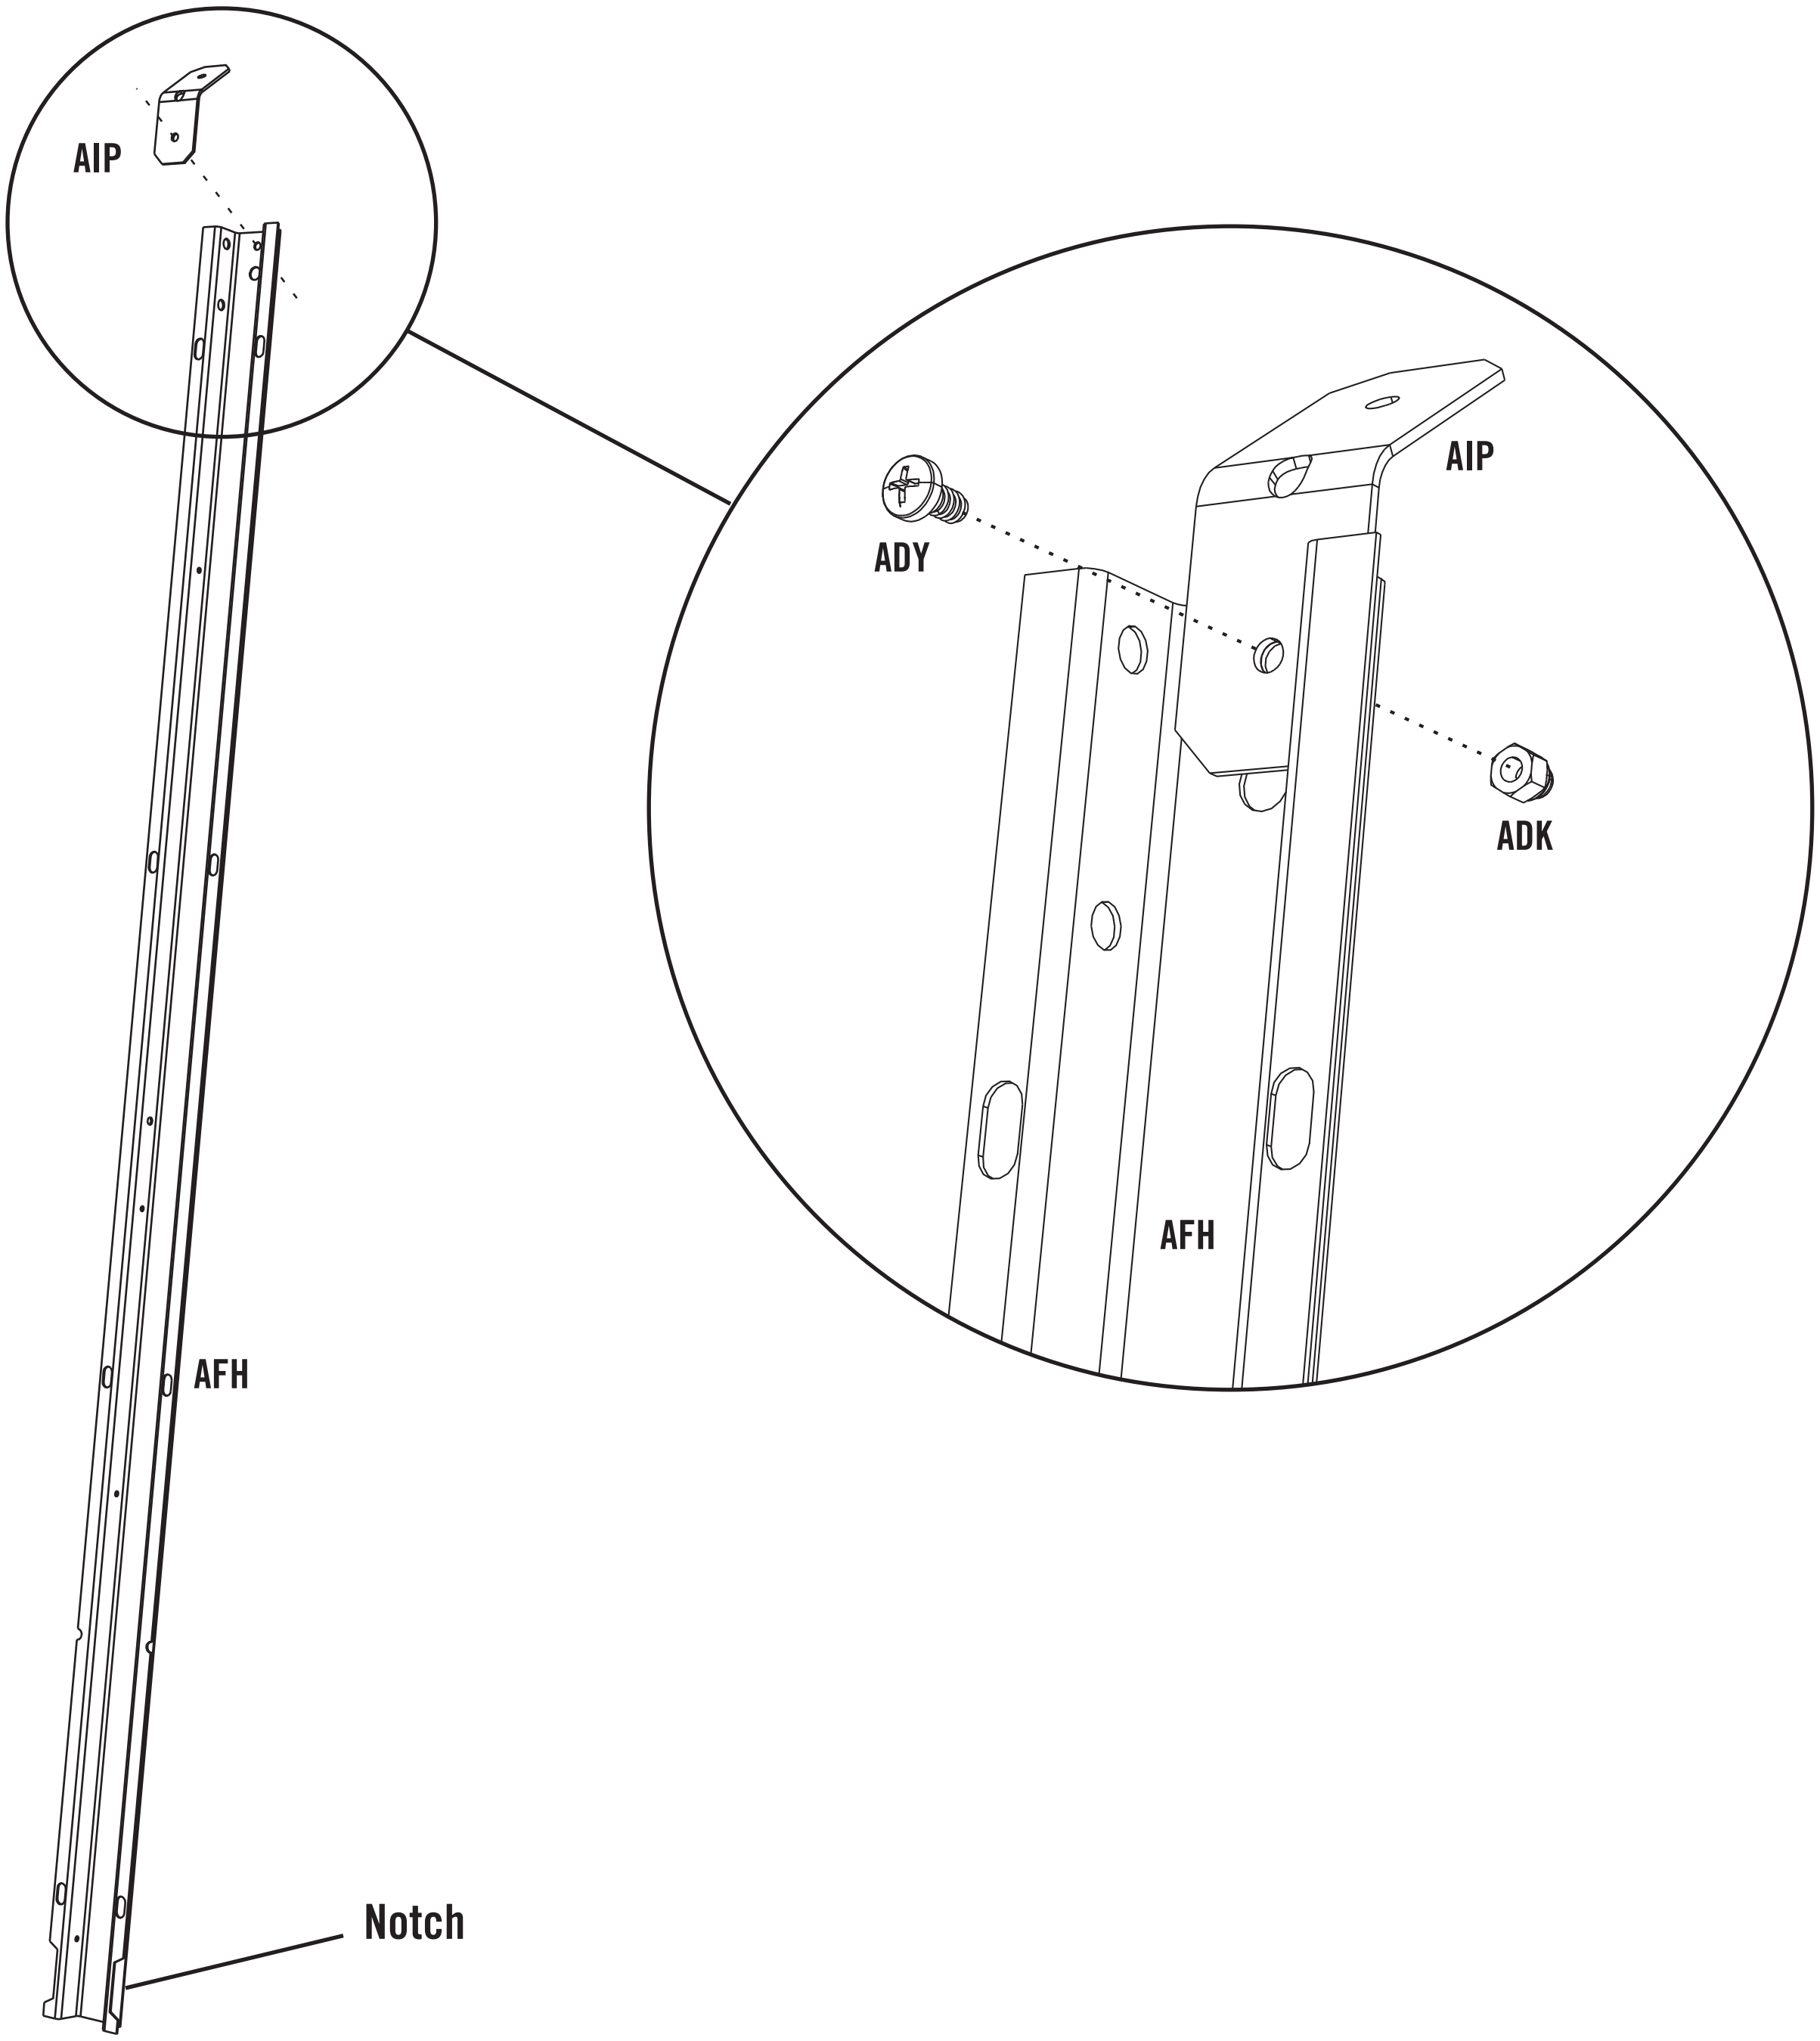

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE


3/8”




ADY (x3)


ADK (x3)

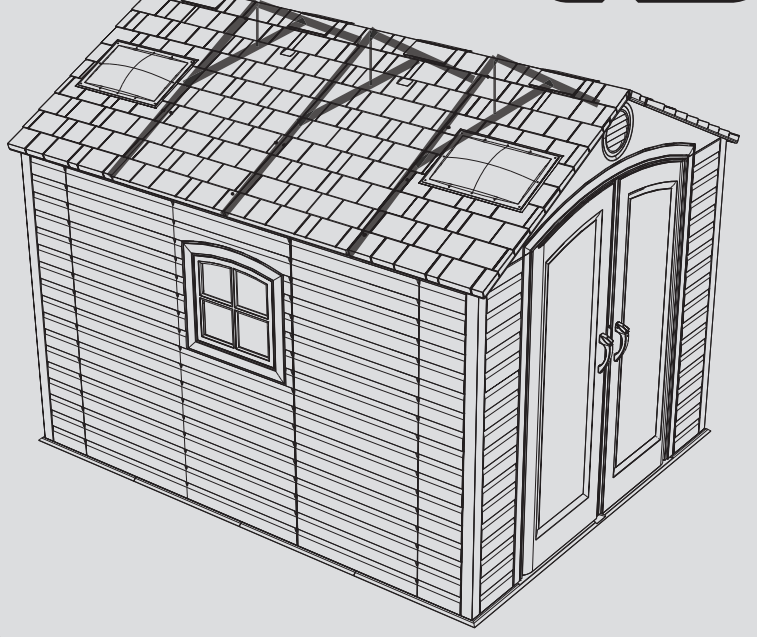

SEC 3.2

Connect another **Truss Gutter Channel (AFH)** to the Truss Connector using one (1) **#10 x 3/8” Pan-Head Screw (ADY)** and one (1) **#10 Cap Nut (ADK)**.

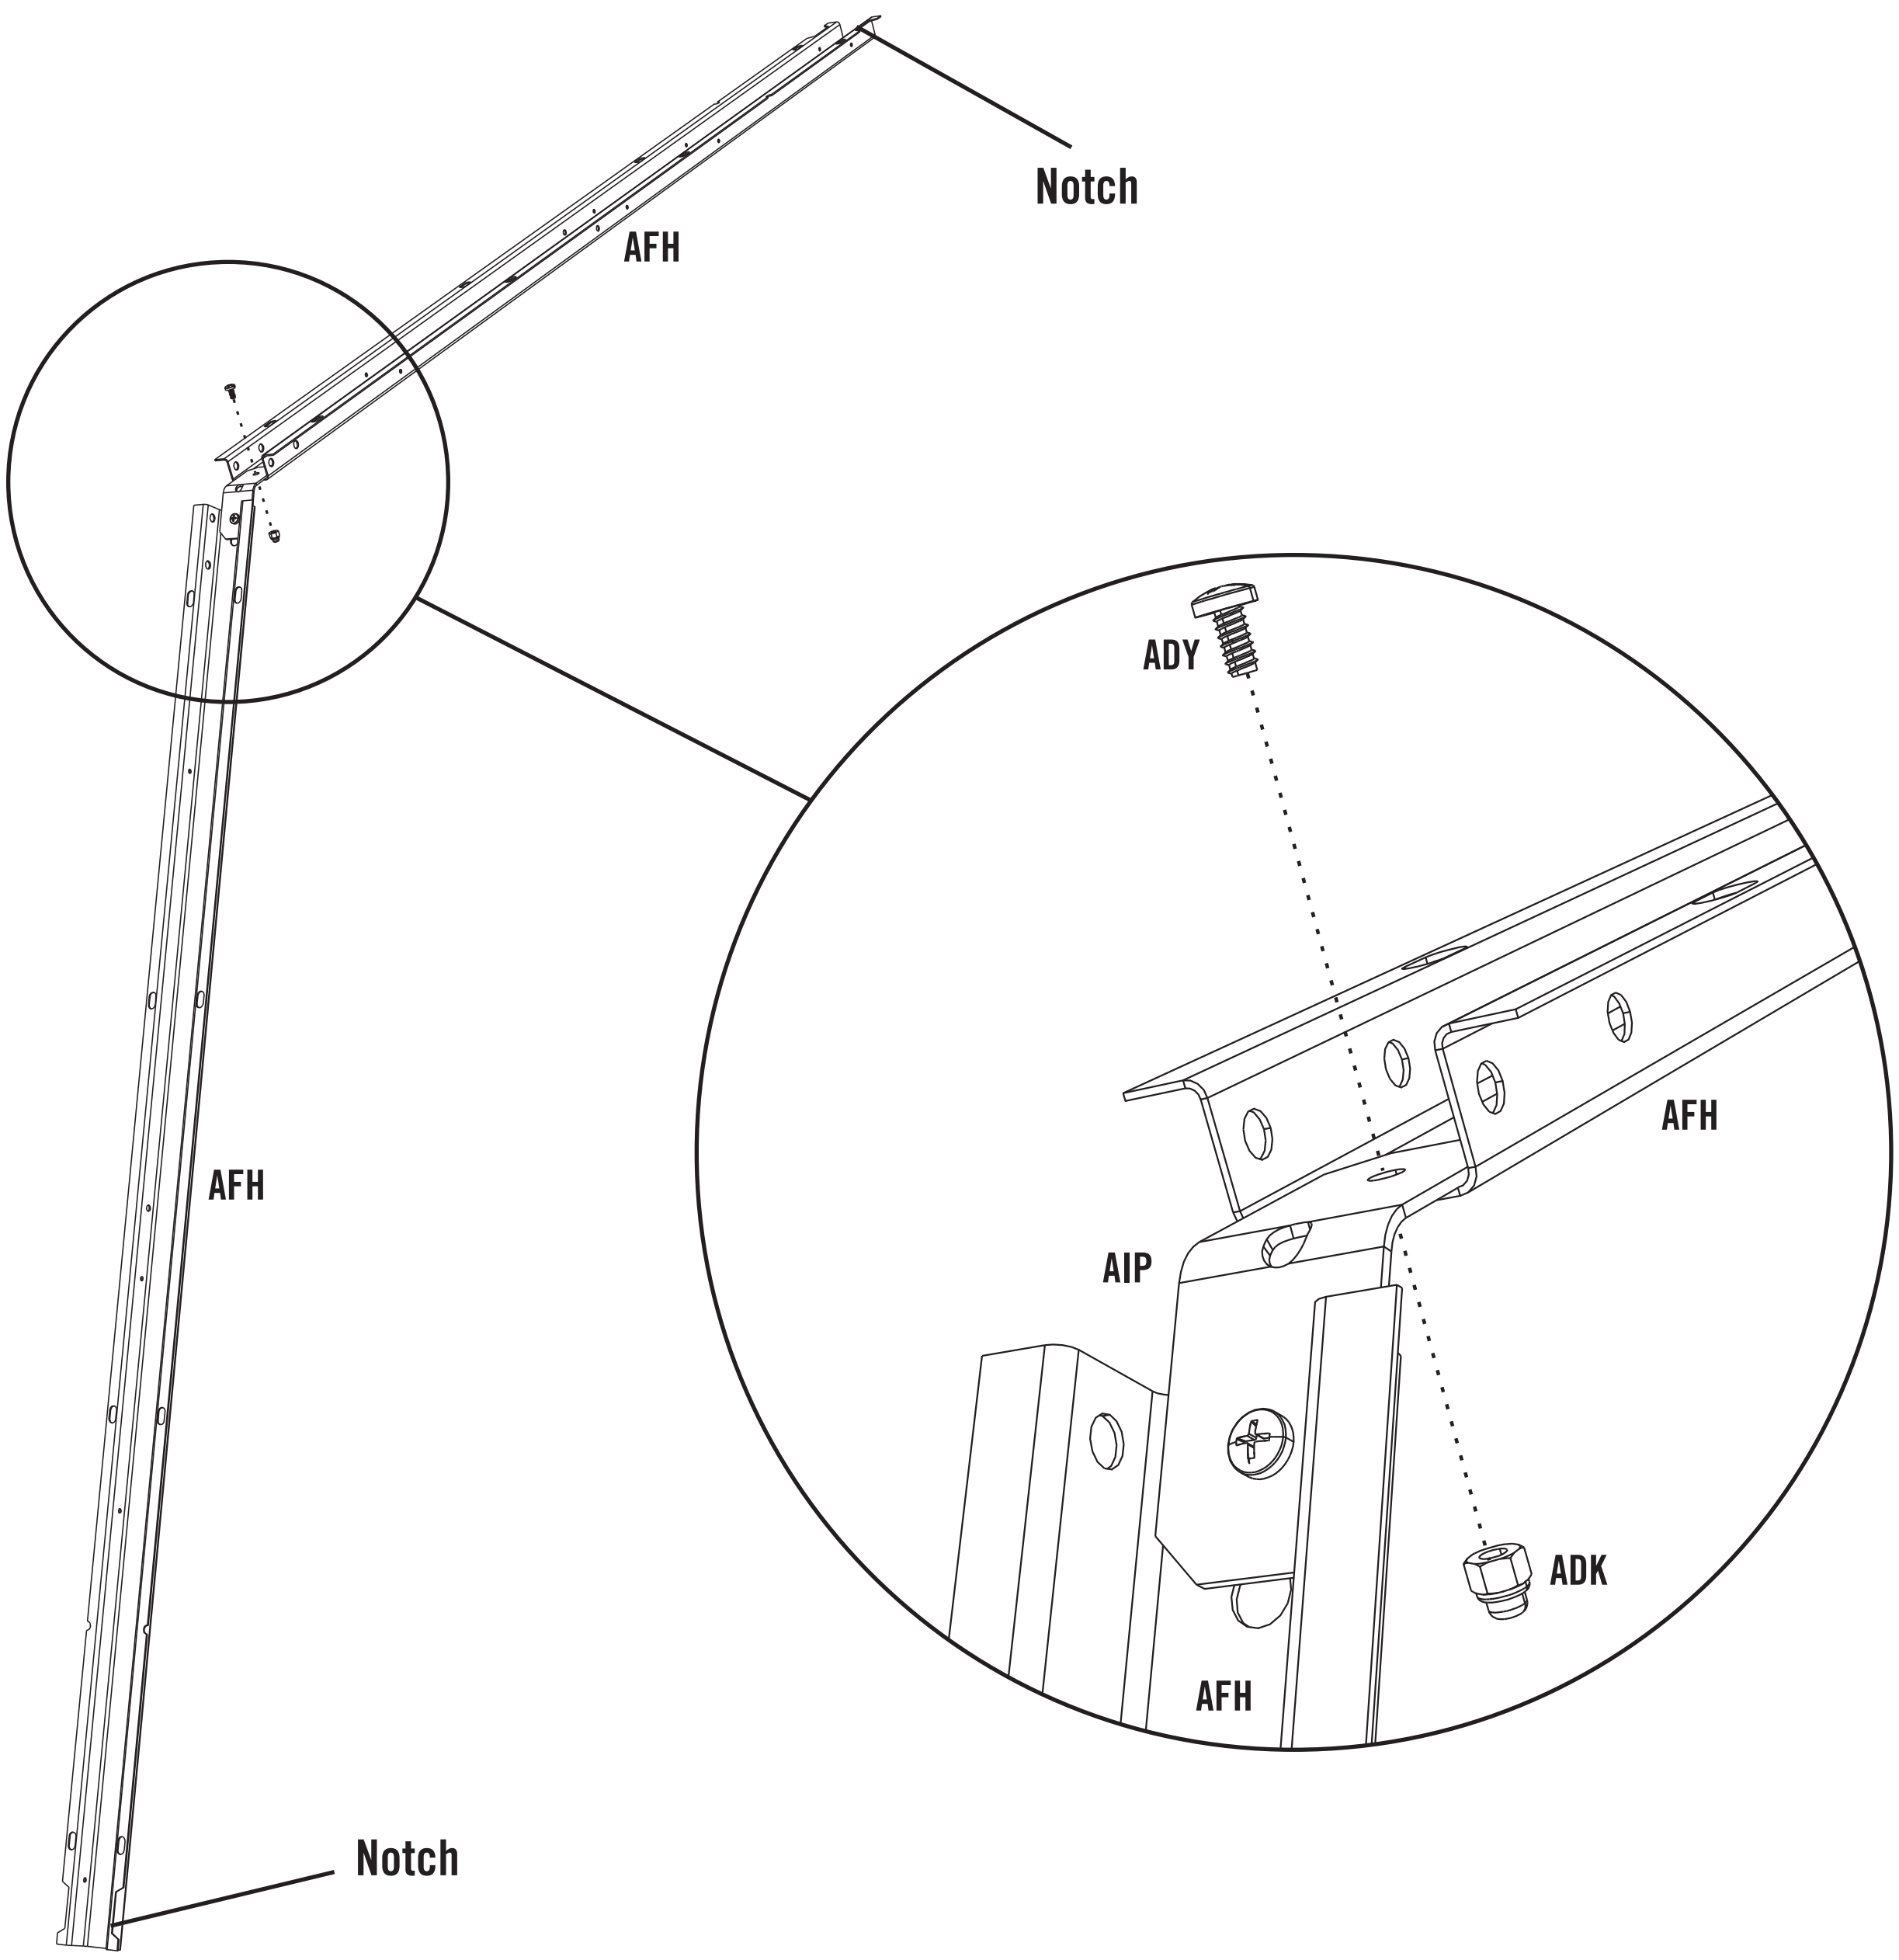
Notch
AFH
AFH
Notch
ADY
AFH
AIP
ADK
AFH

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

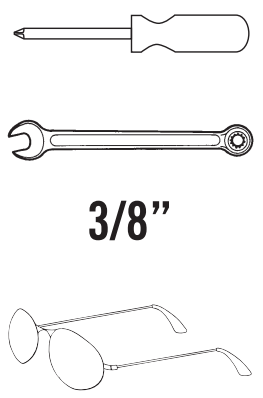


ADY (x12)


ADK (x12)

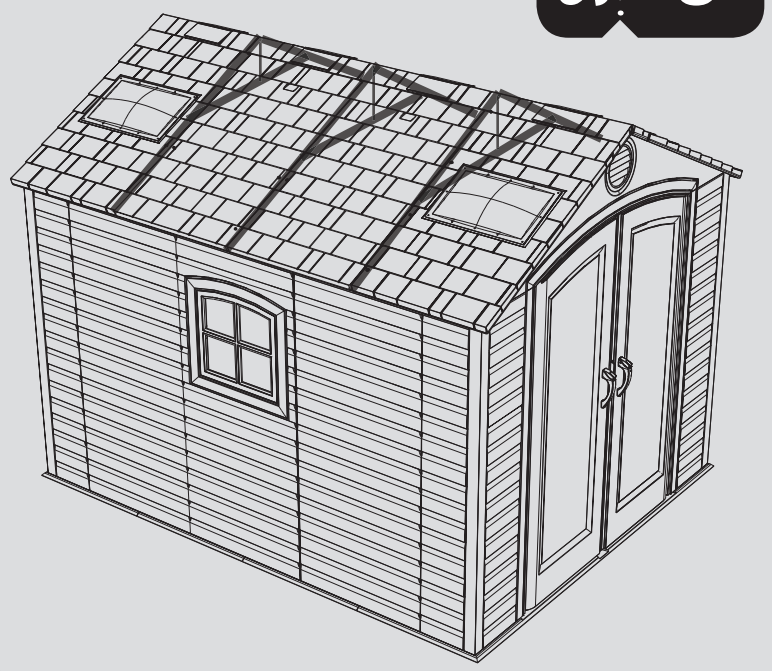

SEC 3.3

Lay the Truss Assembly on its side, and align the holes in a **Roof Truss Brace (AFG)** with those circled on the Truss Gutter Channels as shown.

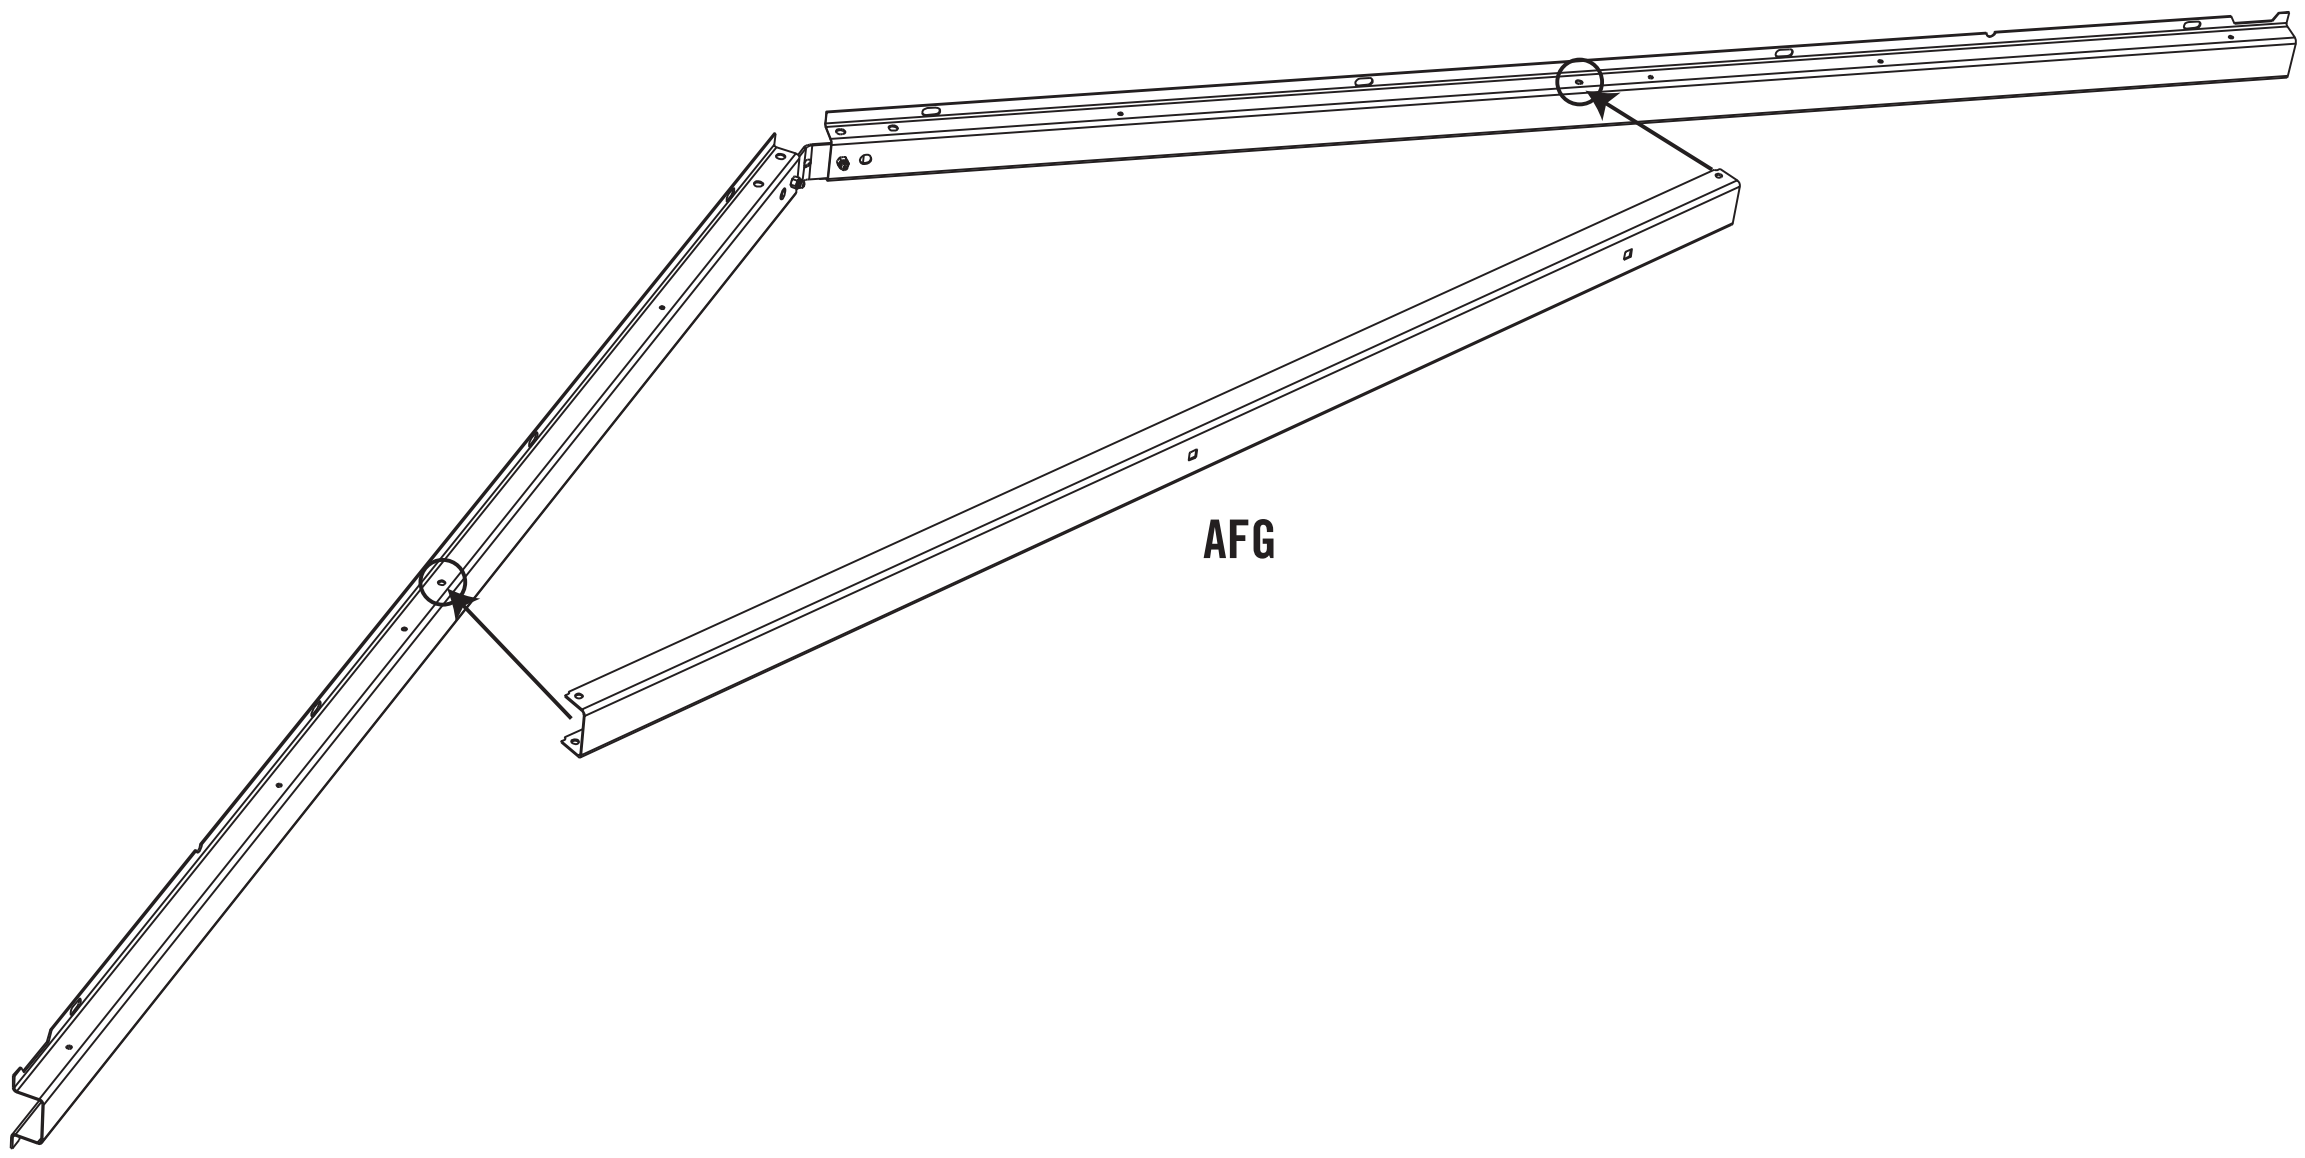

SEC 3.4

Secure the Roof Truss Brace to the Truss Gutter Channel using two (2) **#10 x 3/8” Pan-Head Screws (ADY)** and two (2) **#10 Cap Nuts (ADK)**. **Repeat this step for the other end of the Roof Truss Brace.**

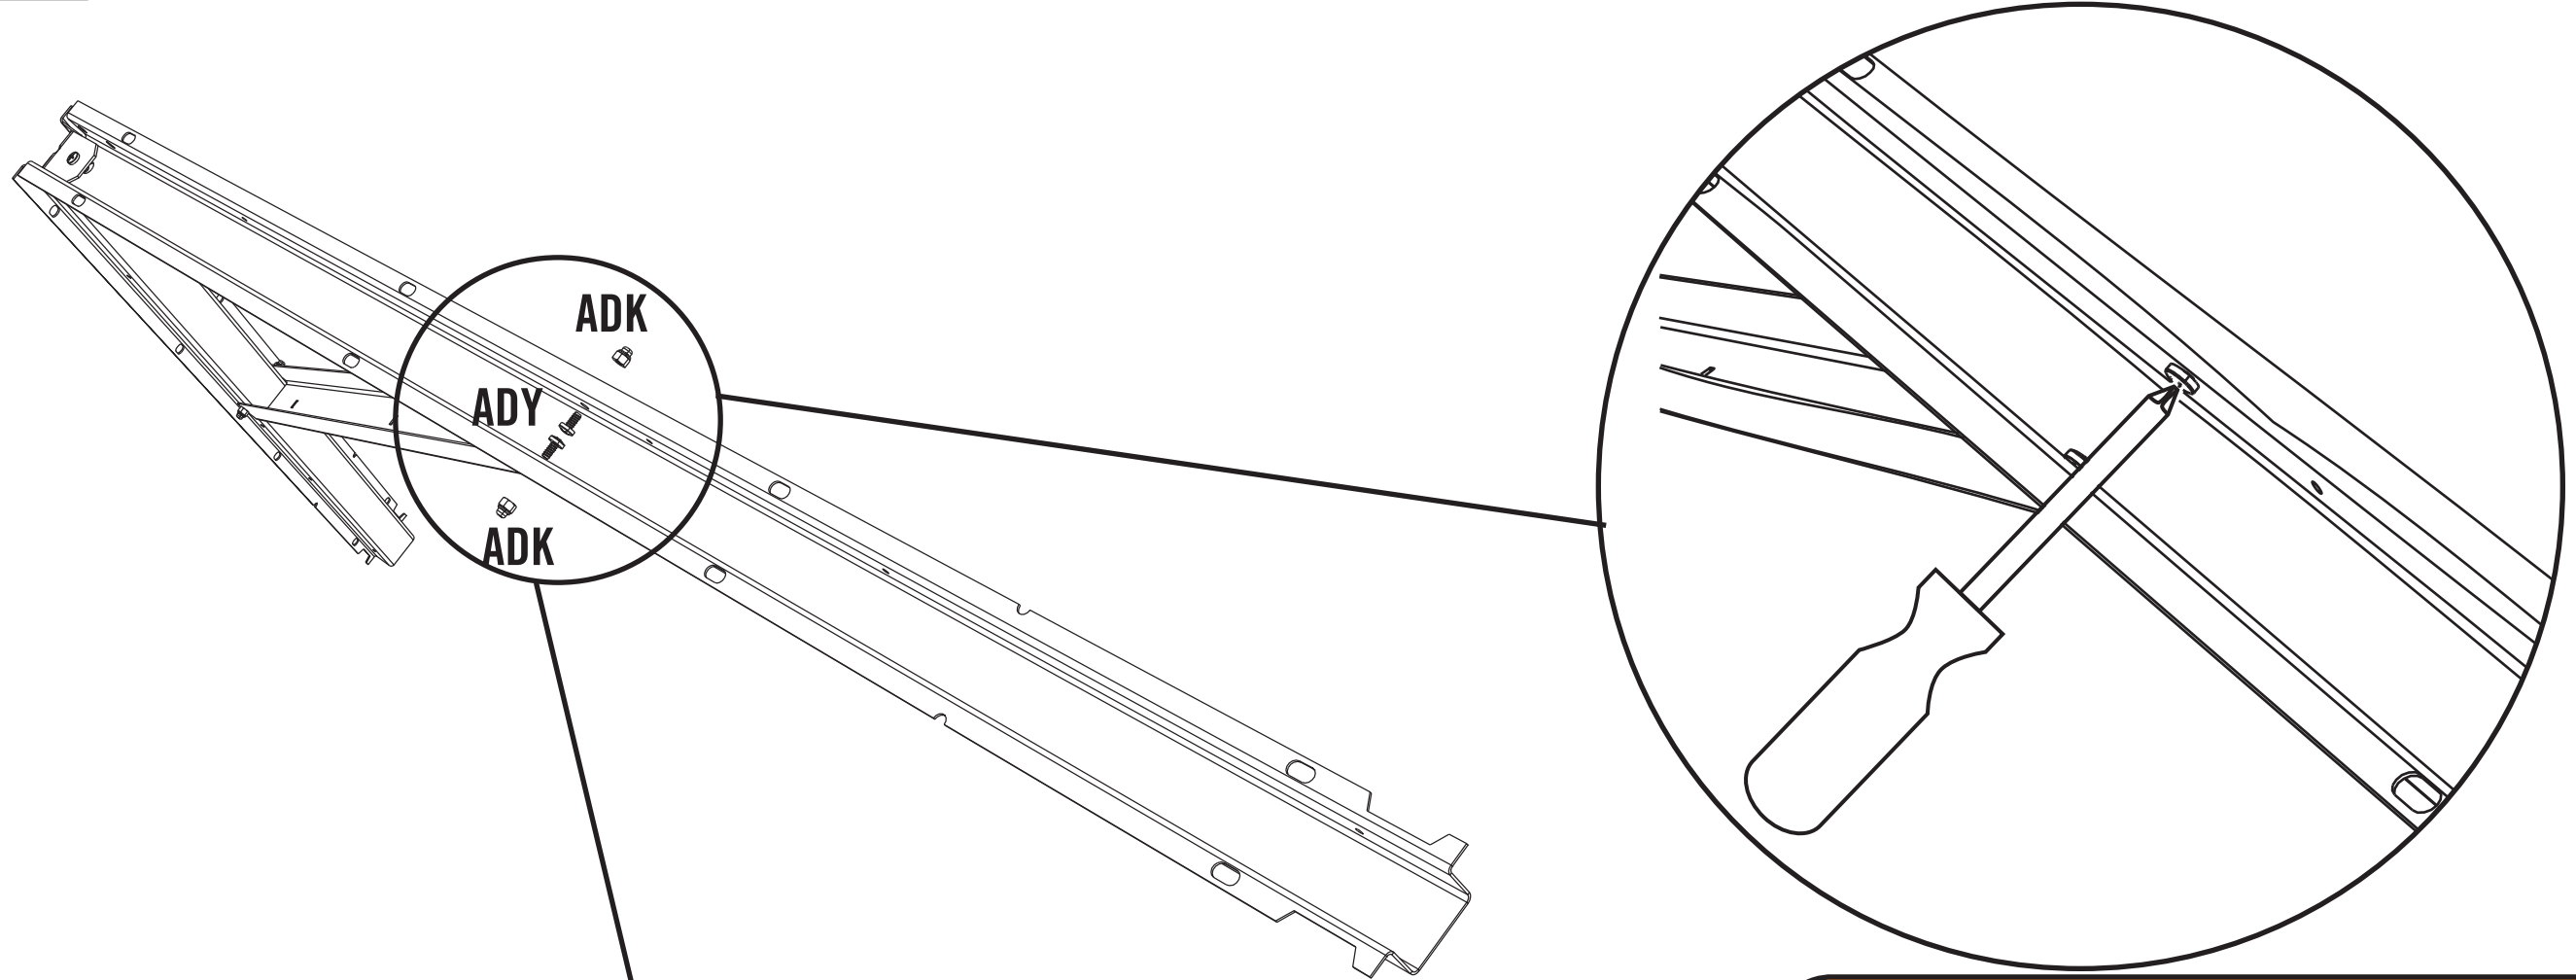

! *Note: The Cap Nuts goes on the outside of the Truss.*

⚠ WARNING

Do not overtighten the Cap Nut. If the end of the Bolt breaks through the plastic cap, call our Customer Service Department. Exposed threads on the end of the Bolt may cause serious injuries.

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

7/16” (x2)





ADJ (x6)



ADH (x3) (Not to scale)

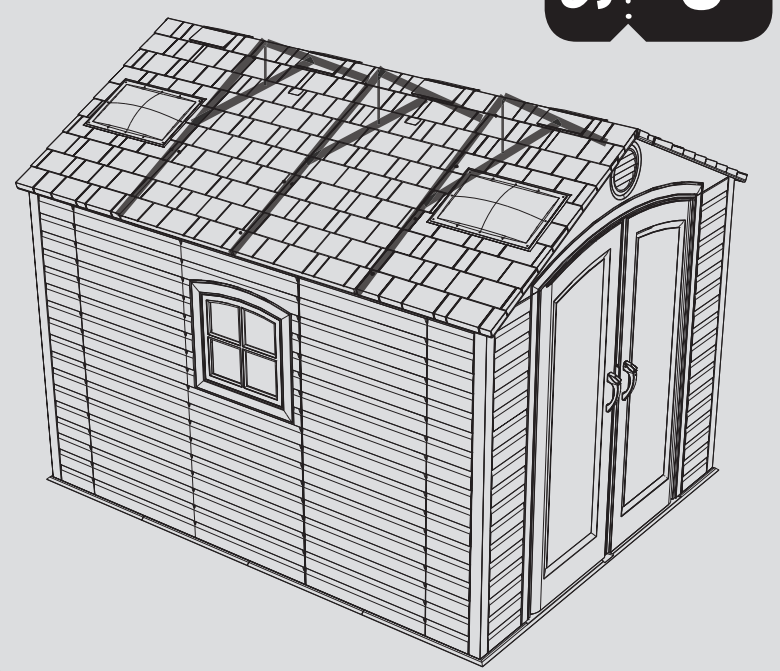

SEC 3.5

With the Truss Assembly on its side, slide a **1/4” Threaded Rod (ADH)** through the Roof Truss Brace and Truss Connector as shown. Secure the top and bottom of the 1/4” Threaded Rod with a **1/4” Cap Nut (ADJ)**. Tighten all hardware. The 1/4” Threaded Rod will still spin freely. Set aside. **Repeat this section for the second and third Truss Assemblies.**

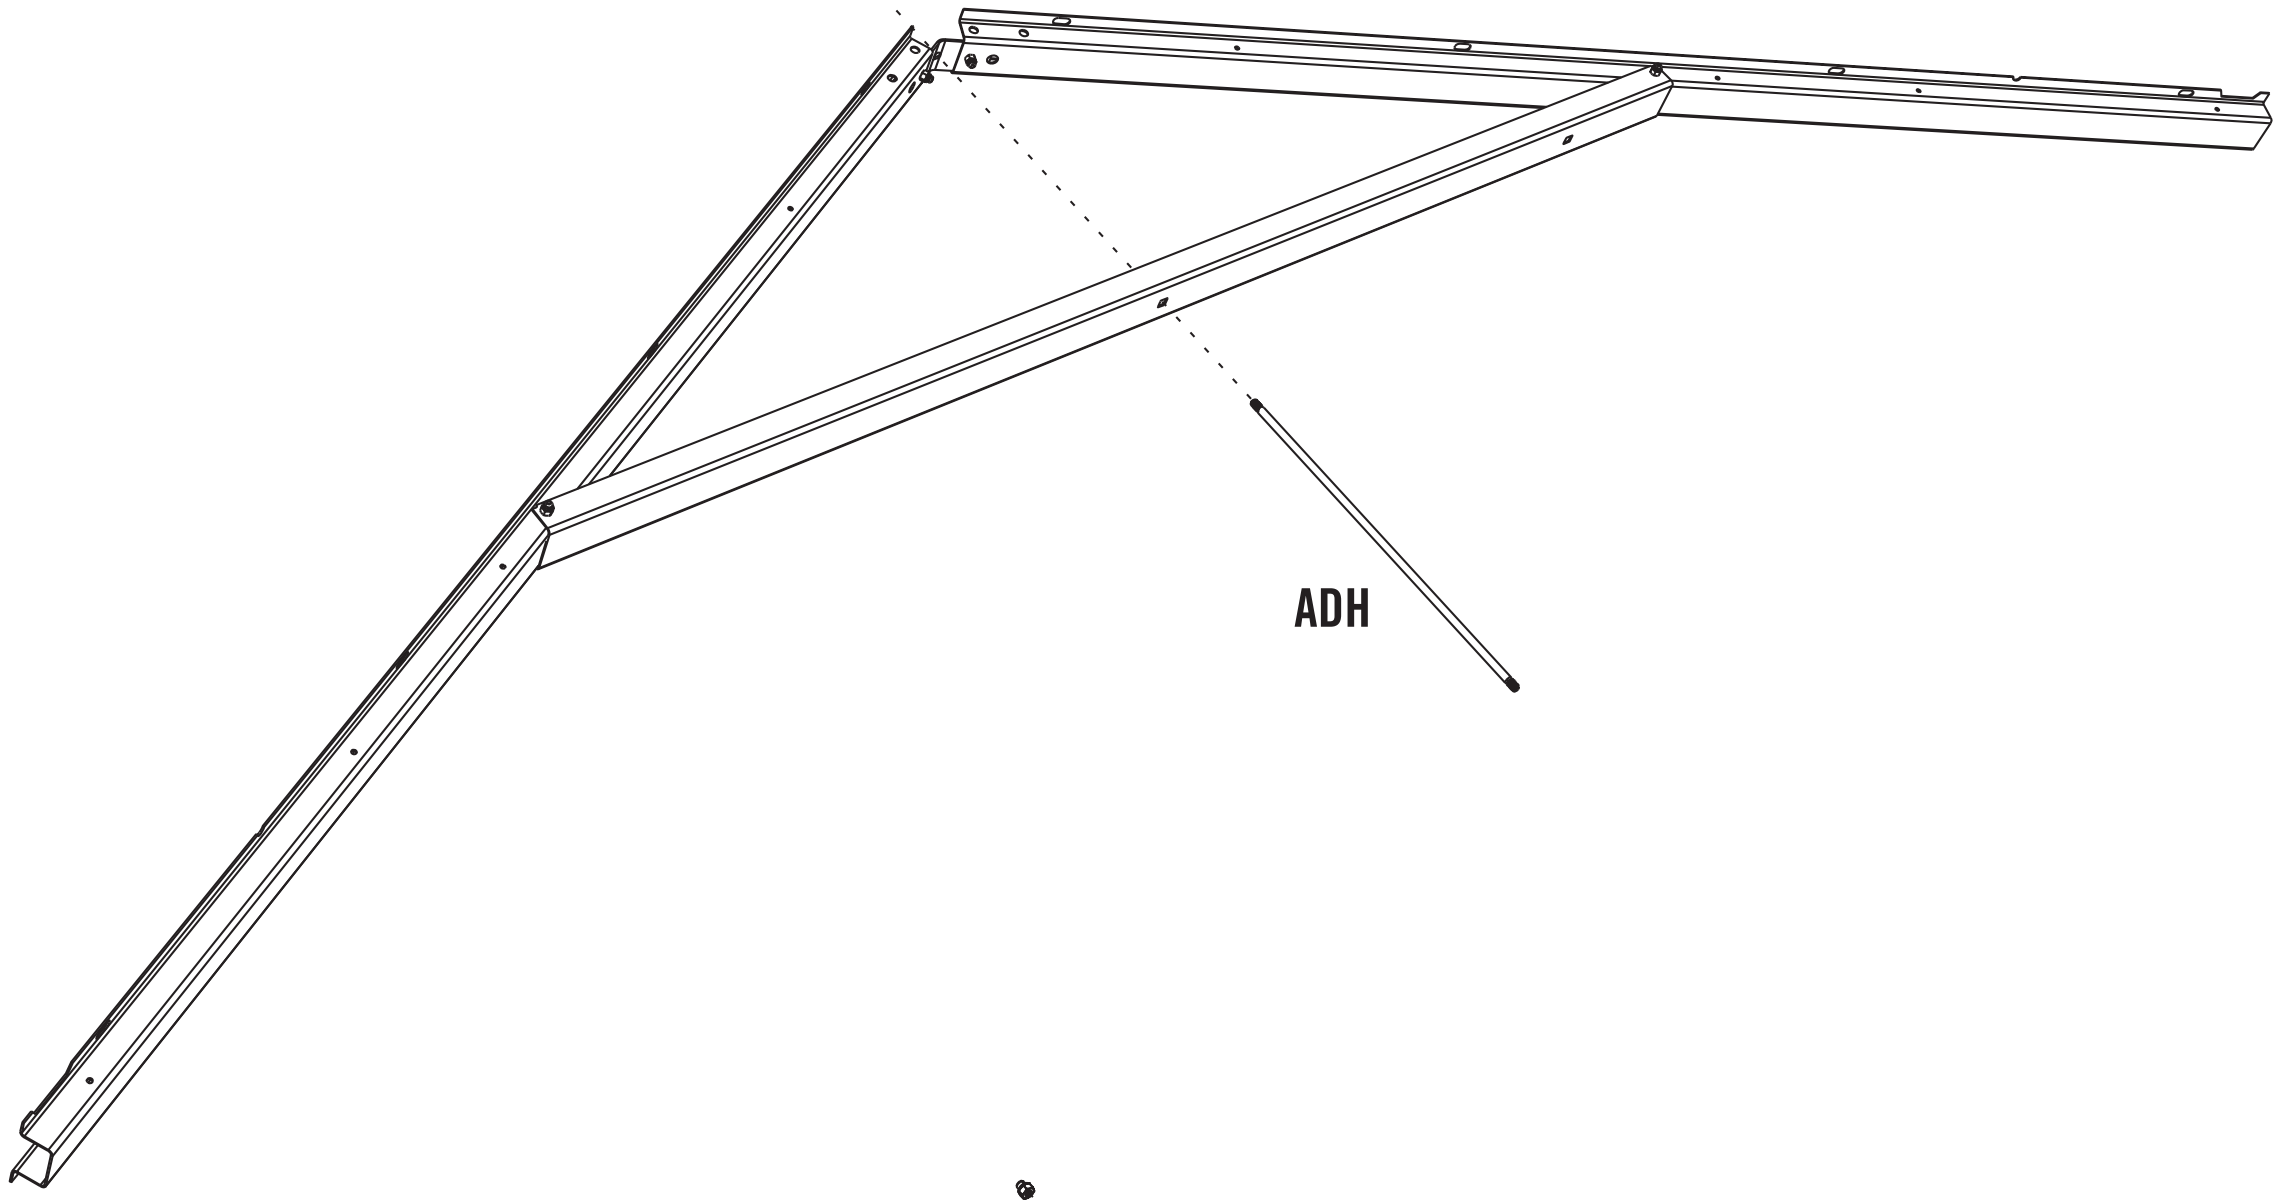

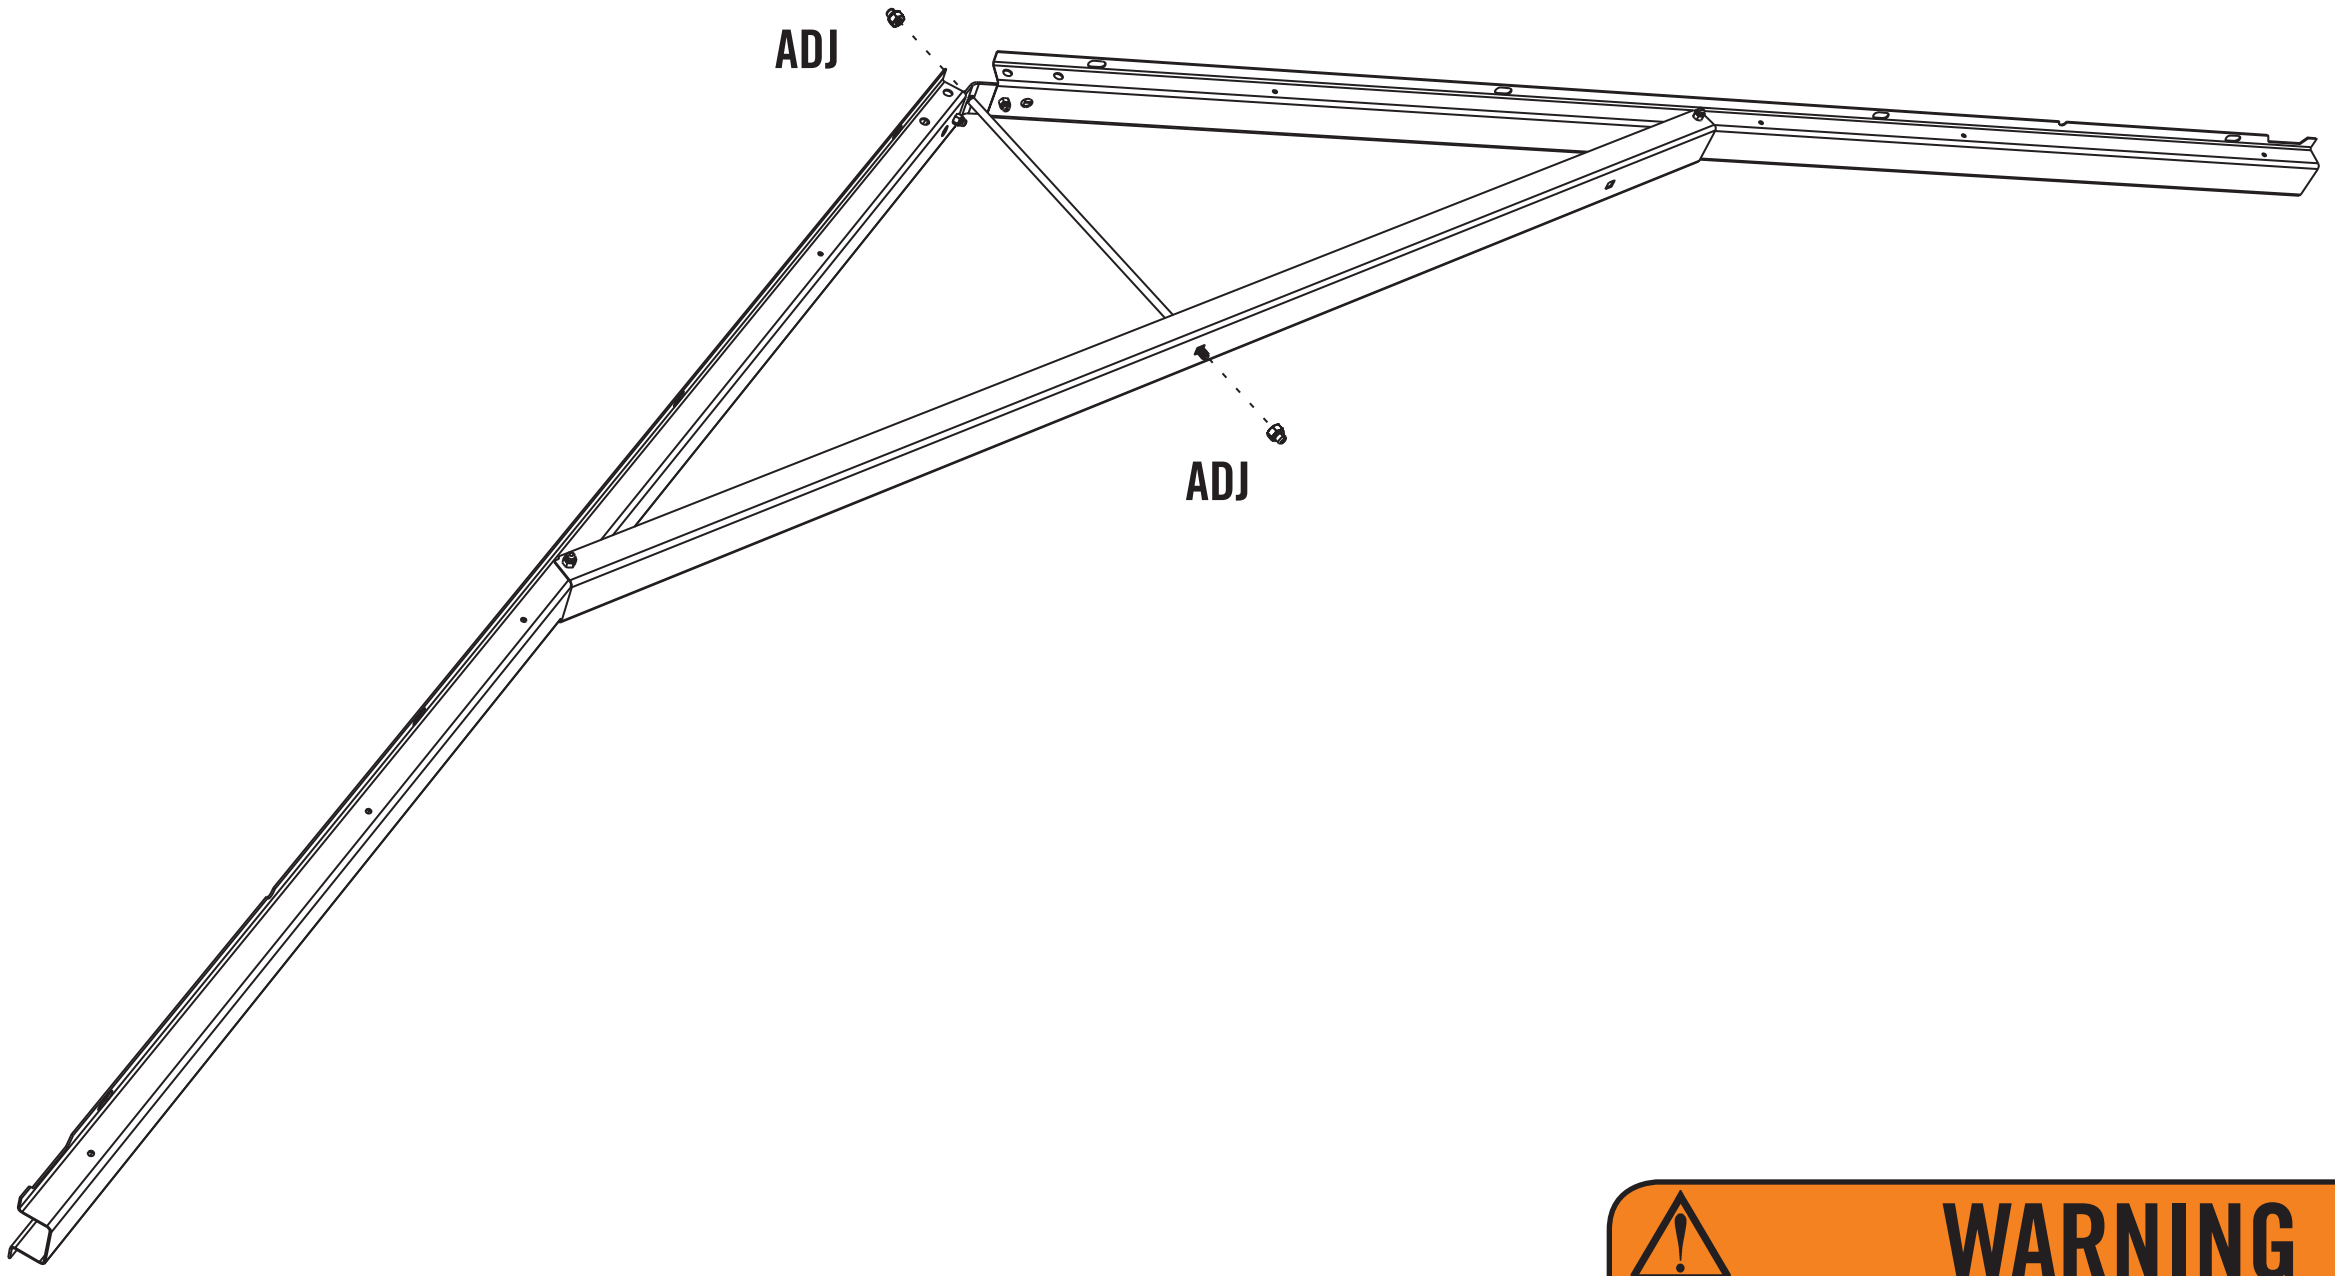

WARNING

Do not overtighten the Cap Nut.

SEC 4 WALL PANEL INSTALLATION

HARDWARE REQUIRED — HARDWARE BAG REQUIRED: BHY

Hardware shown at actual size



ADZ (x58)
1/4” x 5/8” Pan-Head Screw
(Not all screws will be used)

PLASTIC PARTS REQUIRED — LOCATED IN BOX 2

Part shown at 4% of actual size

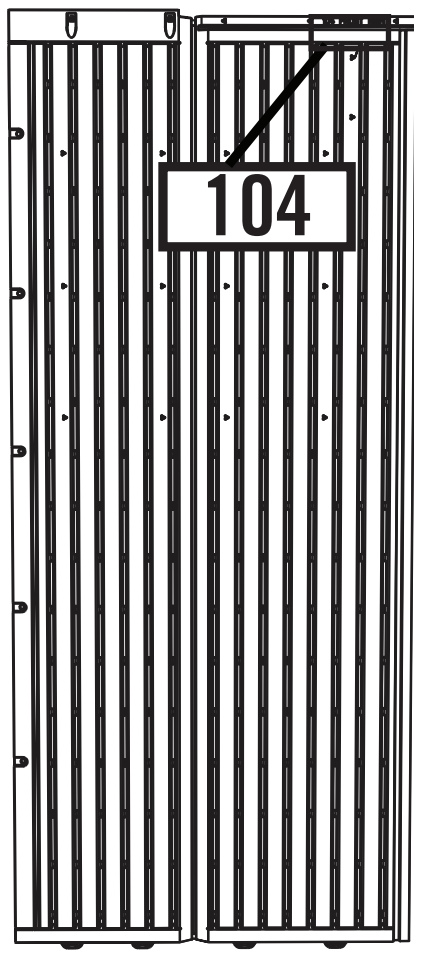

AGY (x1)
Corner Wall Panel 104

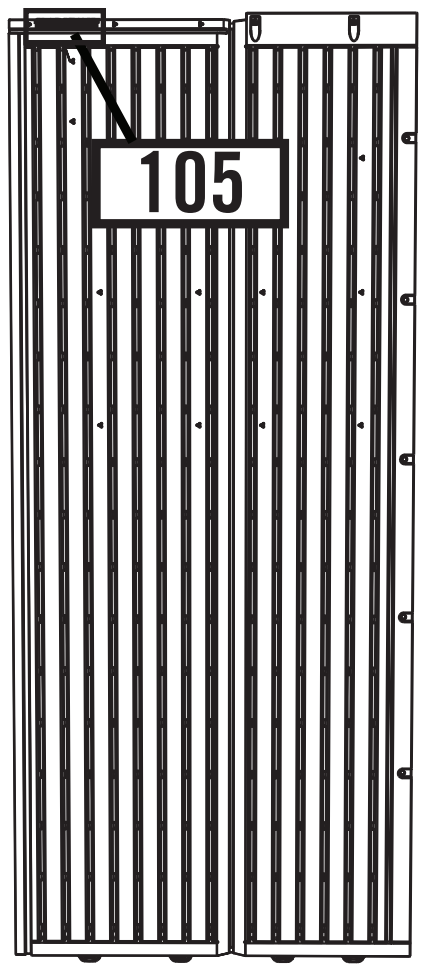

AGN (x1)
Corner Wall Panel 105

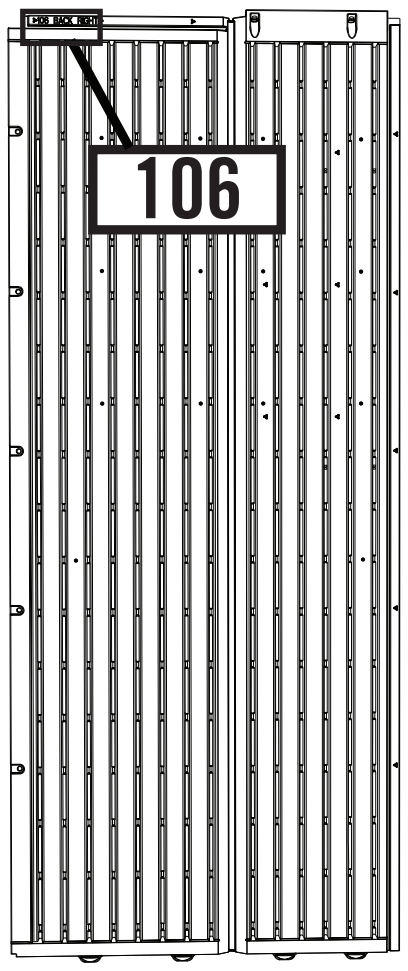

AGW (x1)
Corner Wall Panel 106

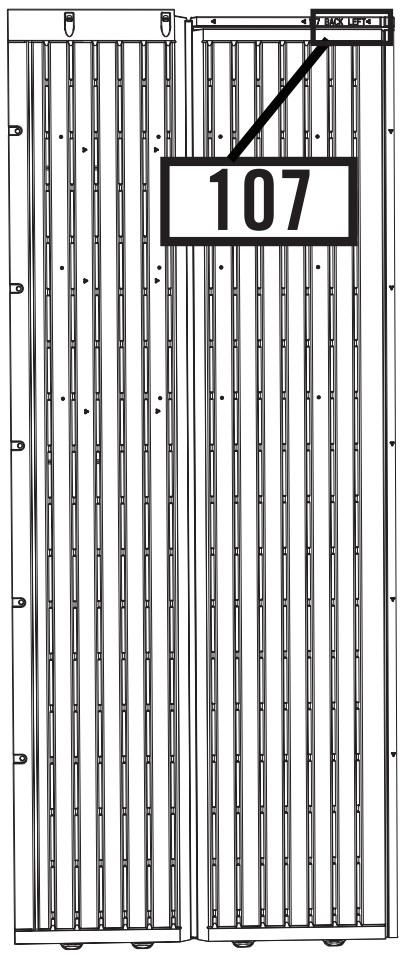

AGL (x1)
Corner Wall Panel 107

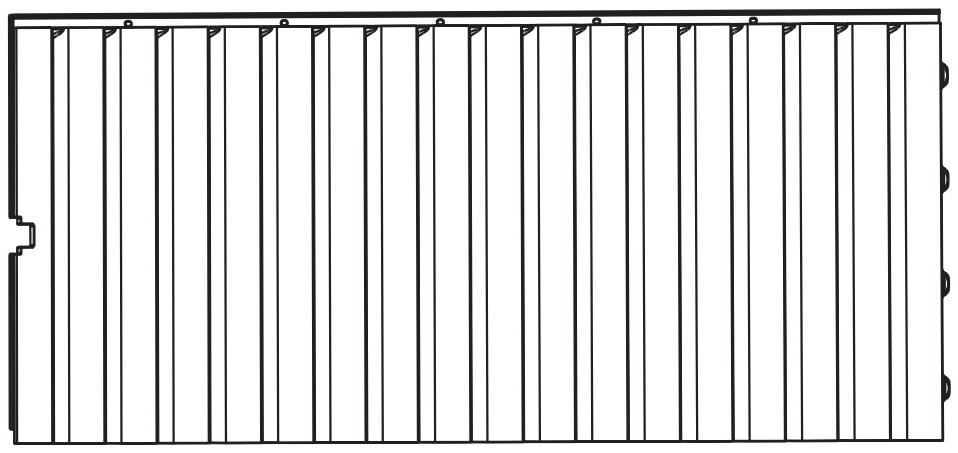

AHD (x7)
Wall Panel

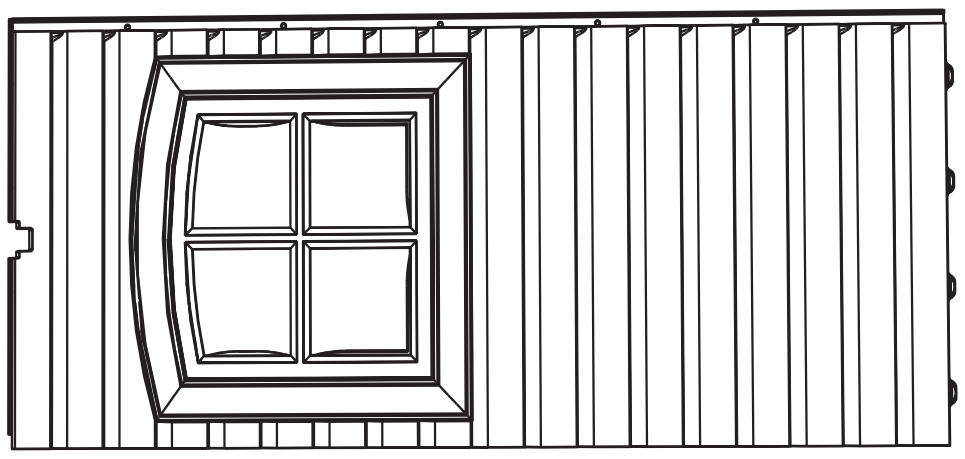

AHH (x1)
Window Wall Panel

TOOLS REQUIRED — SMALL PARTS BOX REQUIRED: B00



Phillips Screwdriver



Safety Glasses

AIW (x1)
Wood Block (Included)





AIW (x1)
Wood Block



ADZ (x3)

SEC 4.1

WALL PANEL INSTALLATION

Fold **Corner Wall Panel 105 (AGN)**. Fit tabs of Panel into the front, left corner of your Floor (while facing shed). Place a **Wood Block (AIW)** under the floor panel, directly under the first tab, then pull down on the Corner Wall Panel until the tab snaps into place. Move the Wood Block under the next tab and repeat.

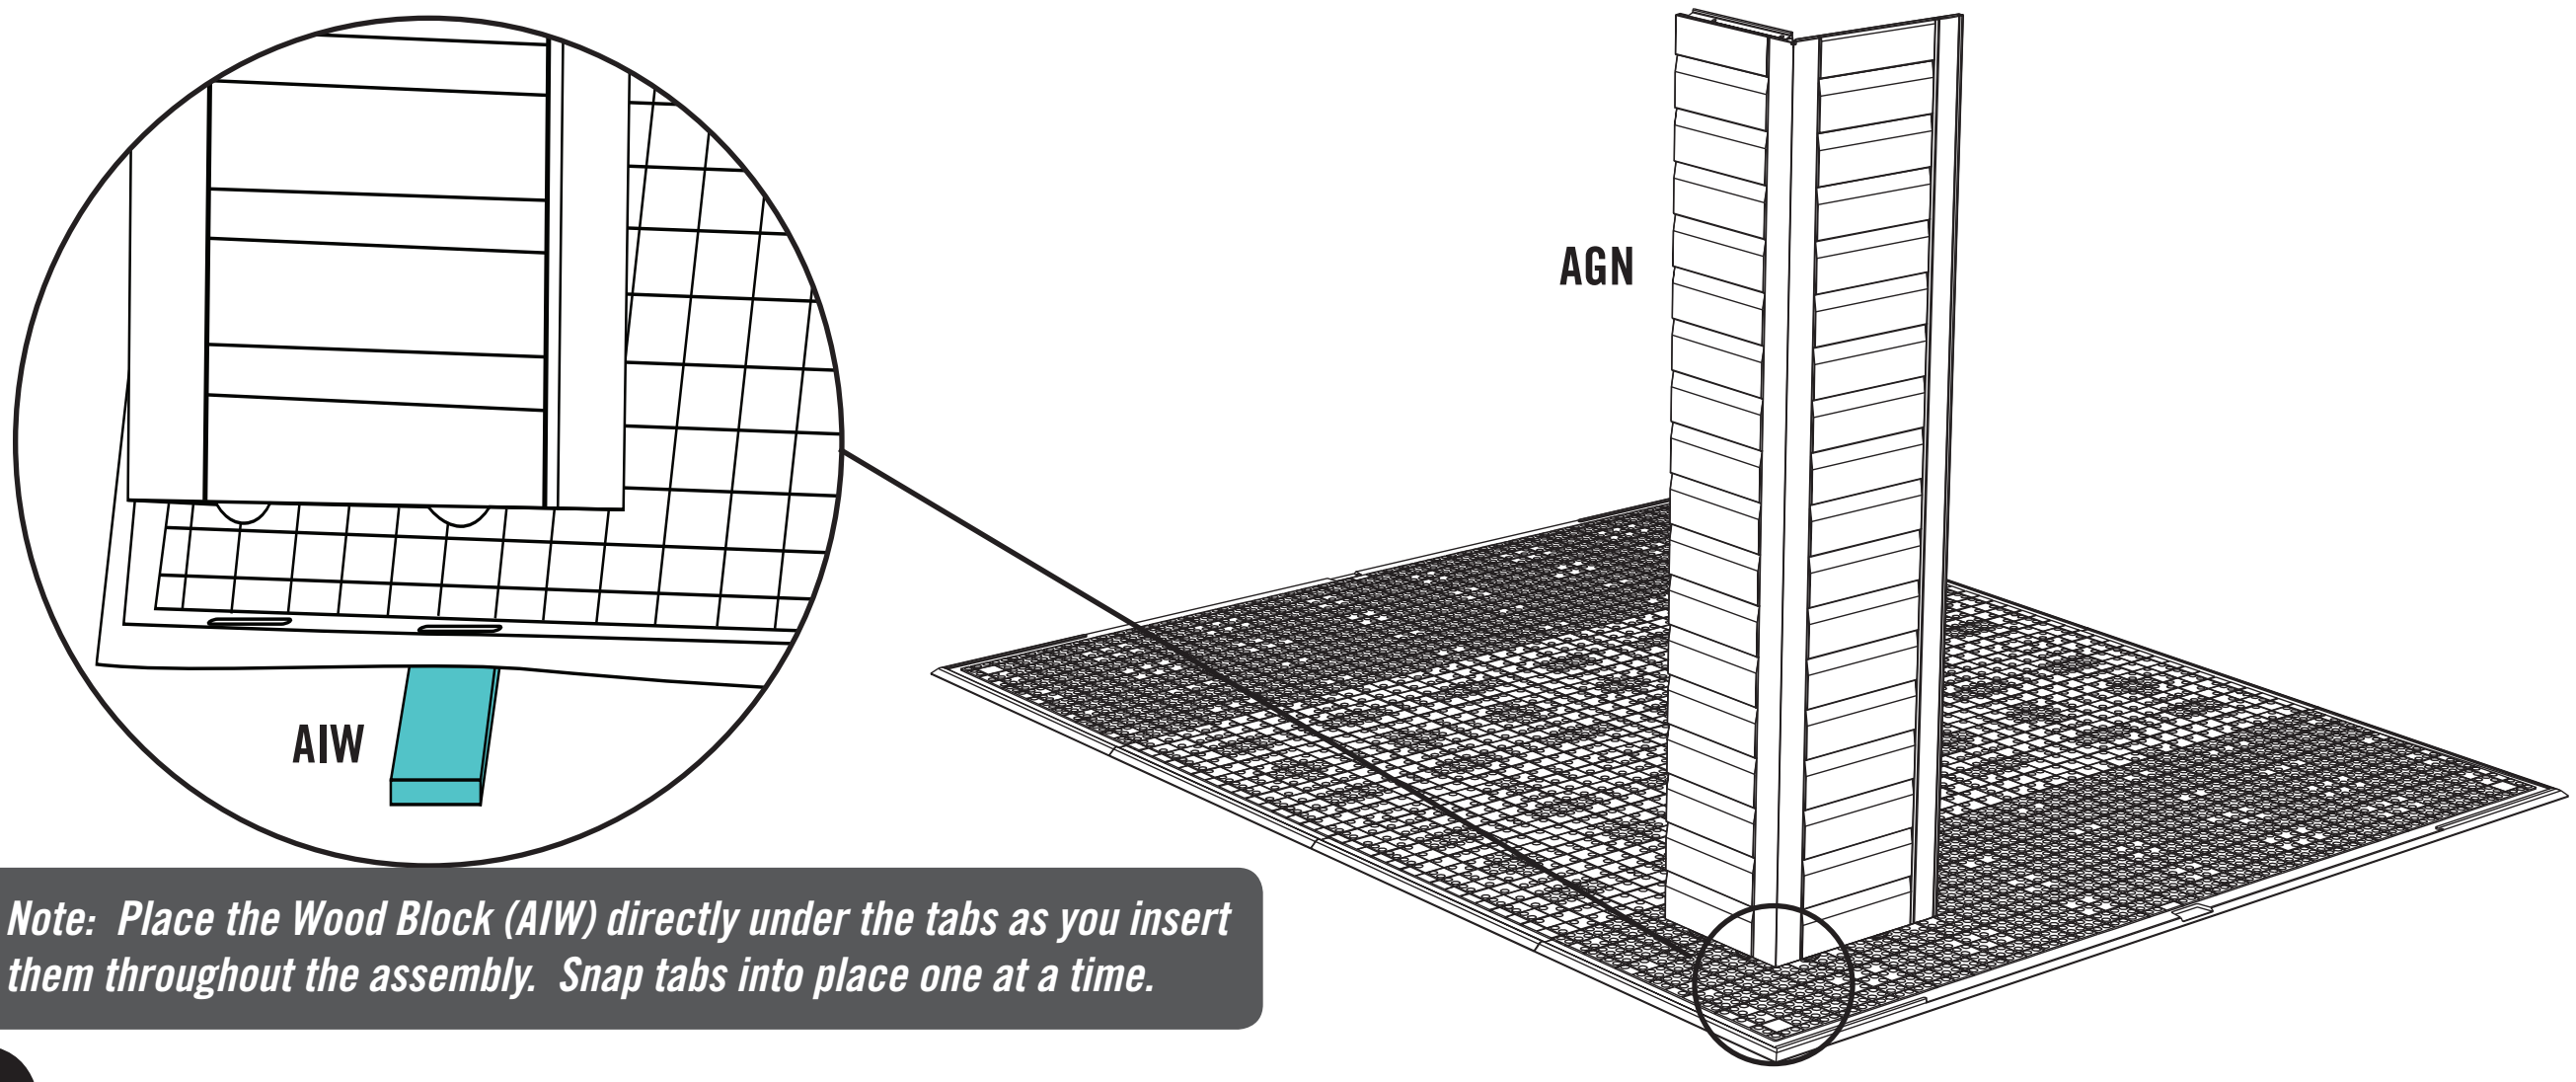

Note: Place the Wood Block (AIW) directly under the tabs as you insert them throughout the assembly. Snap tabs into place one at a time.

SEC 4.2

Snap two **Wall Panels (AHD)** and a **Window Wall Panel (AHH)** into place along the left side of the shed. **The Window Wall Panel may be inserted in any side Wall Panel position.** Ensure the tops of the Wall Panels are even and the holes align. Insert a **1/4" x 5/8" Pan-Head Screw (ADZ)** through the top hole of each set of Panels to fasten the Panels together as shown. You'll finish fastening the panels together towards the end of this section.

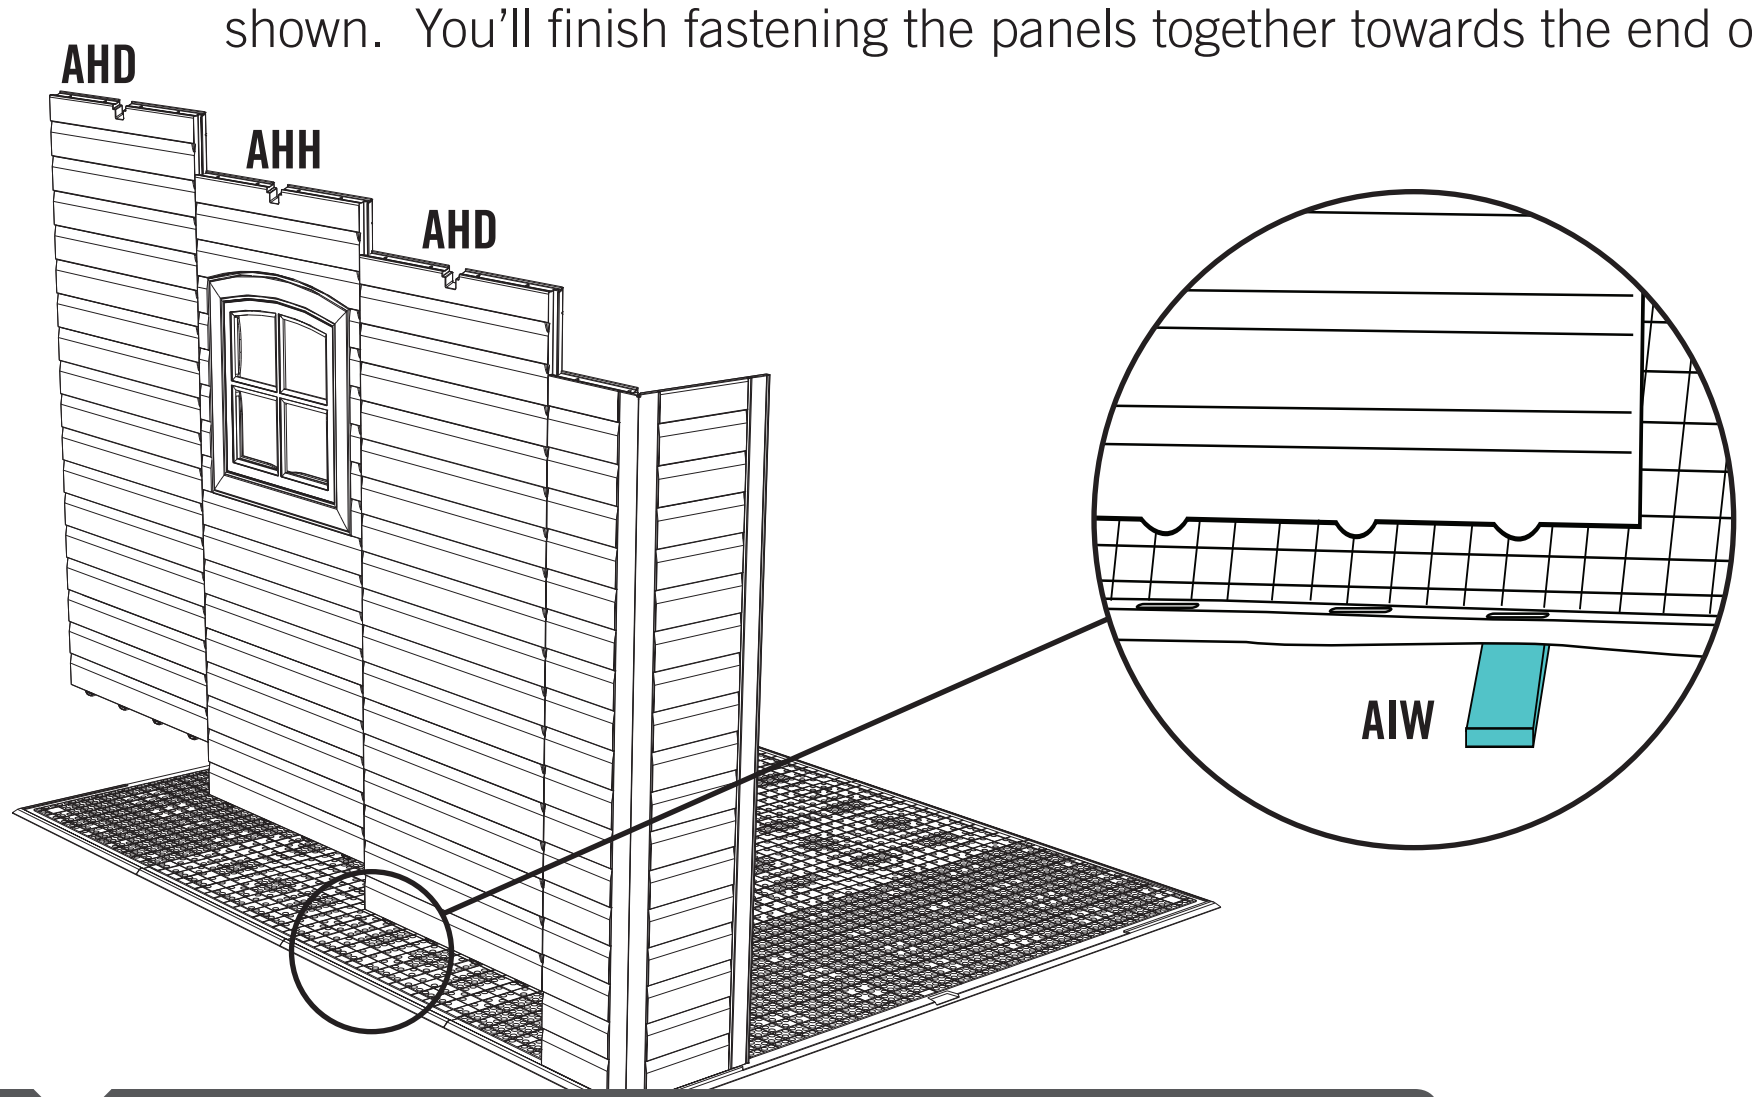

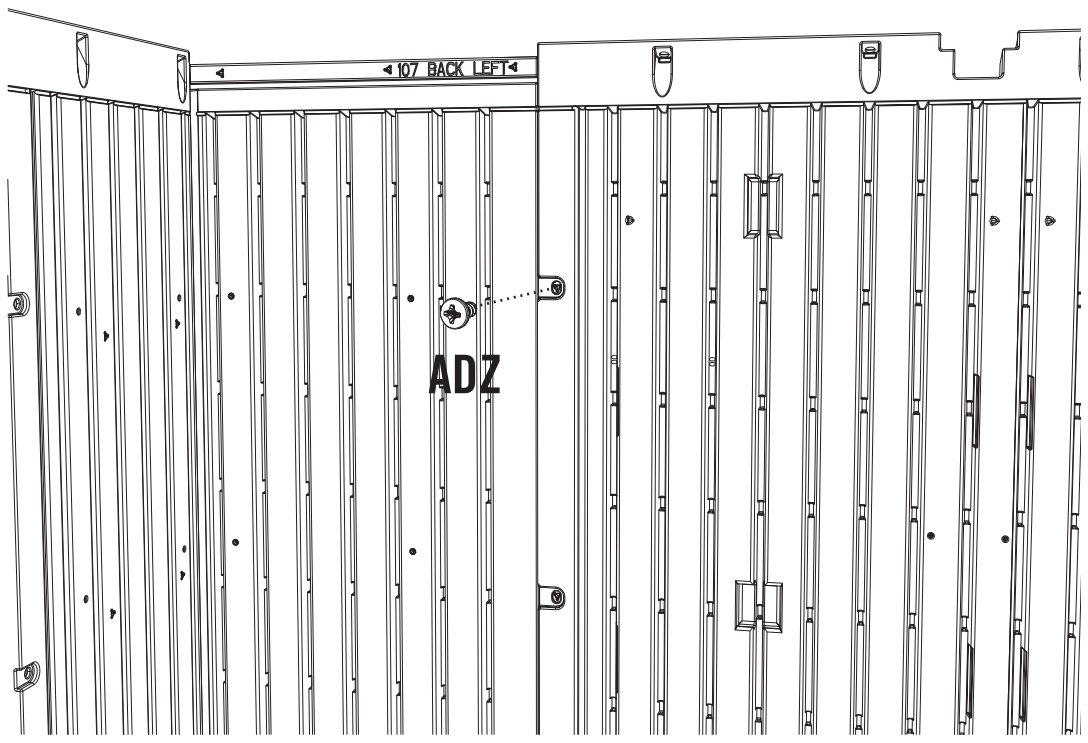

Note: A second person should apply pressure on opposite side of the Wall Panels for easier insertion of the Screw. Do not overtighten Screw.

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

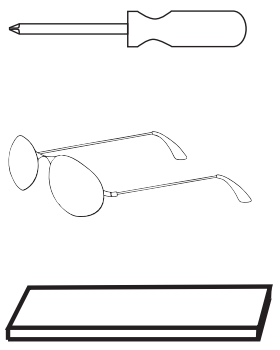

AIW (x1)
Wood Block



ADZ (x3)

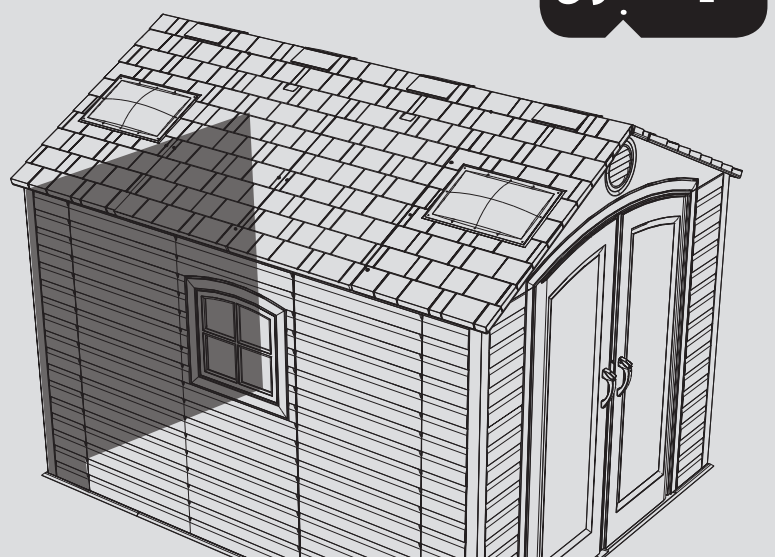

SEC 4.3

Fold **Corner Wall Panel 107 (AGL)**. Snap into place and fasten at the top hole with the required hardware.

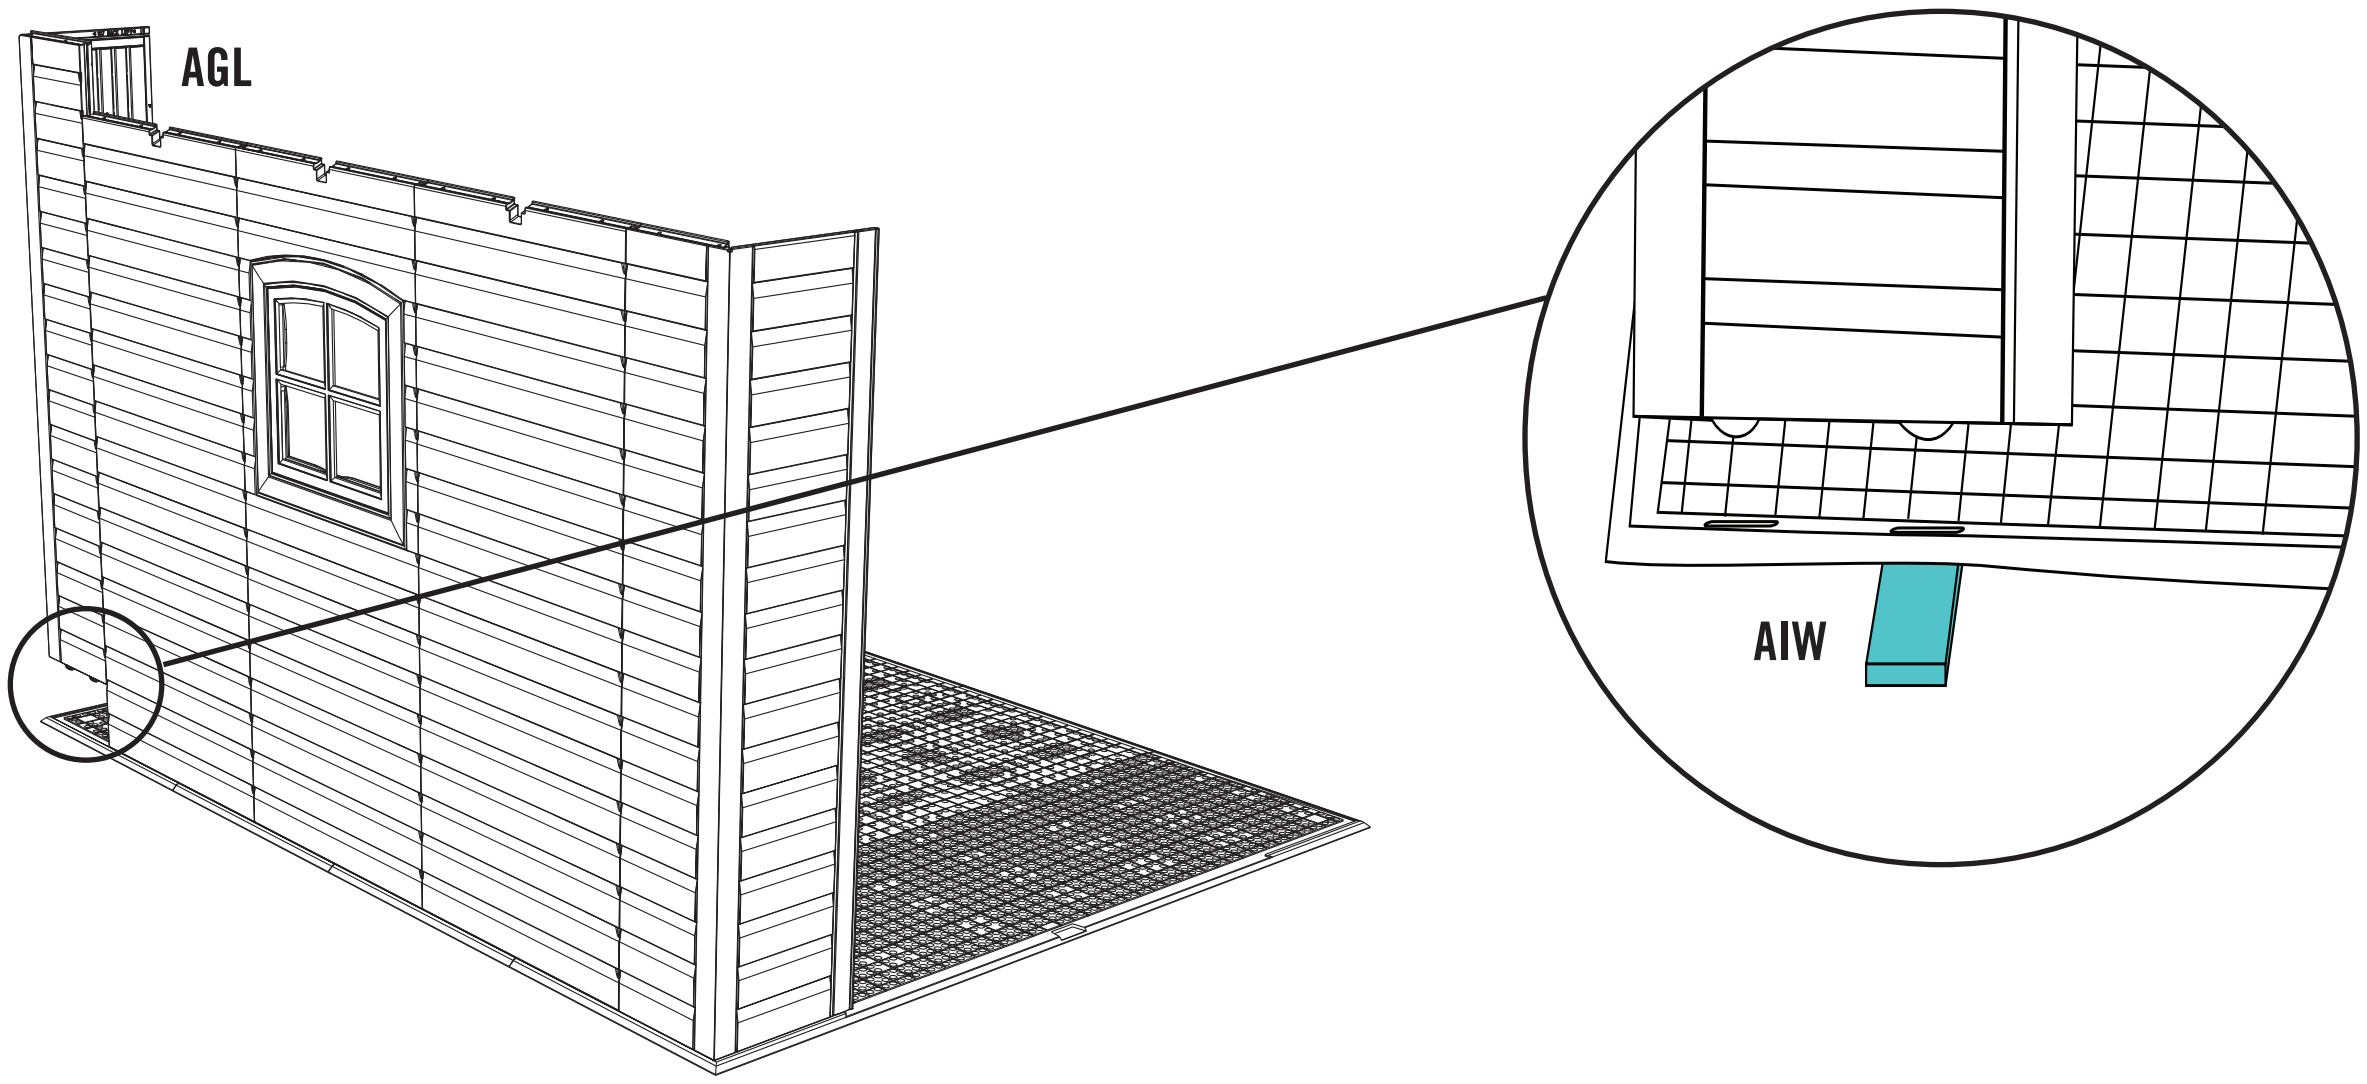

SEC 4.4

Insert two **Wall Panels (AHD)** along the back side of shed. Ensure the tops are level and the holes line up before fastening the Panels through the top holes using the required hardware.

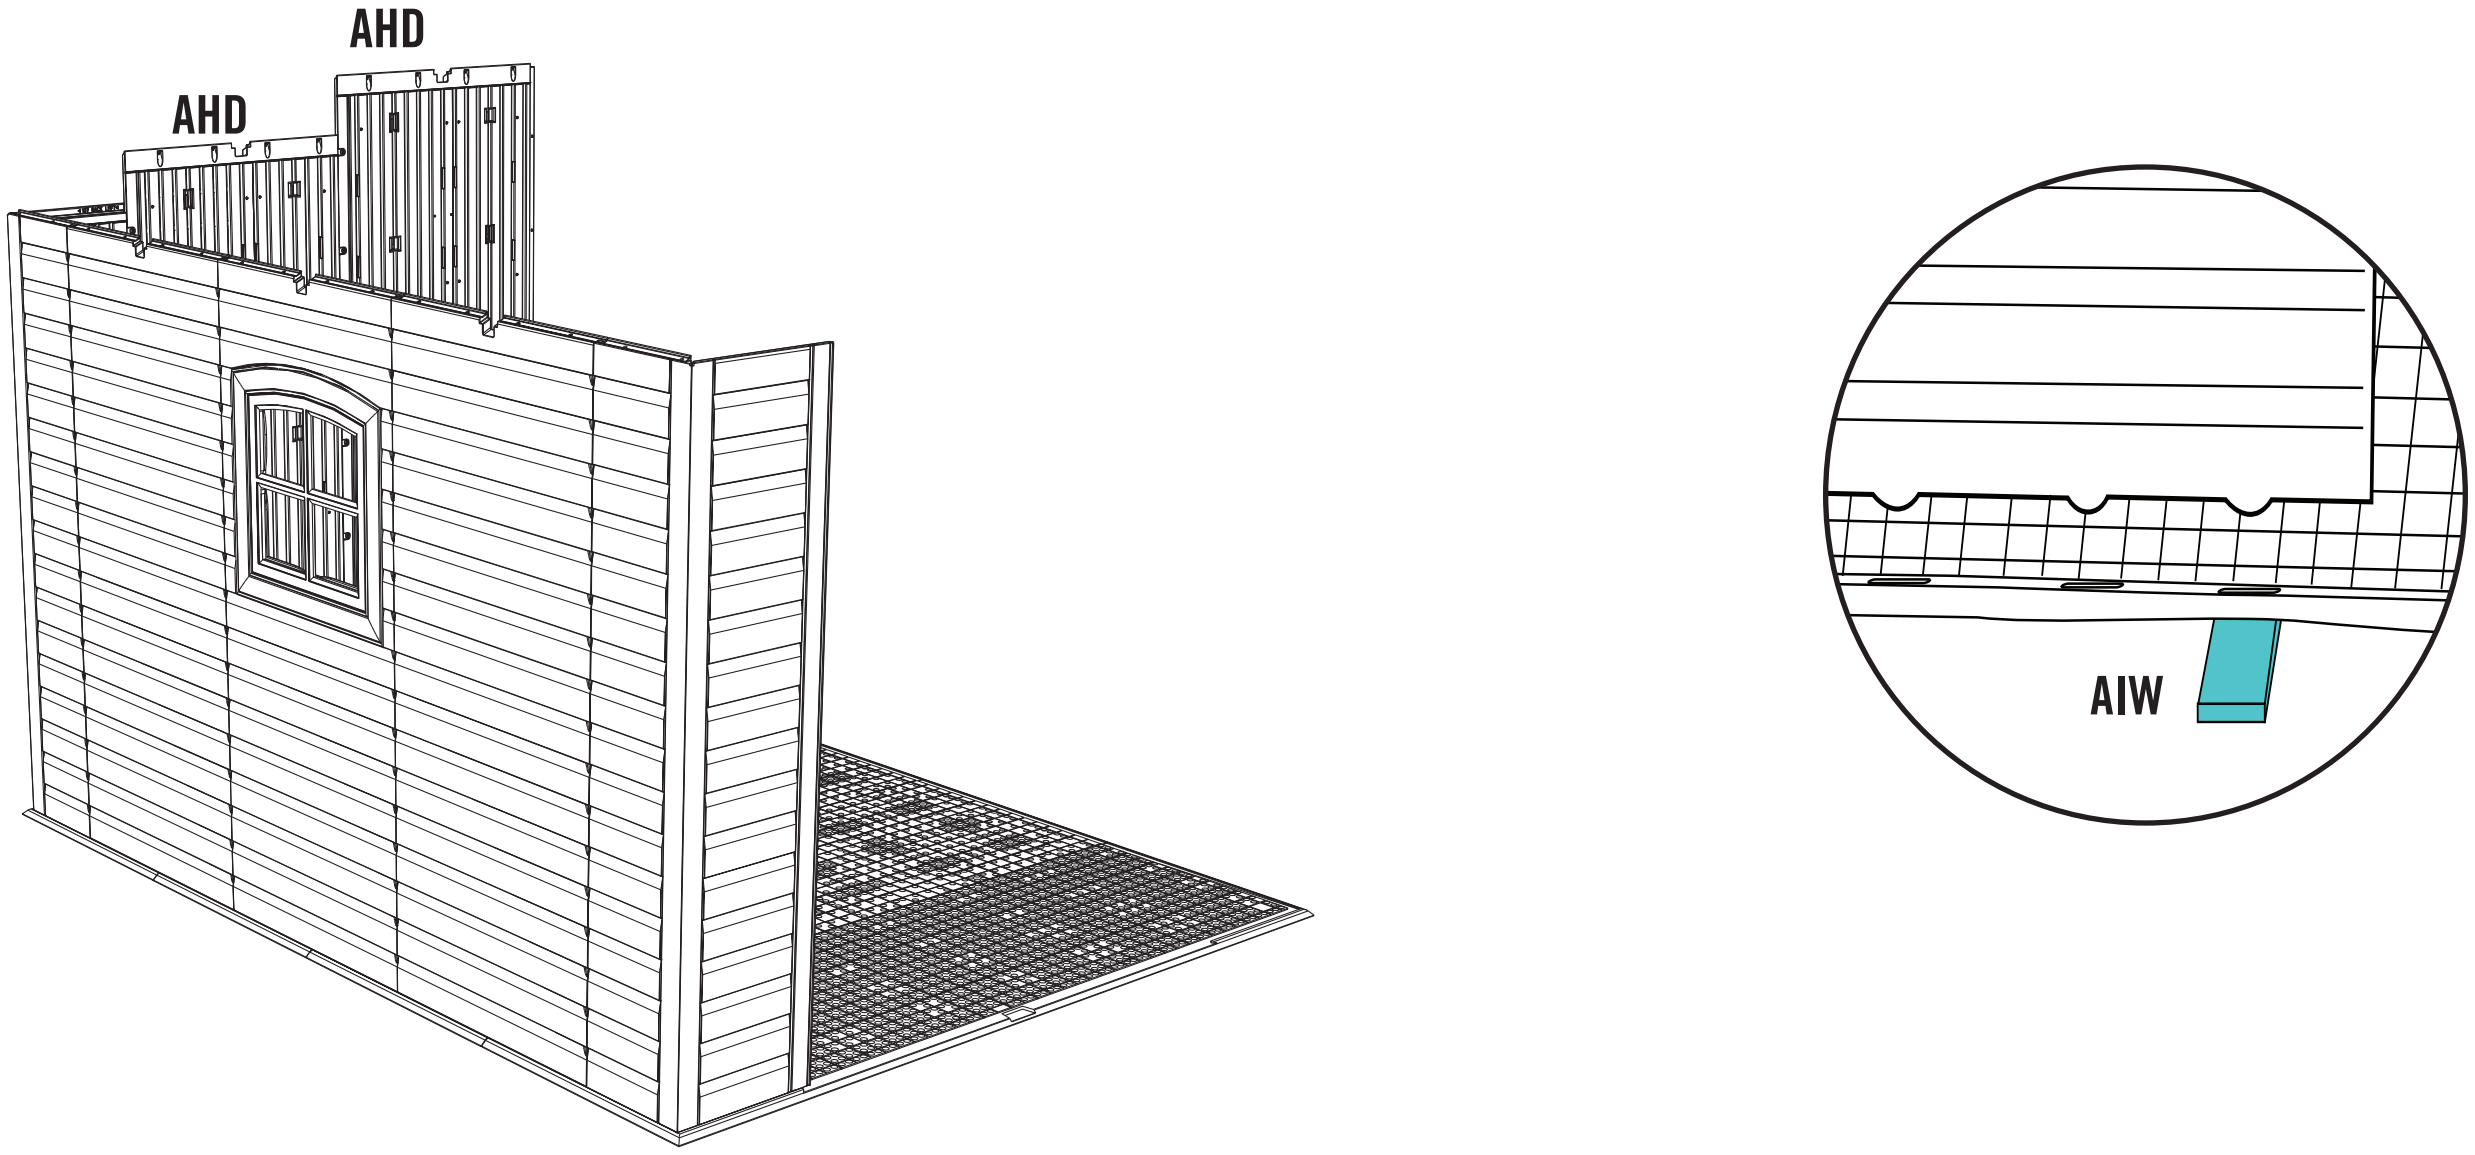

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



AIW (x1)
Wood Block



ADZ (x4)

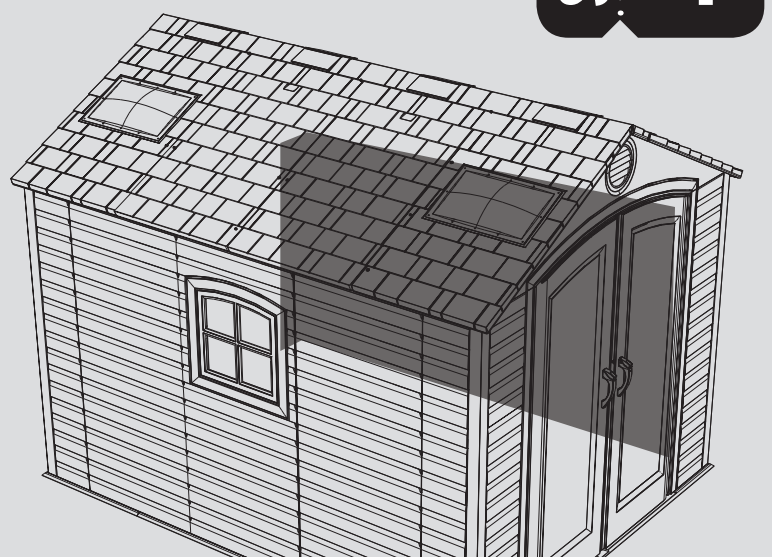

SEC 4.5

Fold **Corner Wall Panel 106 (AGW)** and fasten it to the rear Wall Panel through the top hole using the required hardware.

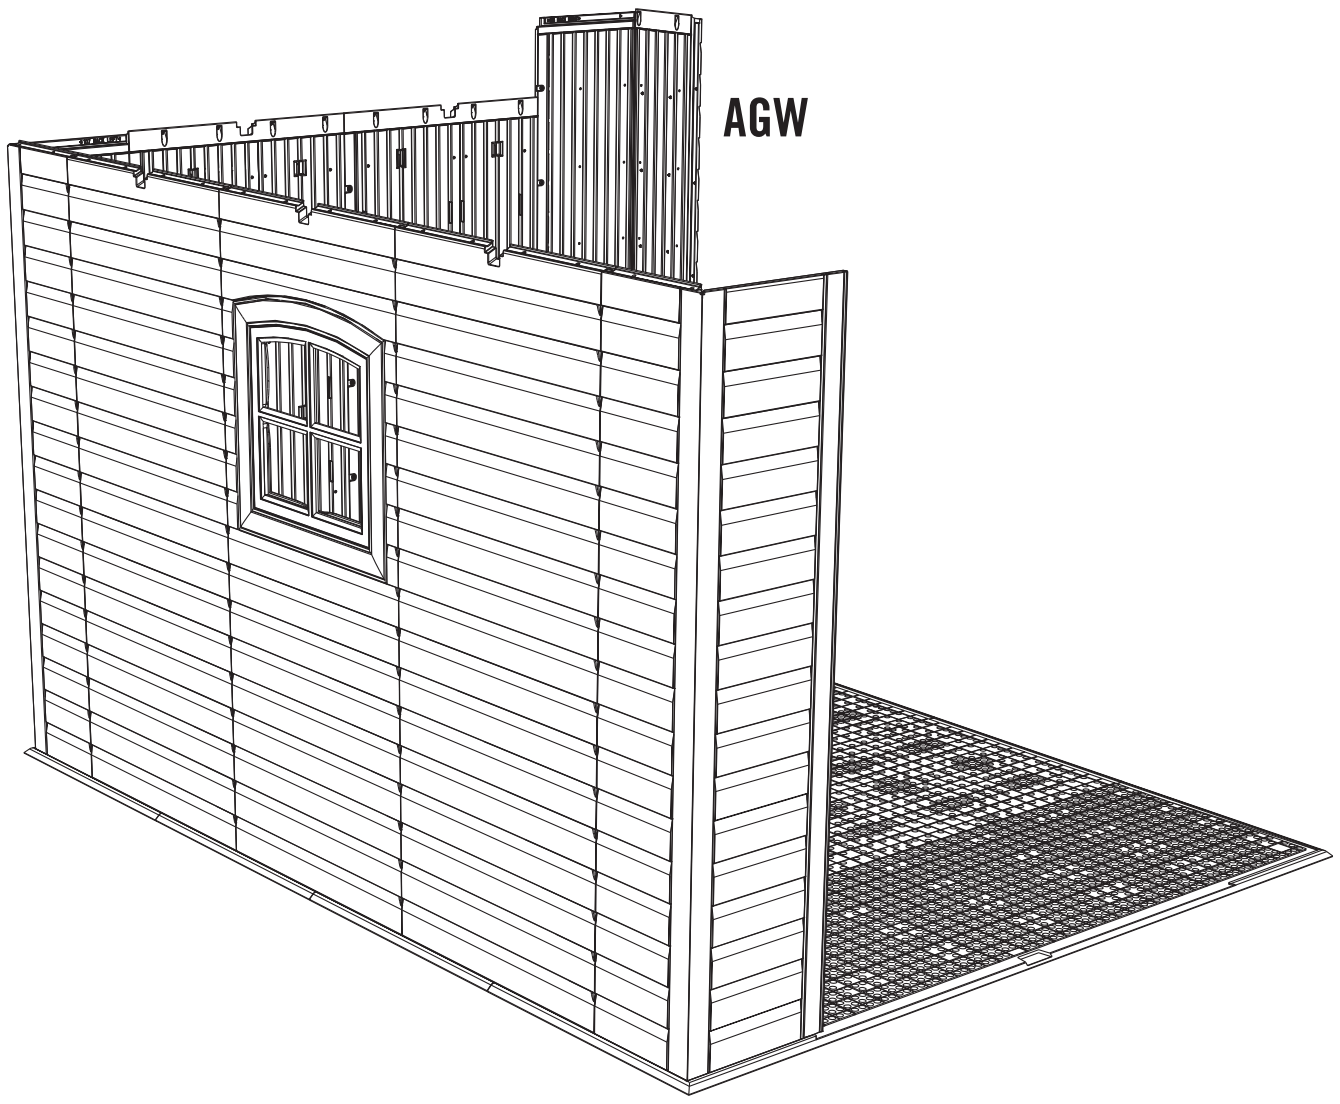

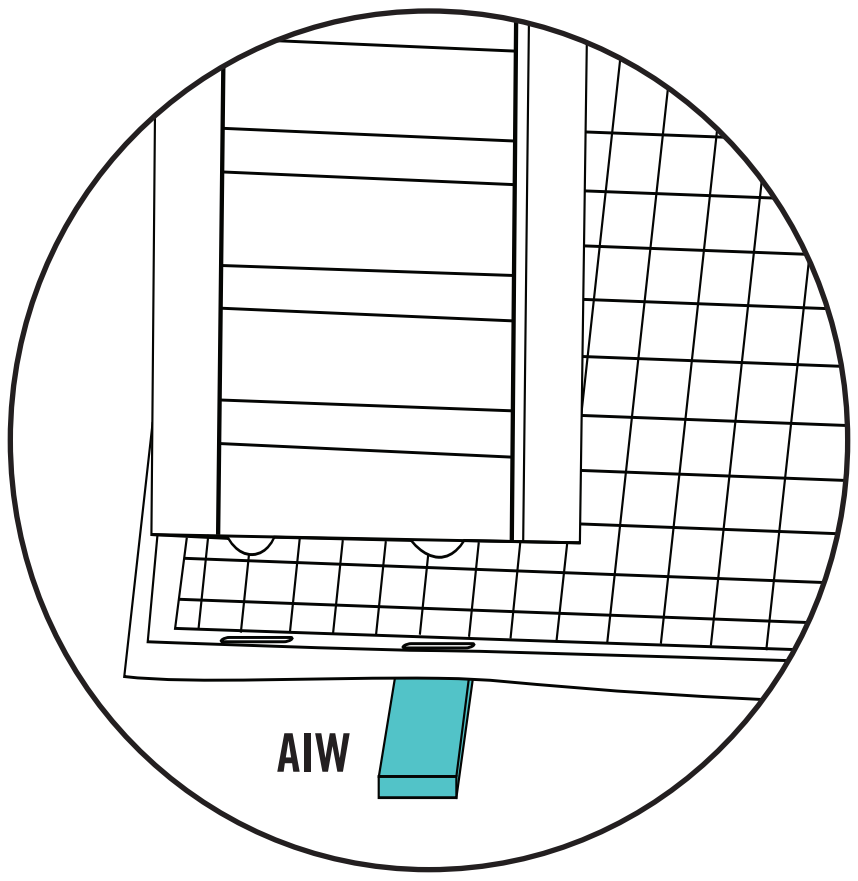

SEC 4.6

Snap three **Wall Panels (AHD)** into place along the right side of the shed. **The Window Wall Panel may be inserted in any side Wall Panel position.** Ensure the tops of the Wall Panels are even and the holes align. Insert a **1/4" x 5/8" Pan-Head Screw (ADZ)** through the top hole of each set of Panels to fasten the Panels together as shown.

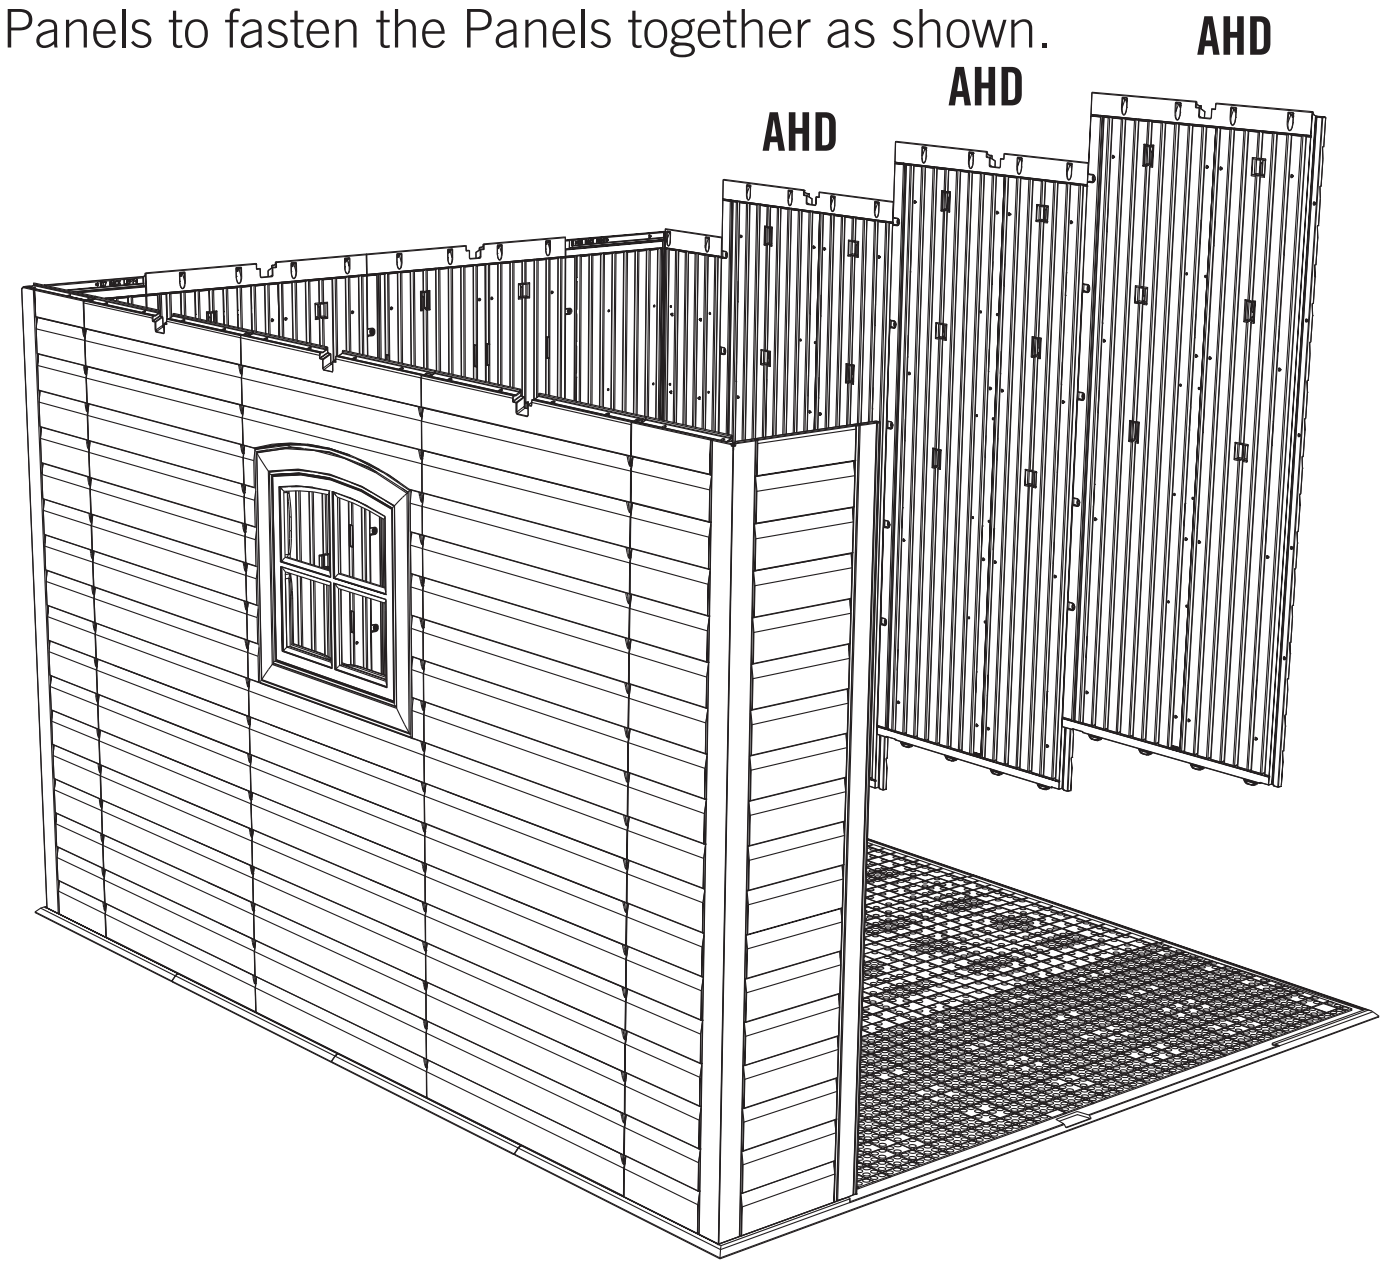

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

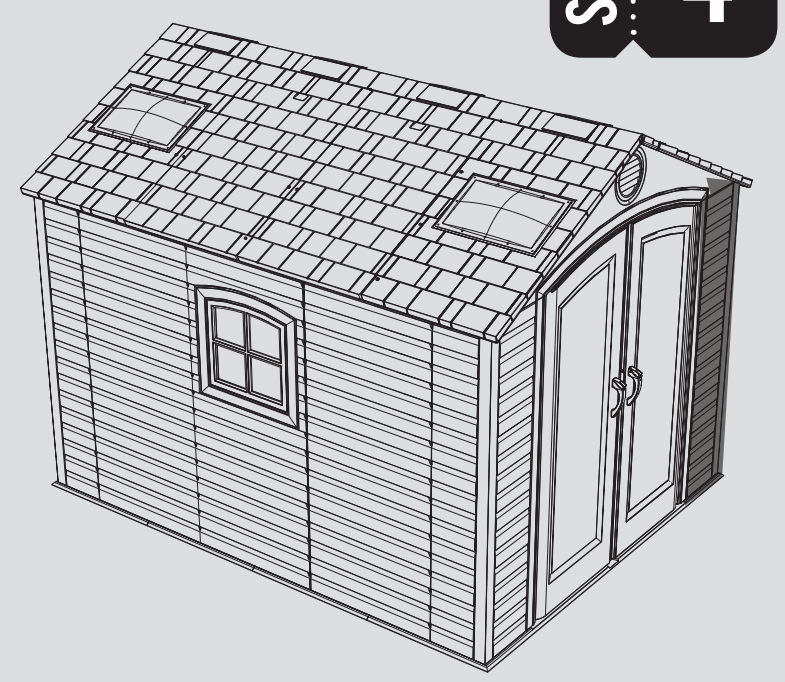

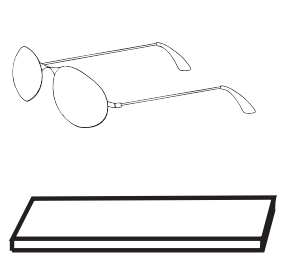

AIW (x1)
Wood Block



ADZ (x45)

SEC 4.7

Fold **Corner Wall Panel 104 (AGY)** and snap it into place at the right, front corner of the Floor as shown. Fasten it to the Wall Panel through the top hole using the required hardware. Finish fastening all Panels together with the rest of the **1/4” x 5/8” Pan-Head Screws (ADZ)** for all holes.

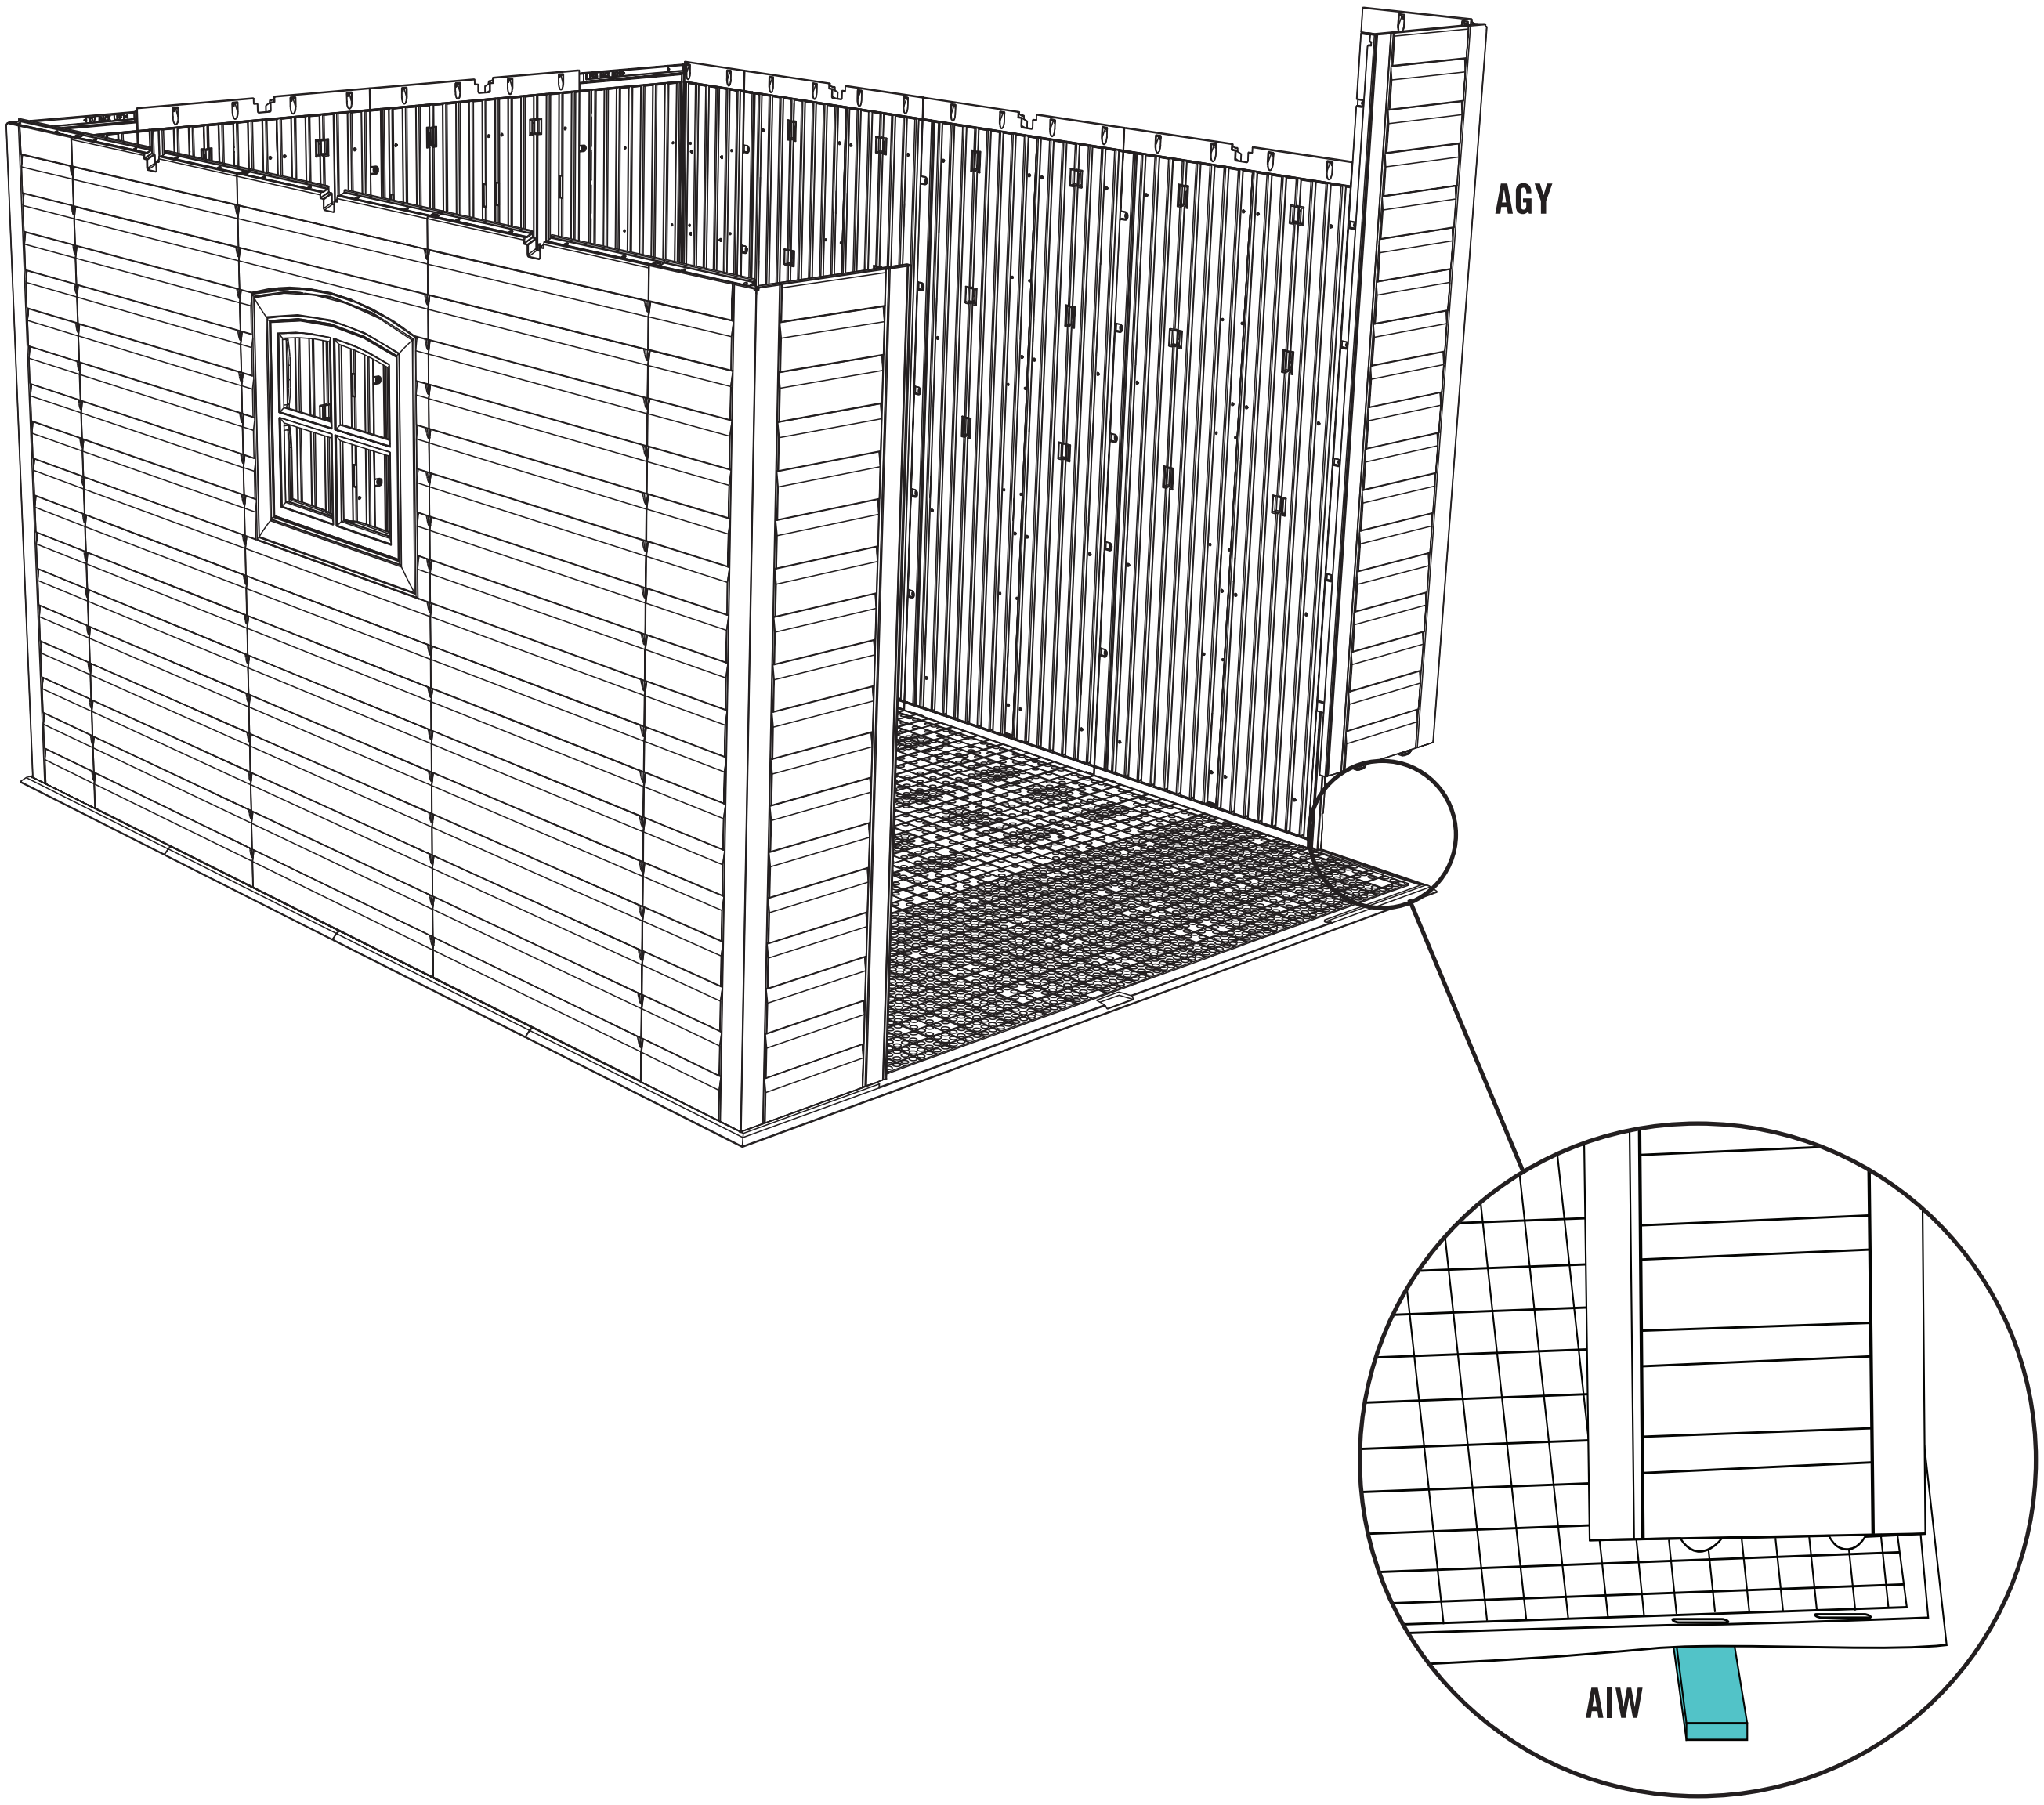

SEC 5 LEFT DOOR ASSEMBLY

HARDWARE REQUIRED

HARDWARE BAG REQUIRED: BEF

Hardware shown at actual size



ADW (x3)
#10 x 3/4” Pan-Head Screw



ABU (x2)
1/4” x 1 1/2” Carriage Bolt



ADJ (x2)
1/4" Cap Nut



AEE (x3)
#10 x 1/2” Flat Washer

Part shown at 25% of actual size



AHM (x2)
Deadbolt Latch



AIB (x1)
Left Door Strike Plate



AIA (x1)
Left Door Lock Bracket

Part shown at 15% of actual size



AHZ (x1)
Left Door Handle

METAL PARTS REQUIRED

METAL PARTS KIT REQUIRED: CTD

Part shown at 8% of actual size

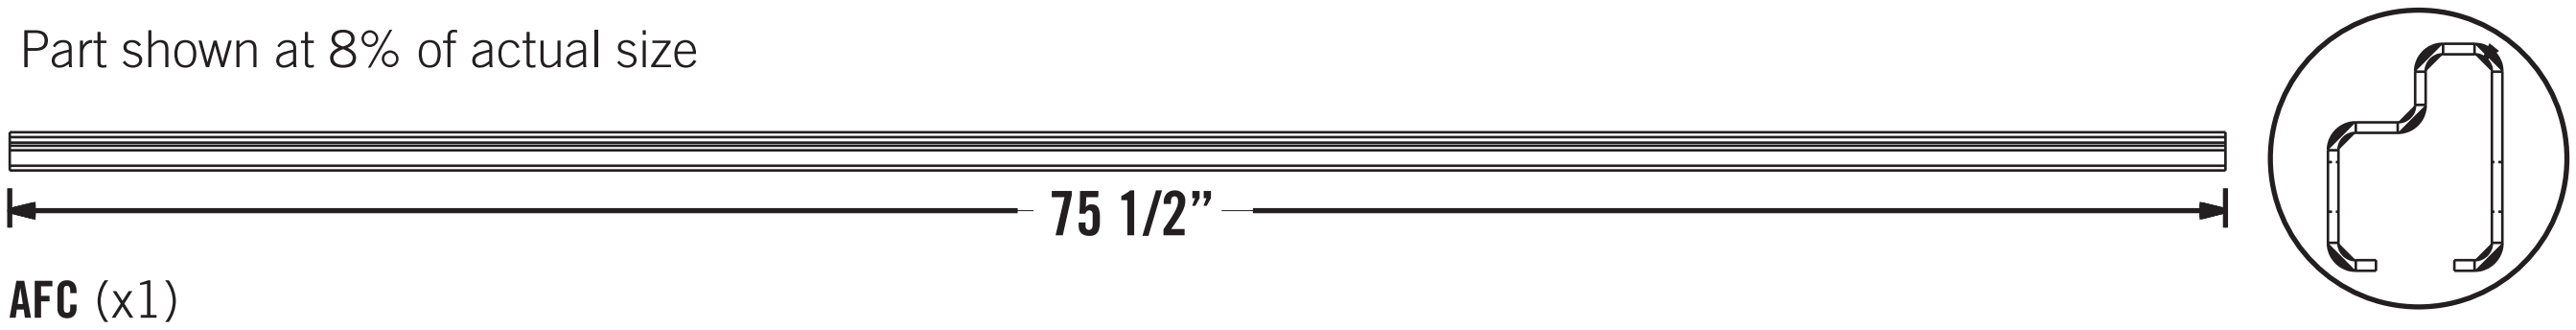

AFC (x1)
Door End Channel



CRD (x1)
Door Hinge Tube

PLASTIC PARTS REQUIRED

LOCATED IN BOX 1

Part shown at 4% of actual size

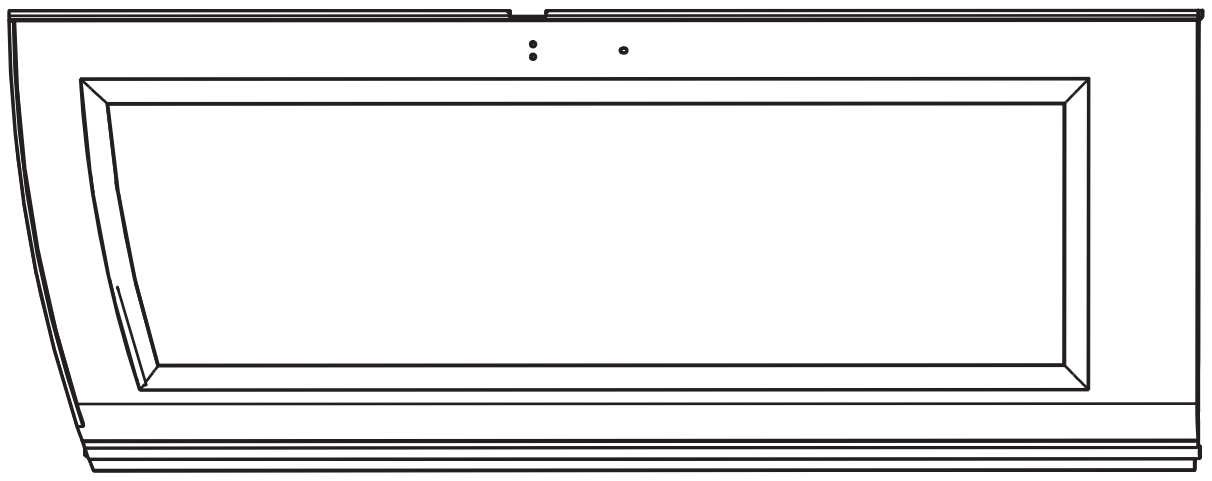

AGO (x1)
Left Door

TOOLS REQUIRED



Phillips Screwdriver

7/16” Wrench



Safety Glasses

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



AHM (x2)

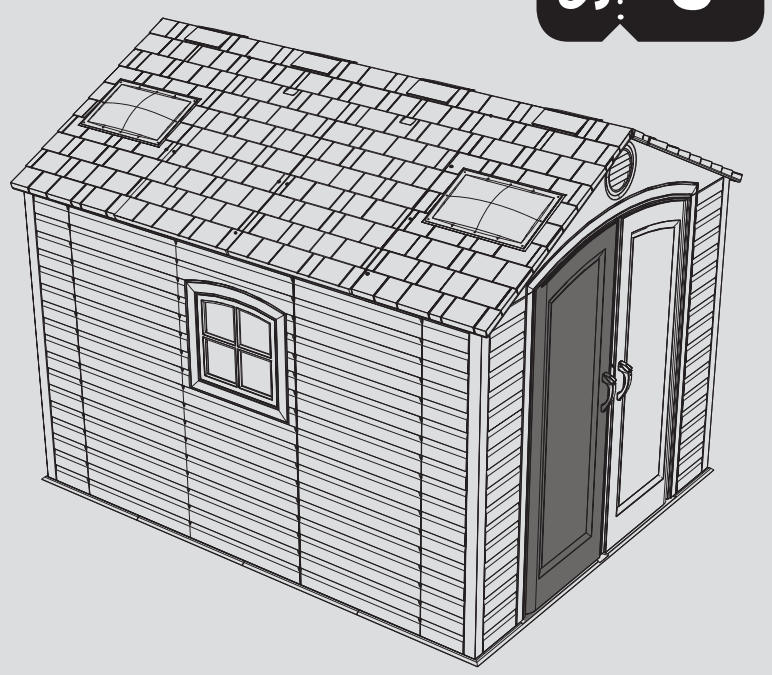

SEC 5

SEC 5.1 LEFT DOOR ASSEMBLY

Rest the **Left Shed Door (AGO)** with front side down. Slide a **Door Hinge Tube (CRD)** through the hole in the Door as shown.

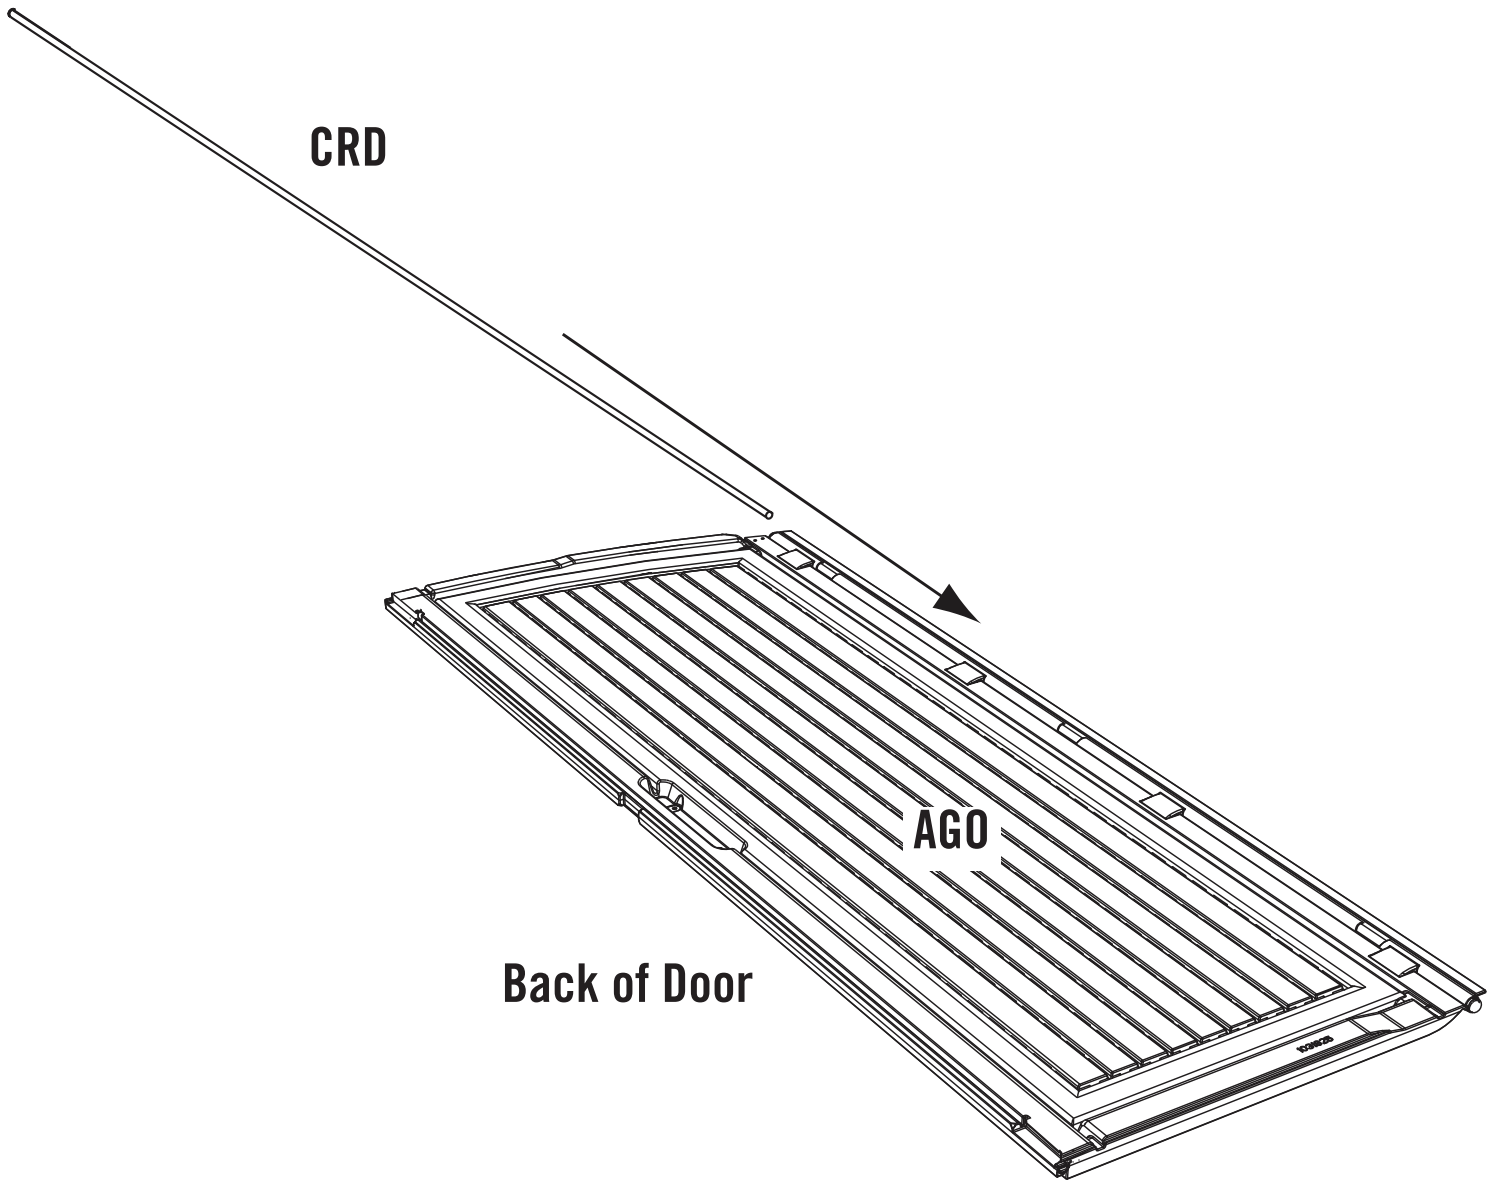
CRD
AGO
Back of Door

SEC 5.2

Position the **Deadbolt Latches (AHM)** in the slots at the top and bottom of the Door, then slide the **Door End Channel (AFC)** onto the Door as shown.

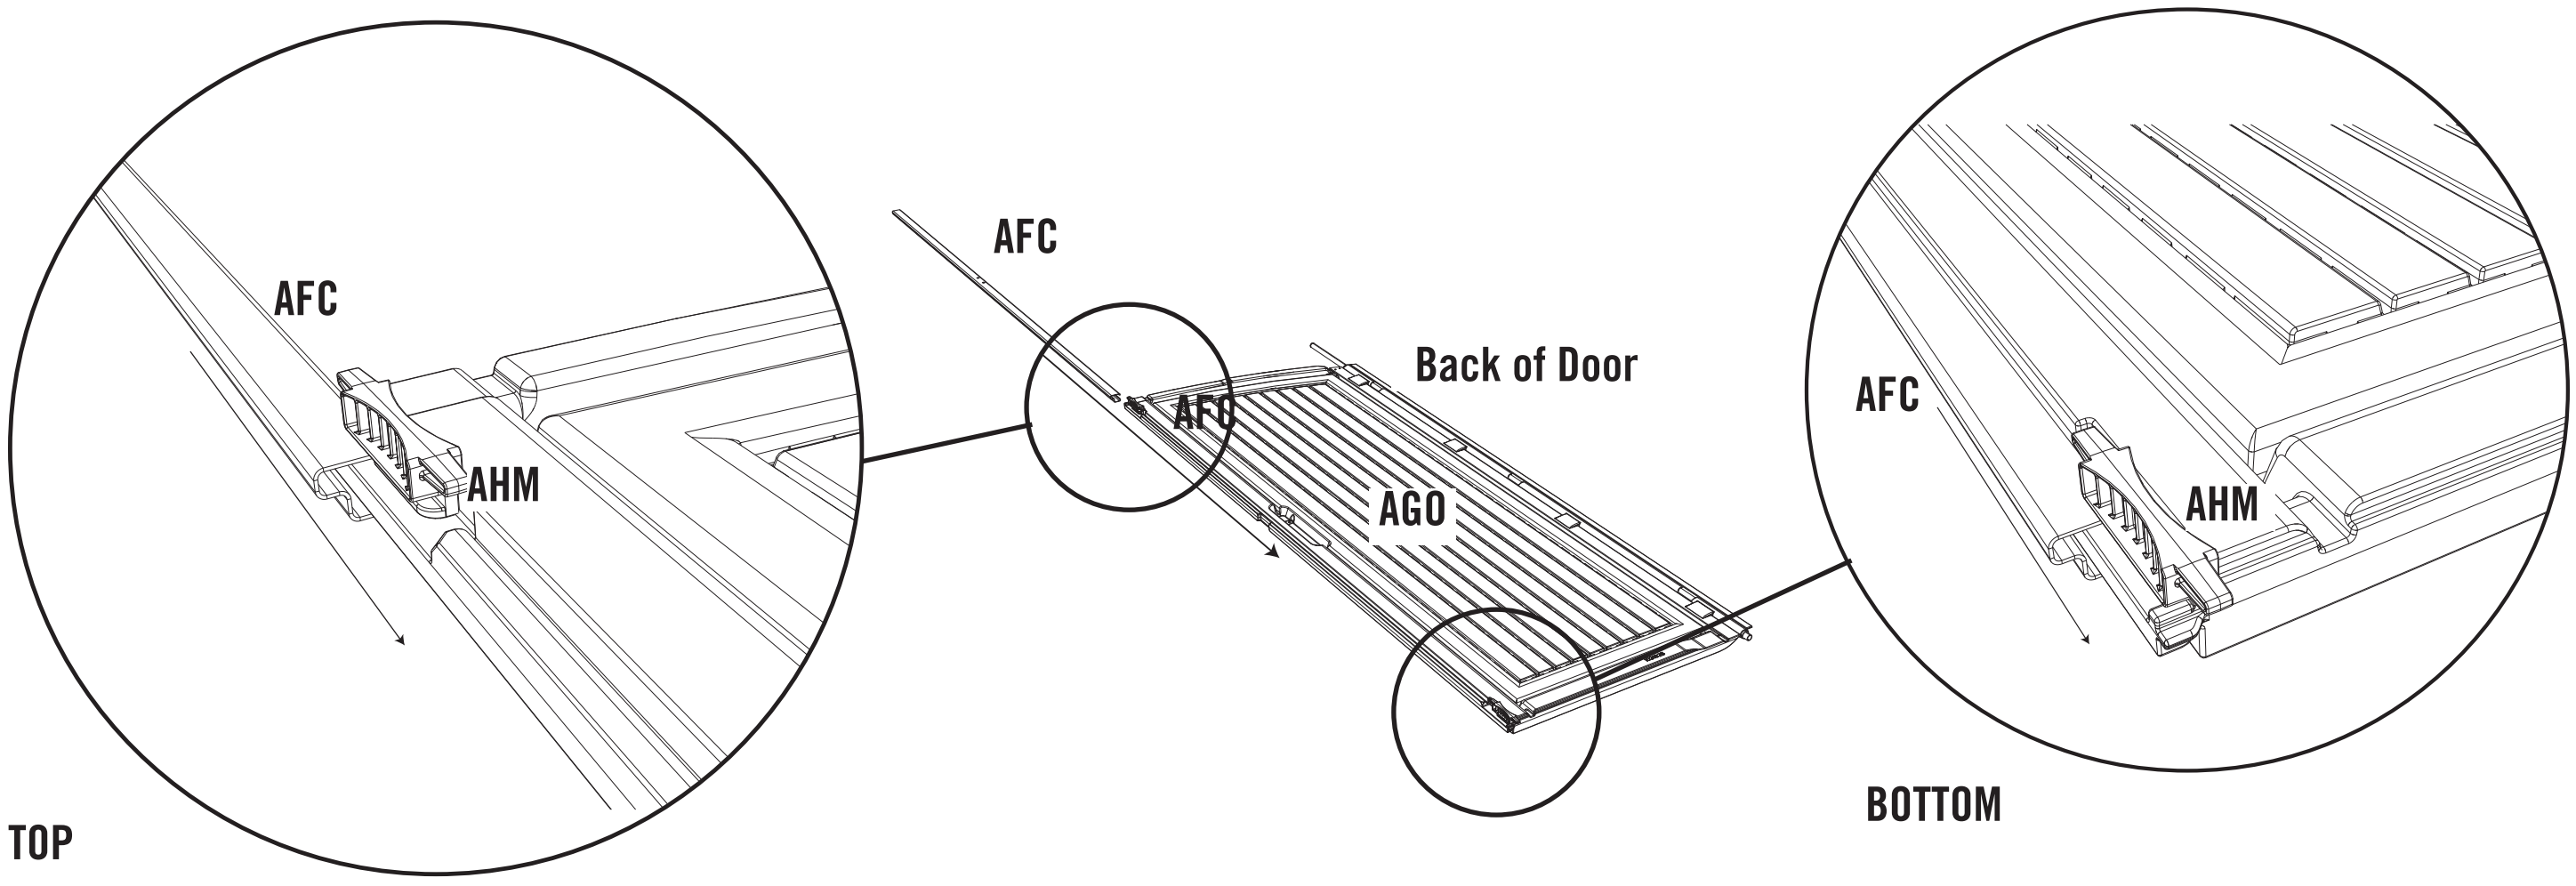
AFC
AHM
TOP
AFC
AFC
Back of Door
AGO
AFC
AHM
BOTTOM

Note: The Door End Channel fits onto Door with the flat side up (facing the Deadbolt Latches).

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

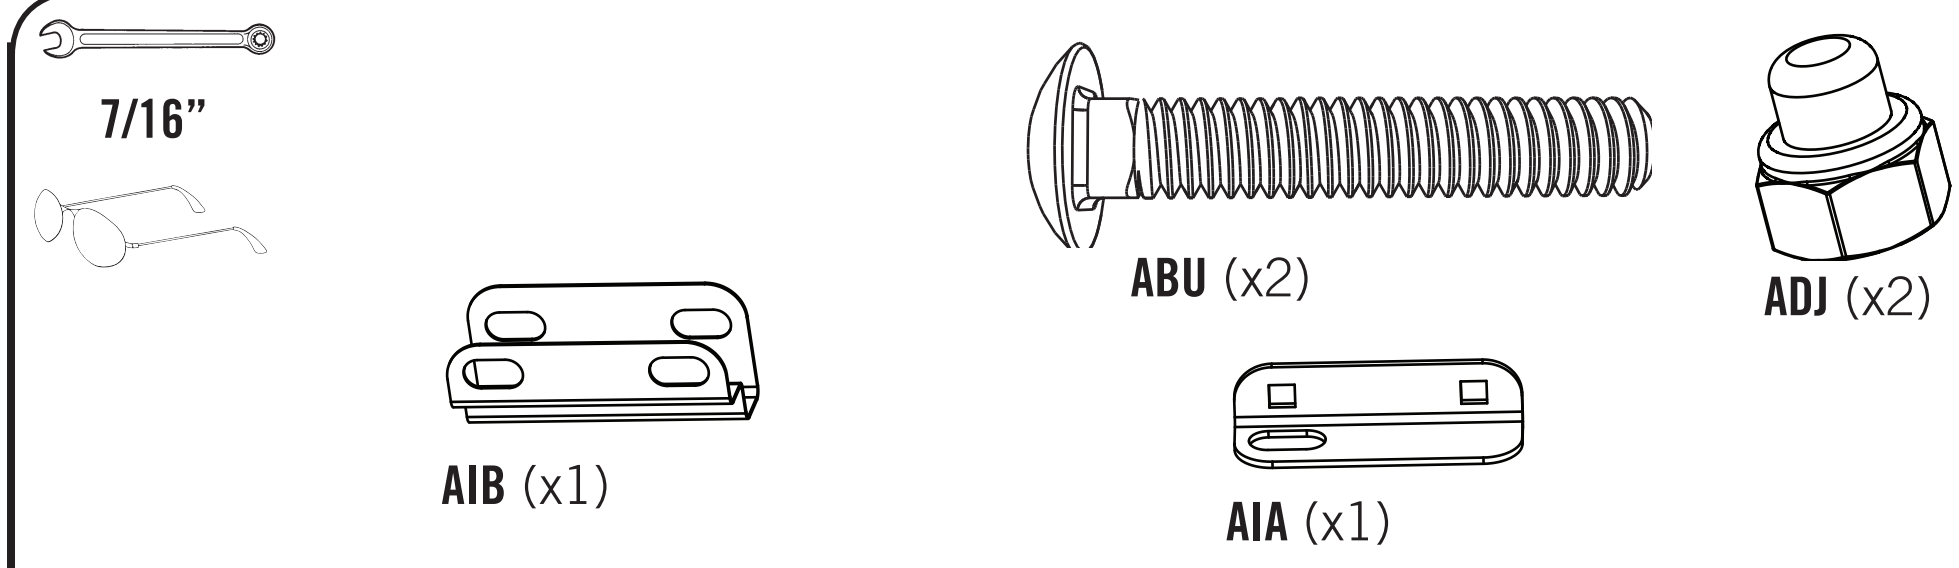

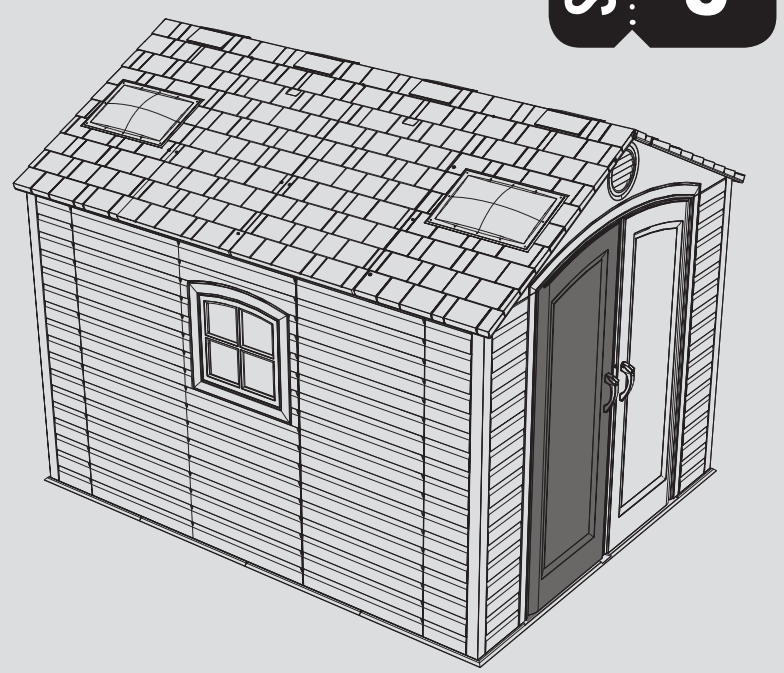

SEC 5.3

Slip the **Left Door Strike Plate (AIB)** over the Left Shed Door and align the holes.

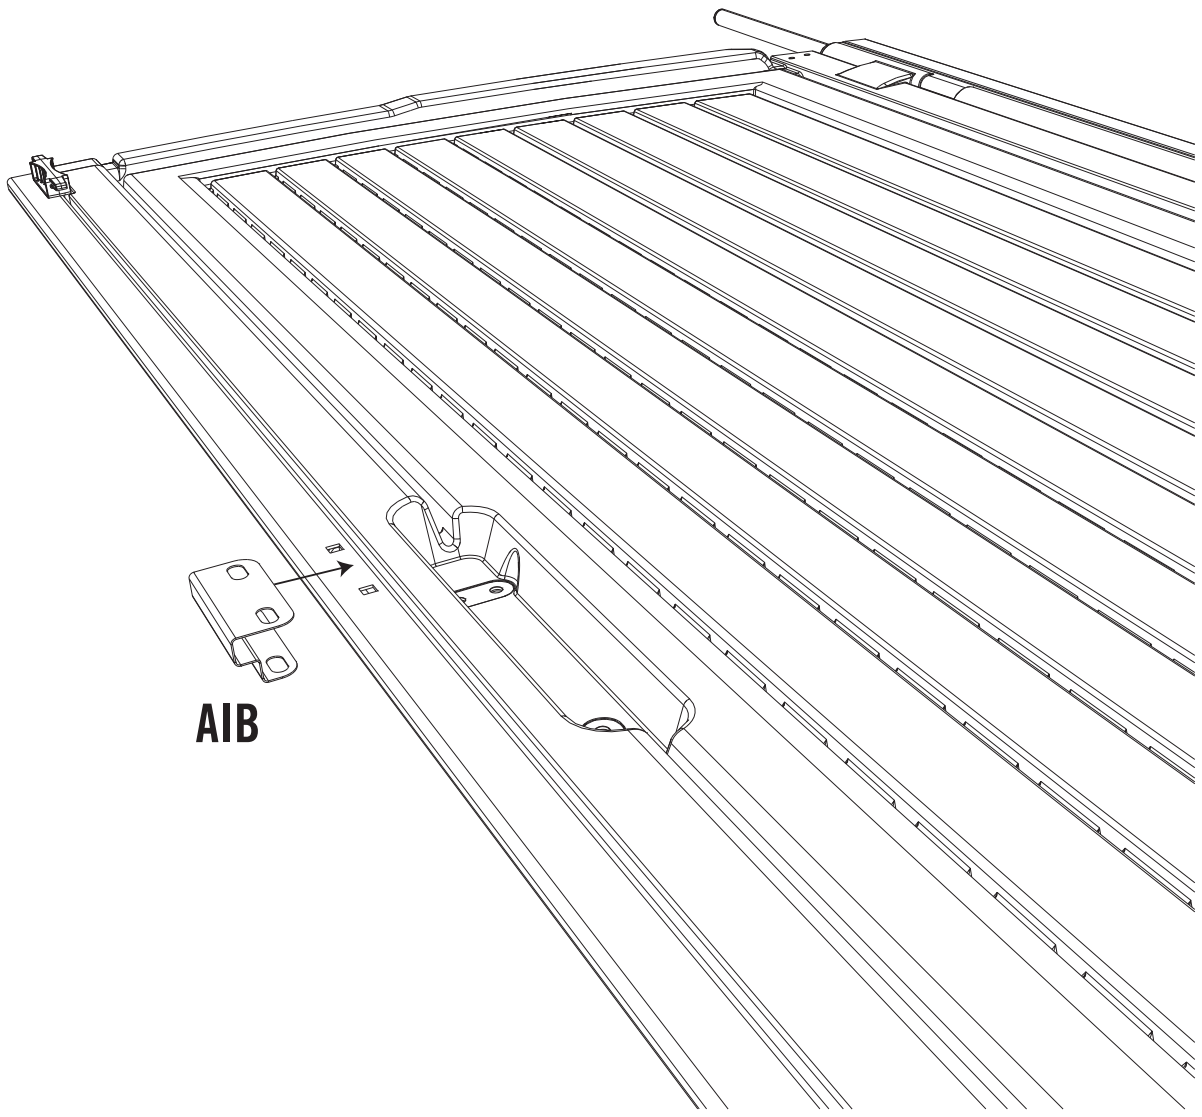

Note: You may need to nudge the Door End Channel to make these holes line up with the gap in the Door.

SEC 5.4

Attach the **Left Door Lock Bracket (AIA)** to the Left Door Strike Plate with two **1/4” x 1 1/2” Carriage Bolts (ABU)** and two **1/4” Cap Nuts (ADJ)**.

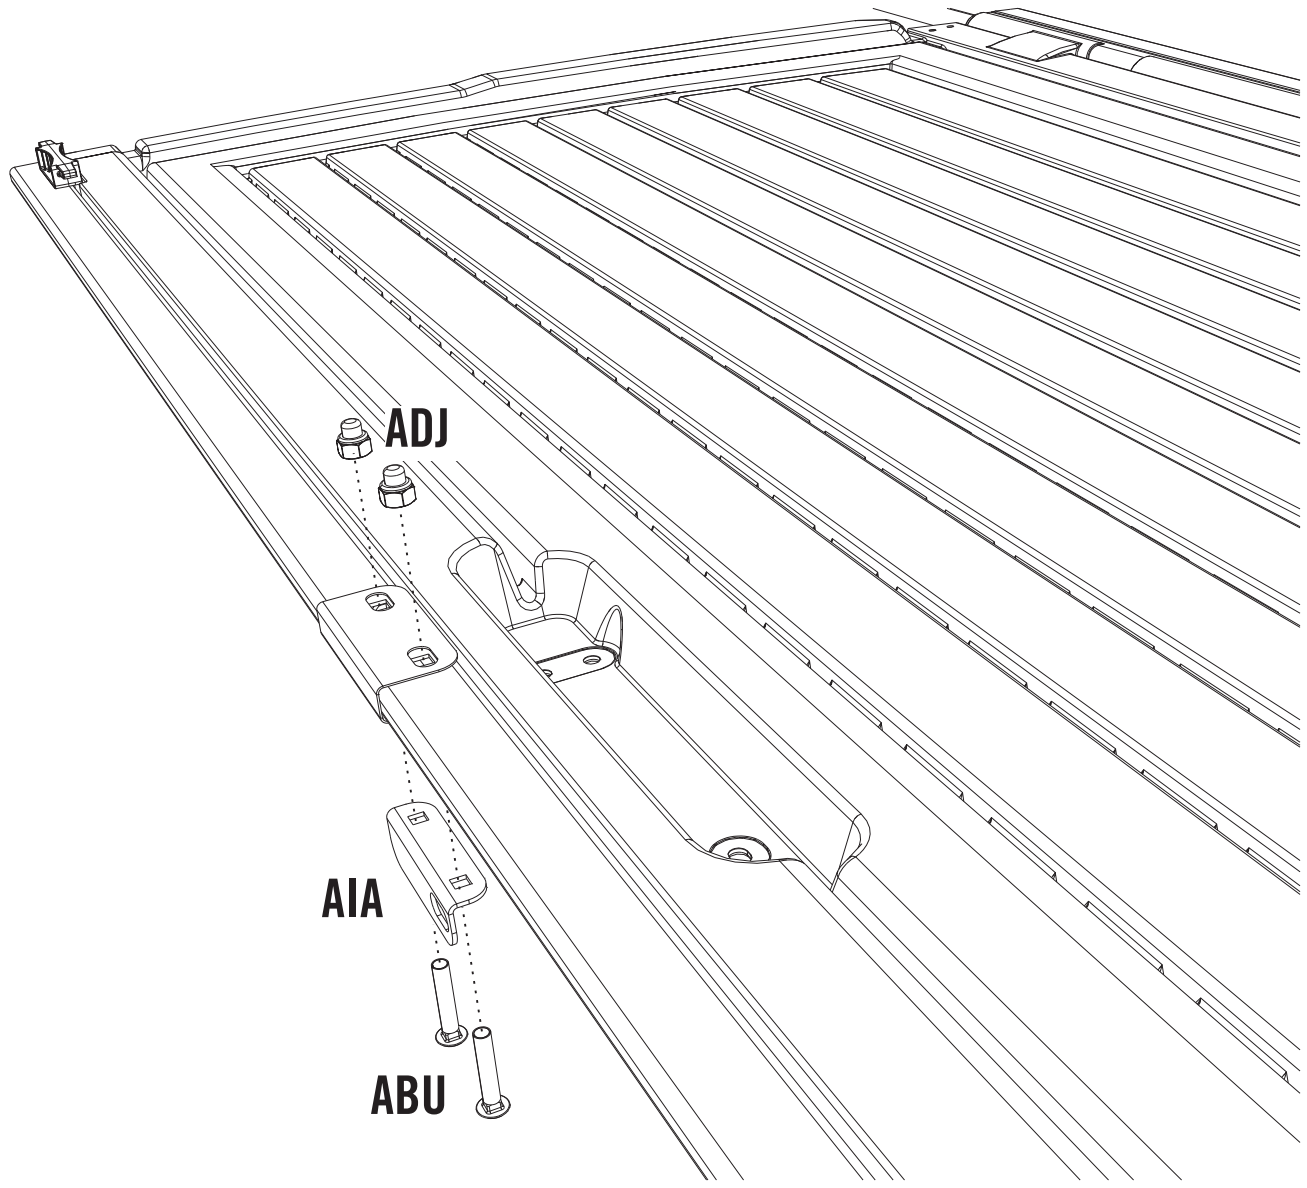

WARNING

Do not overtighten the Cap Nut. If the end of the Bolt breaks through the plastic cap, call our Customer Service Department. Exposed threads on the end of the Bolt may cause serious injuries.

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

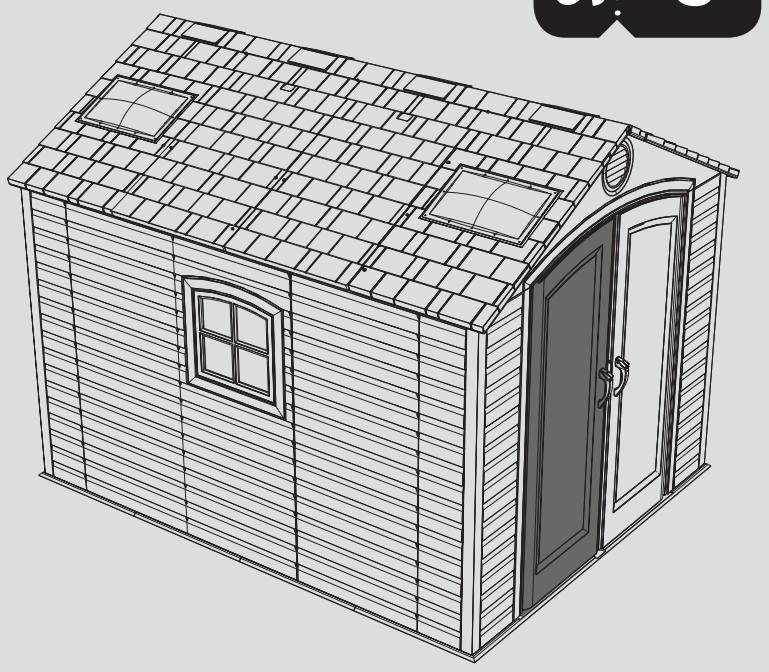





ADW (x3)



AEE (x3)

SEC

5.5

Attach the **Left Door Handle (AHZ)** using three (3) **#10 x 1/2" Flat Washers (AEE)** and three (3) **#10 x 3/4" Pan-Head Screws (ADW)**.

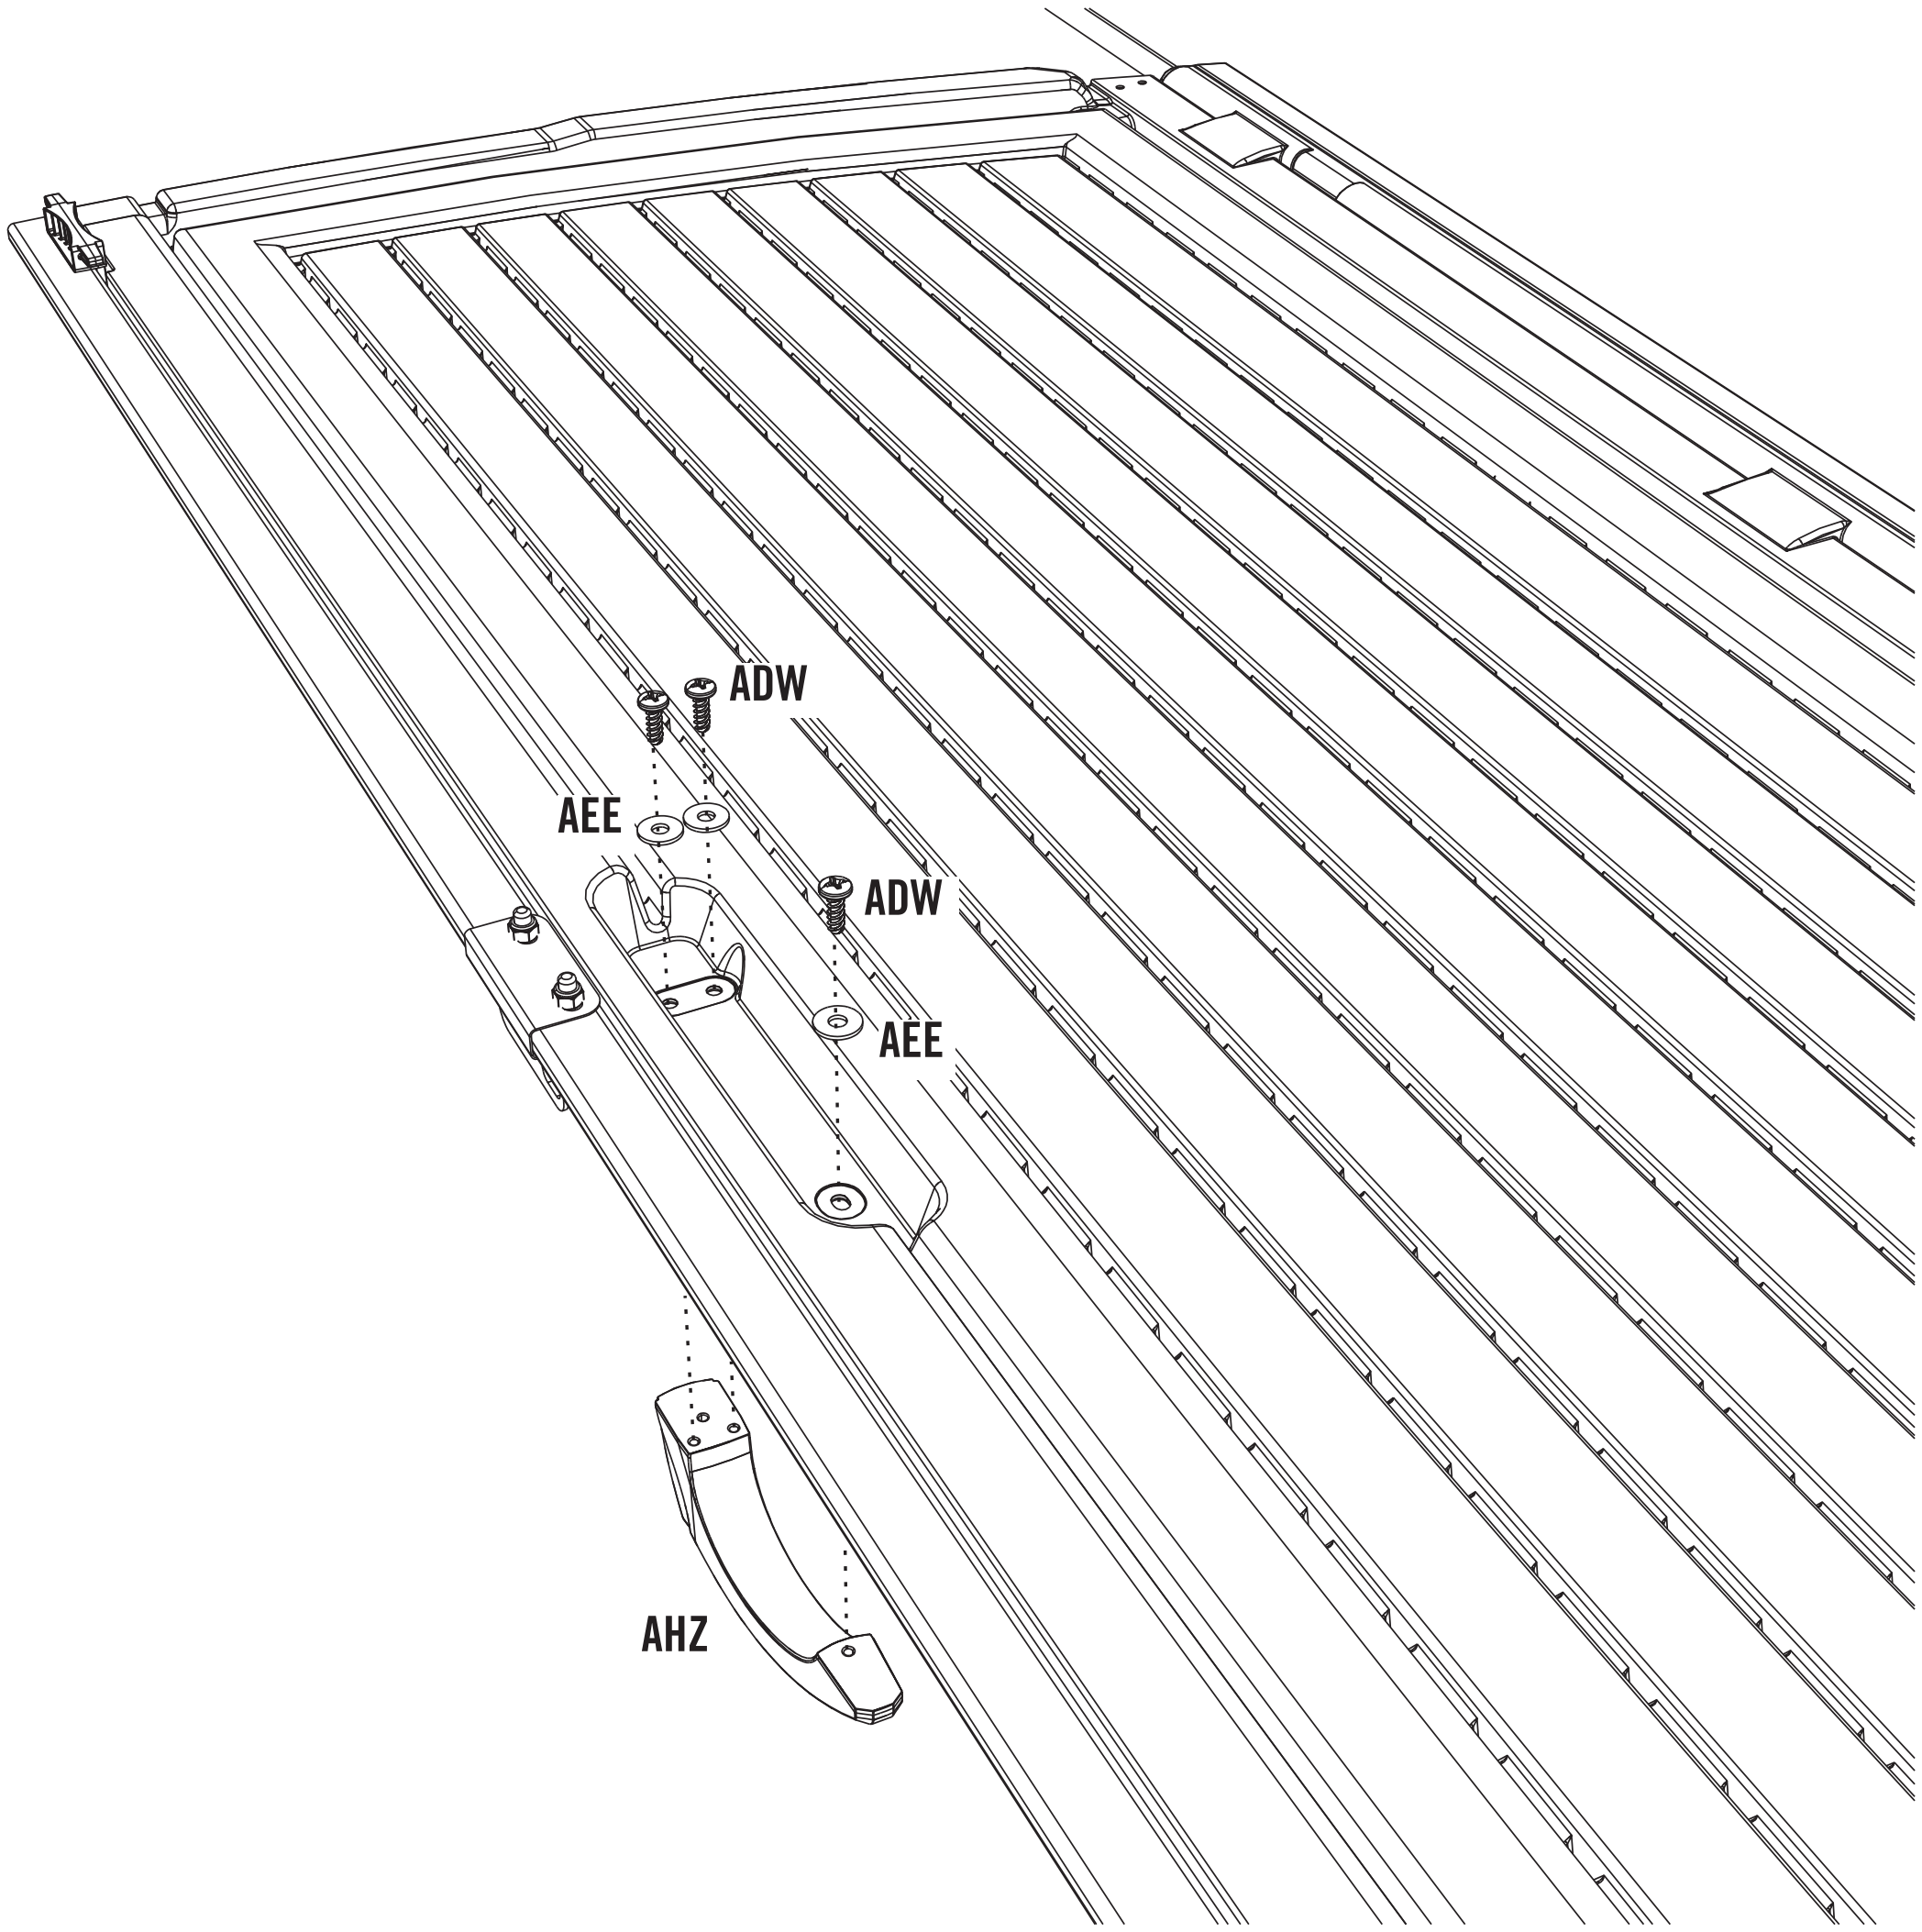

SEC 6 RIGHT DOOR ASSEMBLY

HARDWARE REQUIRED

HARDWARE BAG REQUIRED: BEG

Hardware shown at actual size



ABV (x2)
1/4" x 2" Carriage Bolt



AEE (x5)
#10 x 1/2 Flat Washer
(Only 3 are used)



ADB (x2)
3/8" x 1/2" Steel Spacer



AAB (x2)
1/4" Centerlock Nut

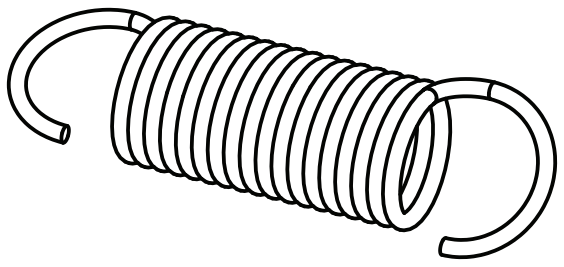

AHY (x1)
Latch Spring



ADW (x4)
#10 x 3/4" Pan-Head Screw

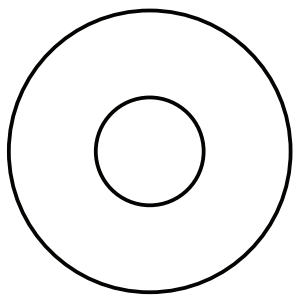

AEB (x2)
1/4" Flat Washer

Part shown at 25% of actual size



AHX (x1)
Latch Cover Plate



AIL (x1)
Right Door Lock Bracket



AHV (x1)
Door Latch

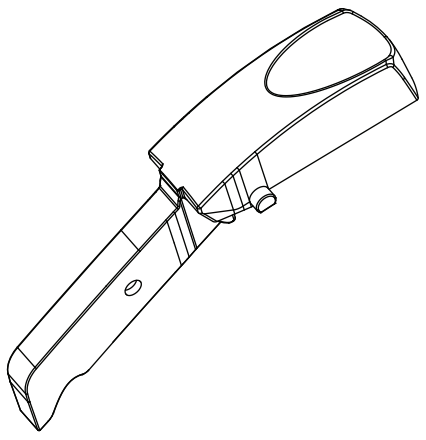

AIO (x1)
Thumb Lever

Part shown at 15% of actual size



AIK (x1)
Right Door Handle

Part shown at 50% of actual size



AHW (x1)
Latch Block

METAL PARTS REQUIRED

METAL PARTS KIT REQUIRED: CTD

Part shown at 8% of actual size

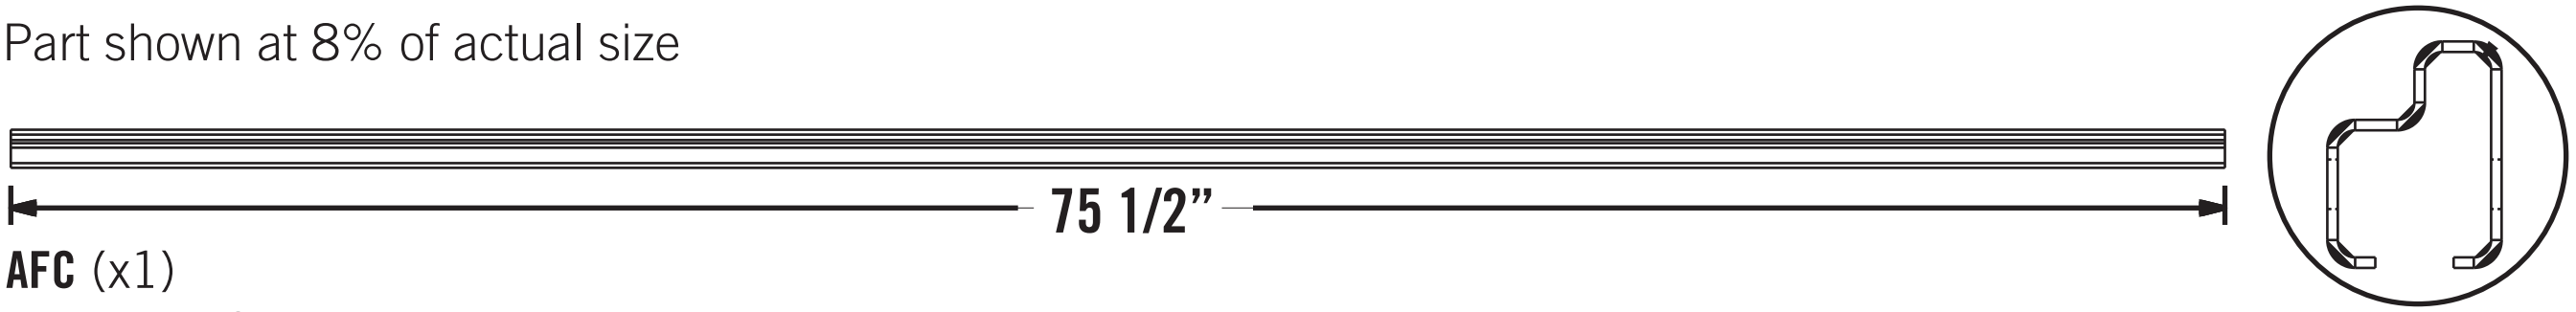

AFC (x1)
Door End Channel



CRD (x1)
Door Hinge Tube

PLASTIC PARTS REQUIRED

LOCATED IN BOX 1

Part shown at 4% of actual size

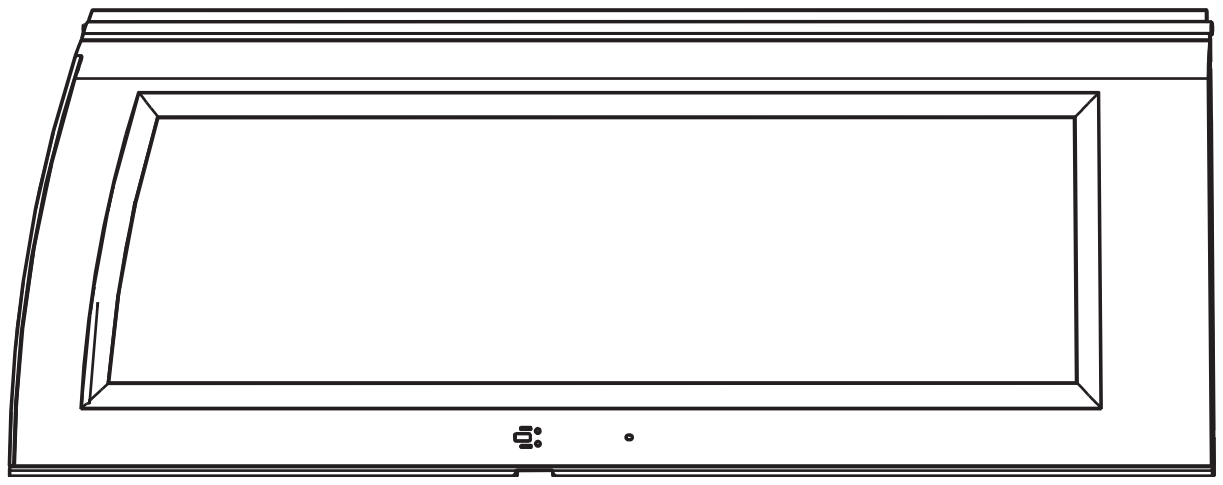

AGZ (x1)
Right Door

TOOLS REQUIRED



Phillips Screwdriver

7/16" Wrench



Safety Glasses



NO HARDWARE REQUIRED FOR THIS PAGE

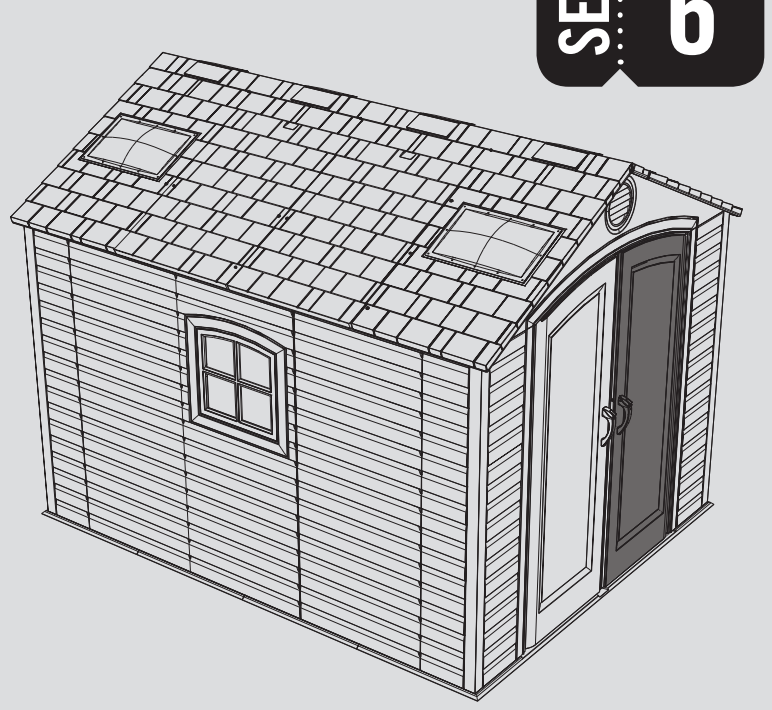

SEC 6.1

RIGHT DOOR ASSEMBLY

Rest the **Right Shed Door (AGZ)** with front side down. Slide a **Door Hinge Tube (CRD)** through the hole in the Door as shown.

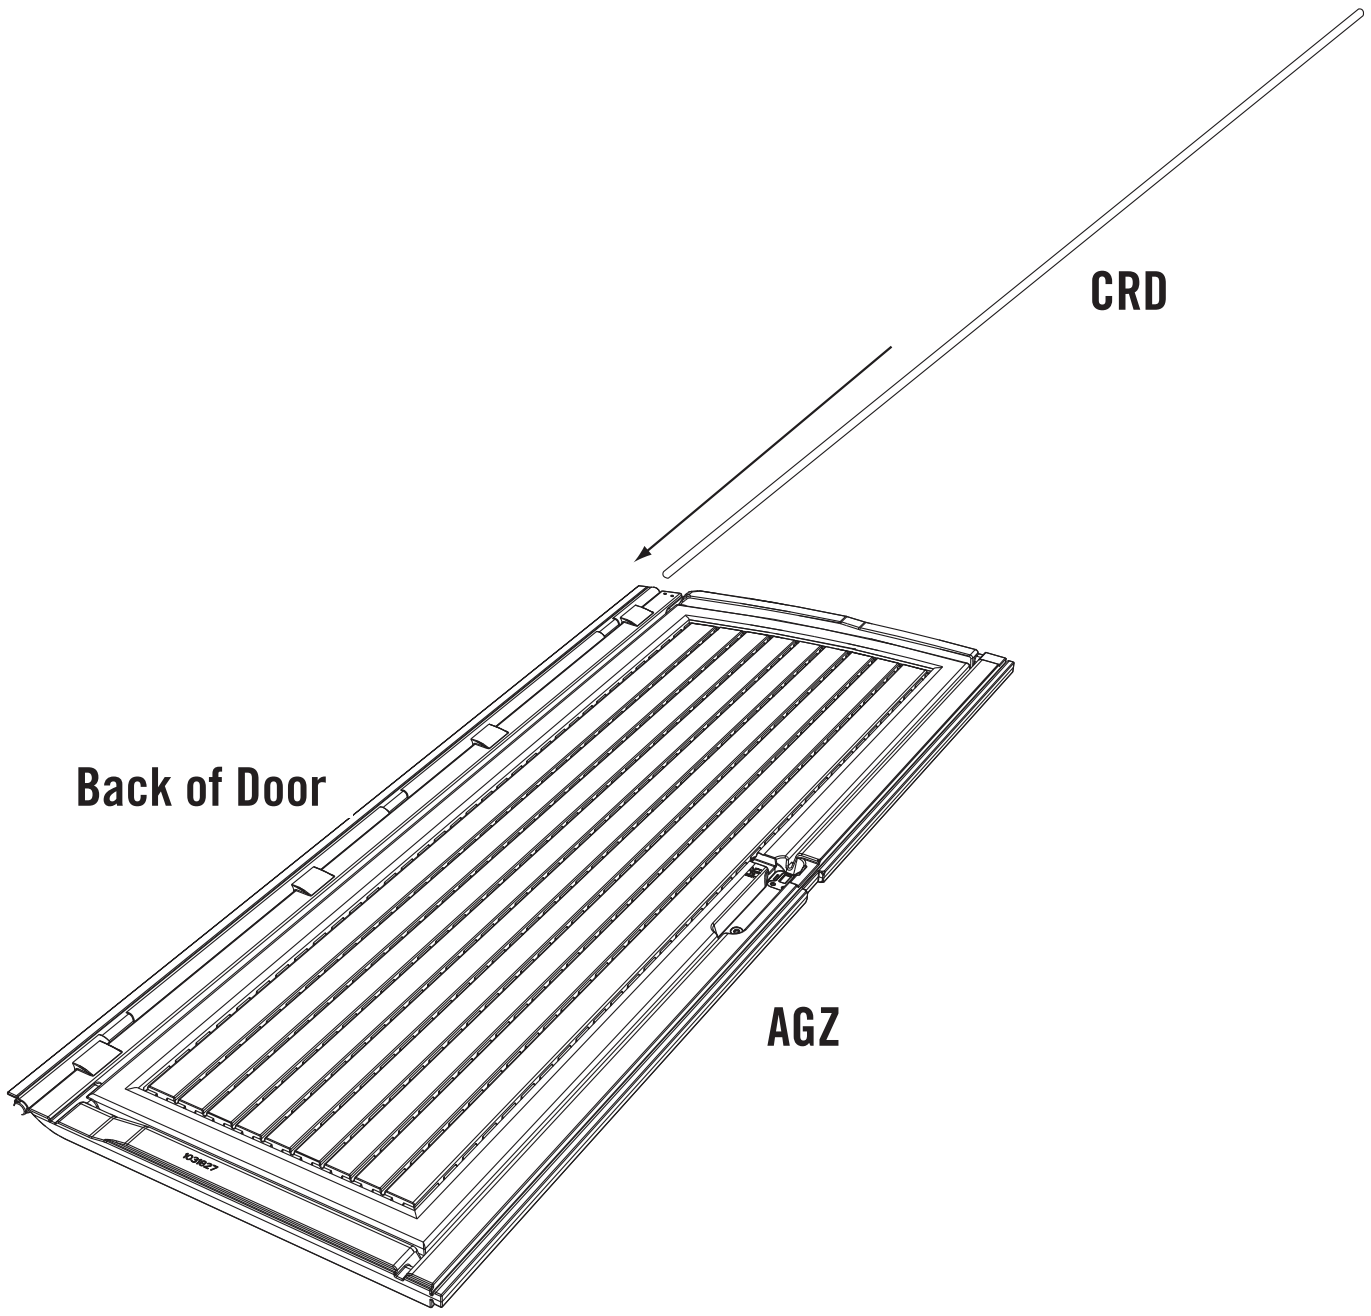
CRD
Back of Door
AGZ

SEC 6.2

Slide the **Door End Channel (AFC)** onto the Door as shown.

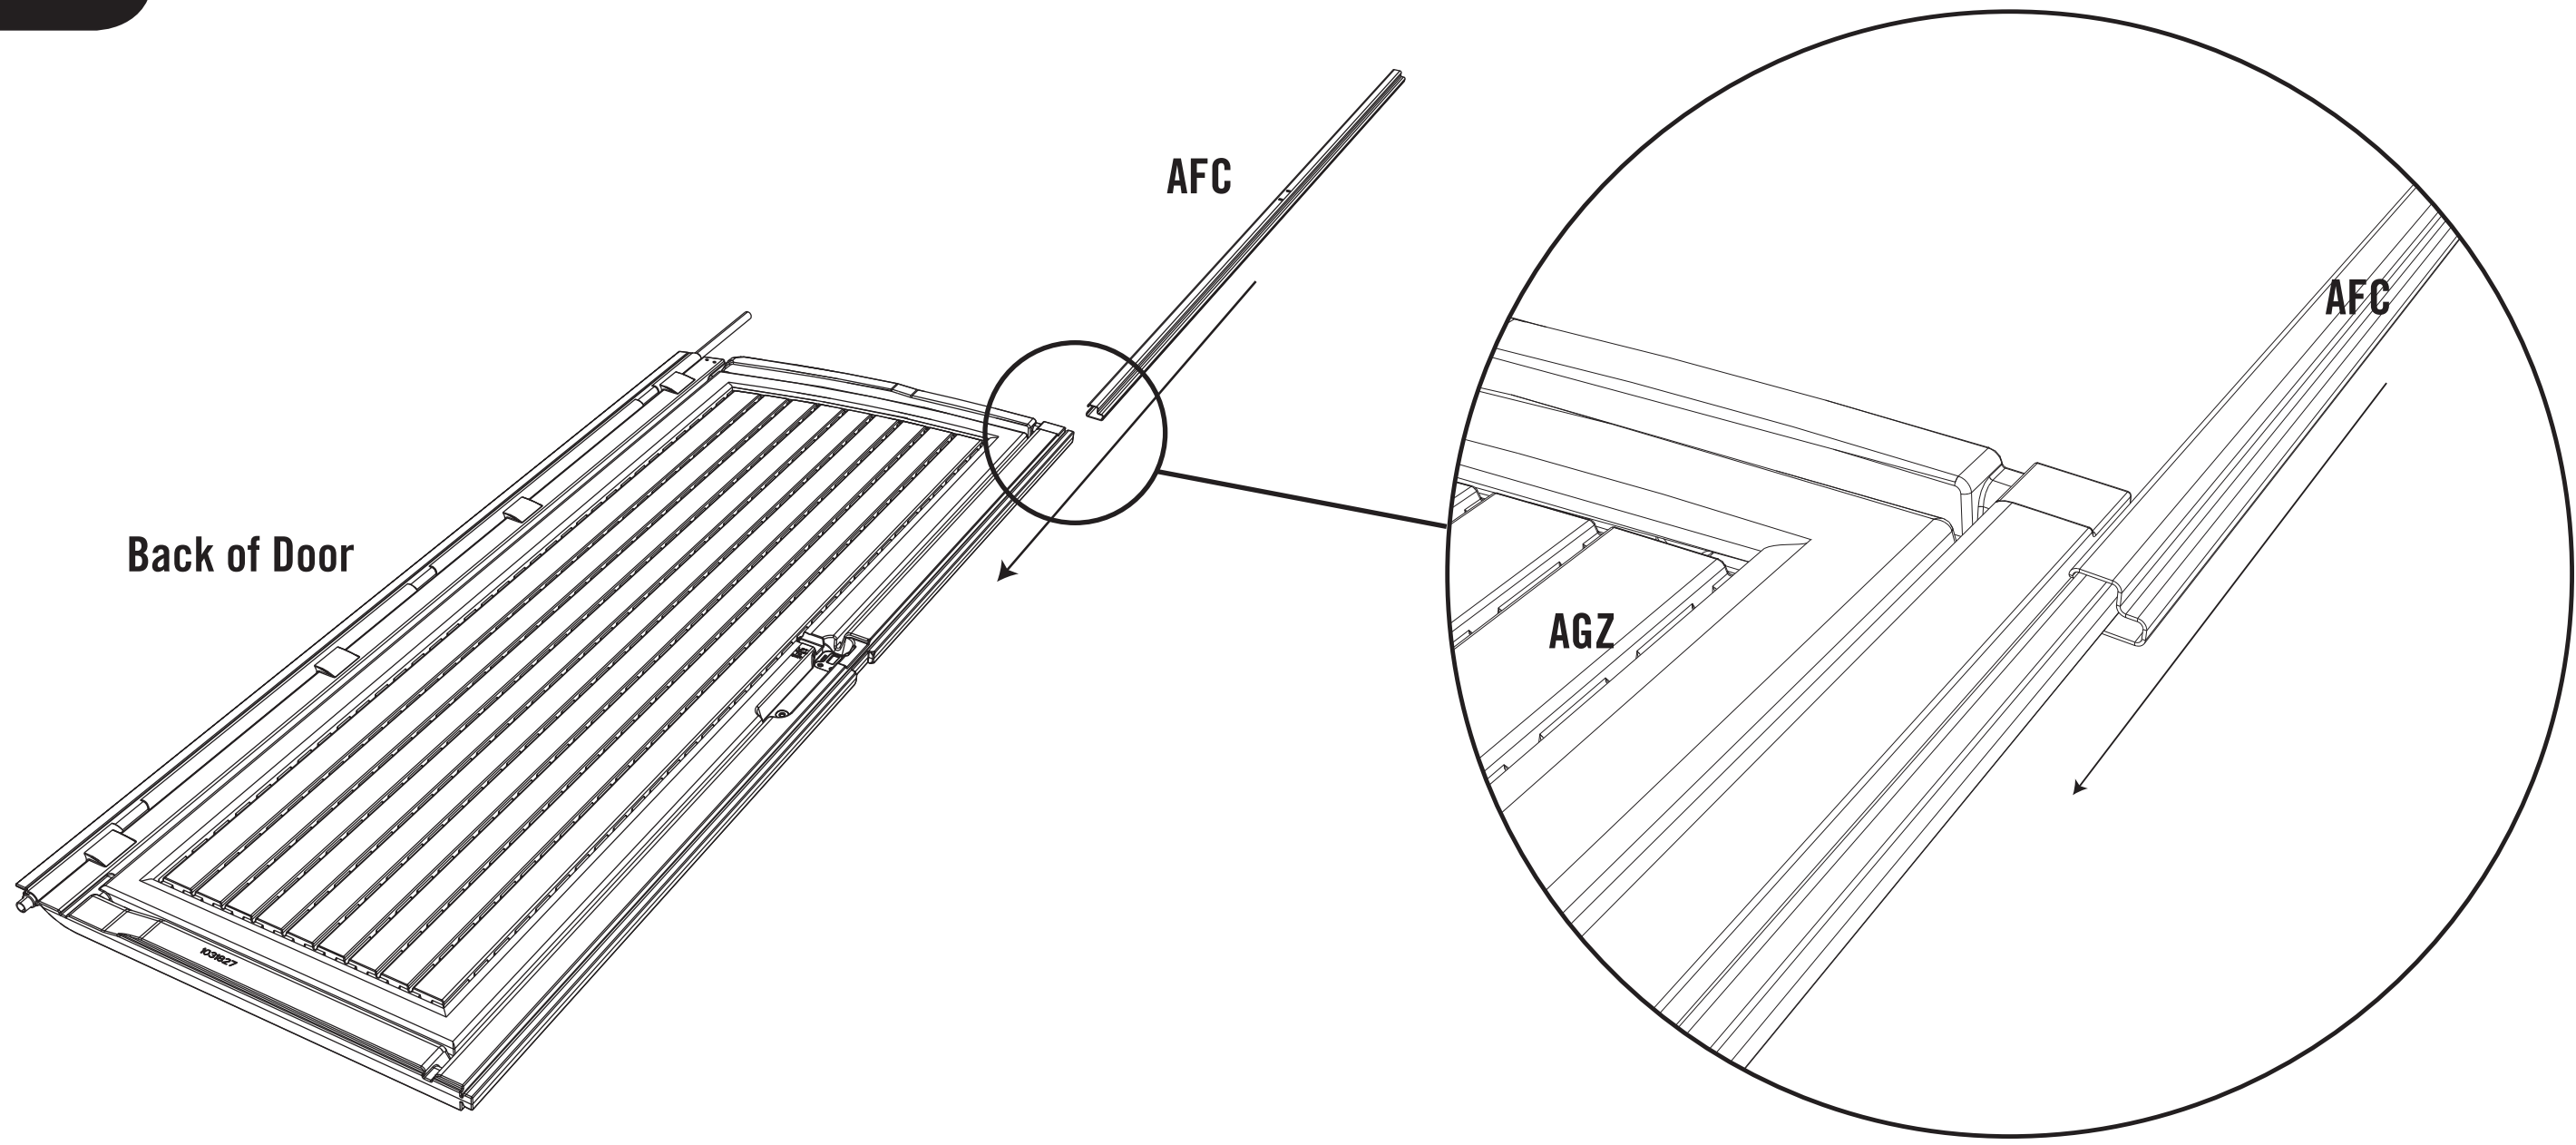
AFC
Back of Door
AFC
AGZ

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

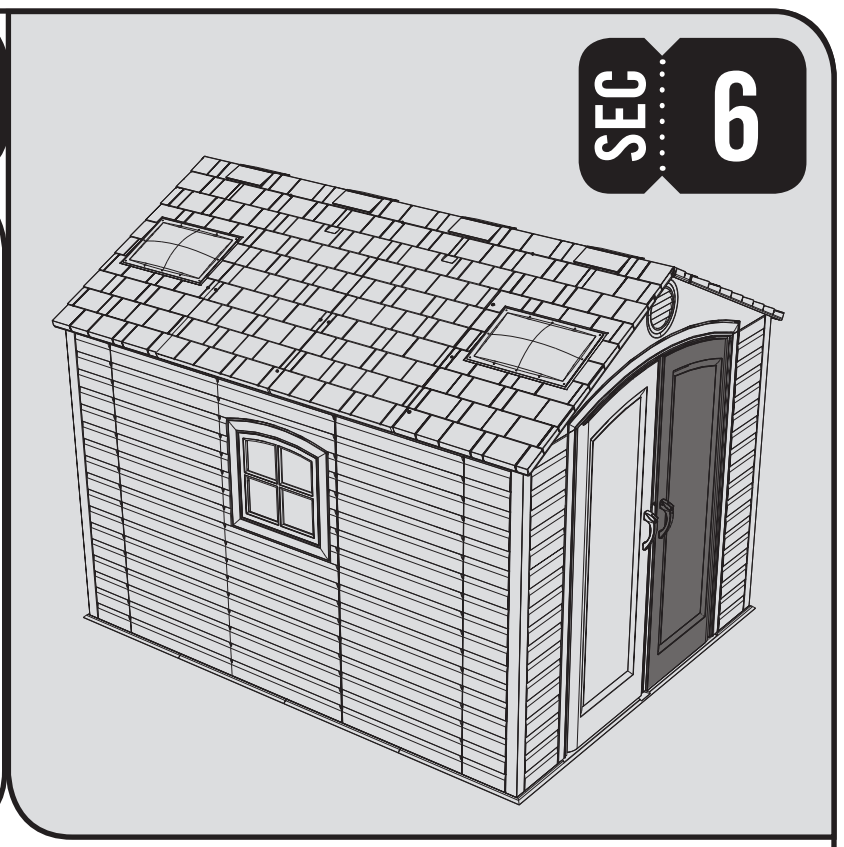

NO HARDWARE REQUIRED FOR THIS PAGE

SEC 6.3

Fit knobs of **Thumb Lever (AIO)** into the grooves of **Right Door Handle (AIK)**.

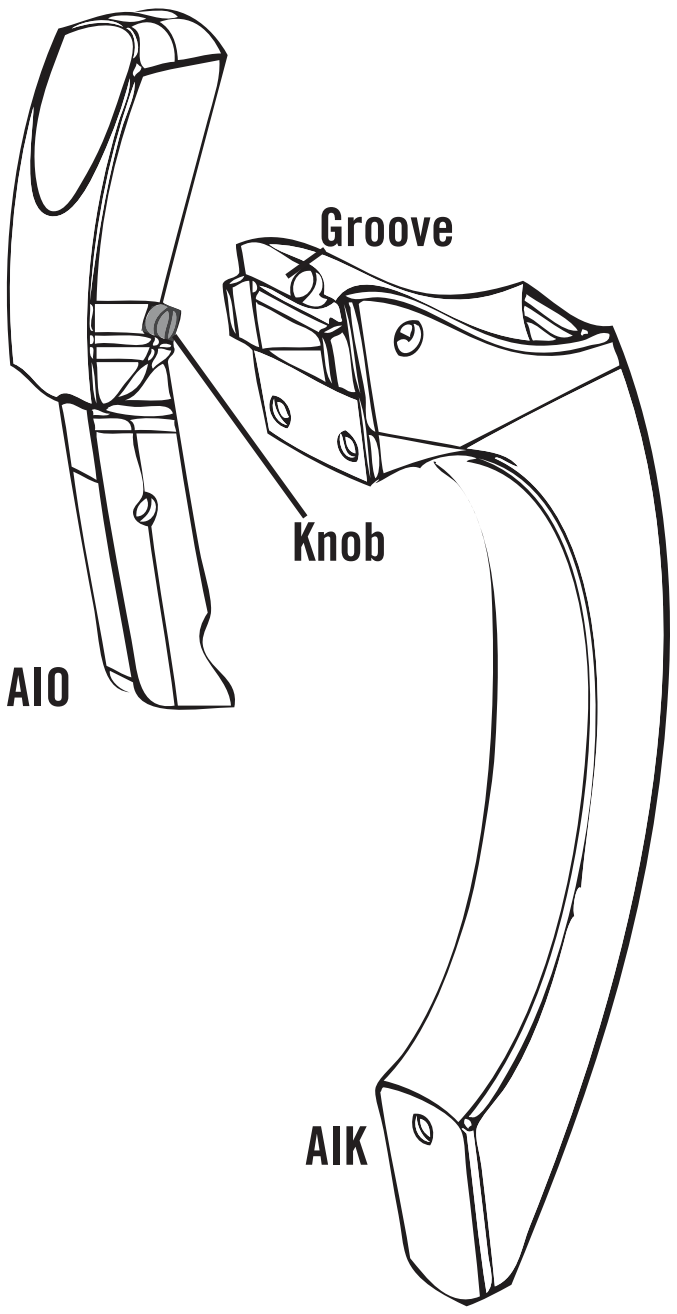
Groove
Knob
AIO
AIK

SEC 6.4

Rotate the Thumb Lever into the Right Door Handle. Slide forward until the knobs fit into the holes in the Handle.

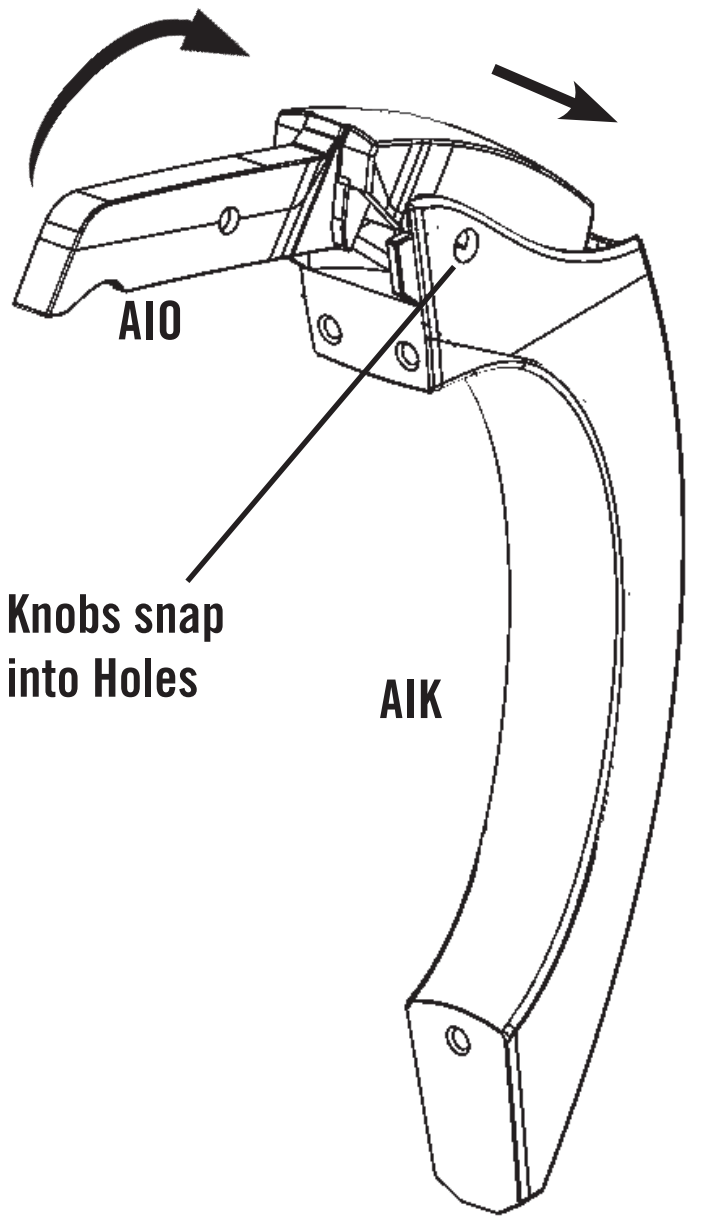
AIO
Knobs snap into Holes
AIK

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

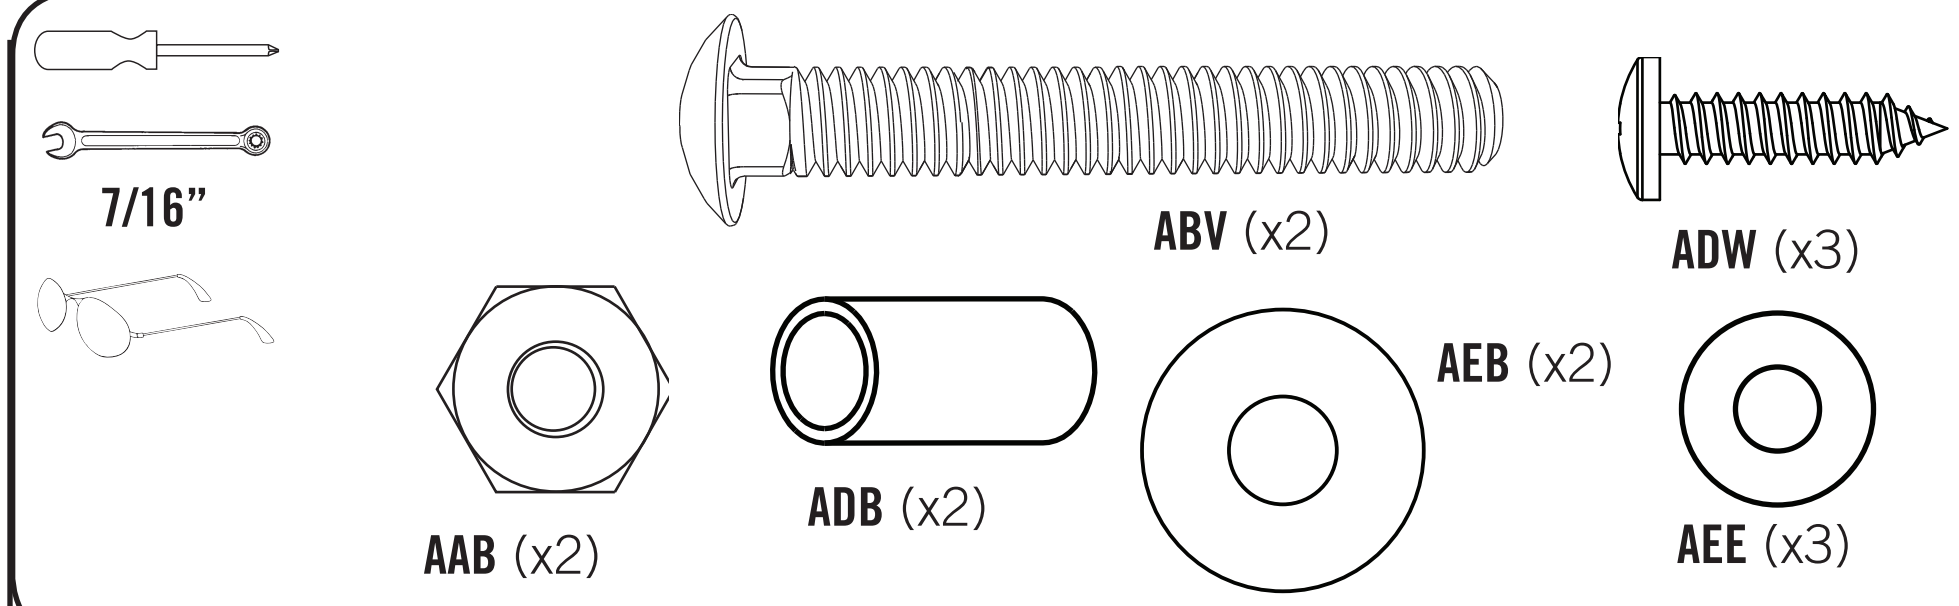
7/16”
ABV (x2)
ADW (x3)
AAB (x2)
ADB (x2)
AEB (x2)
AEE (x3)

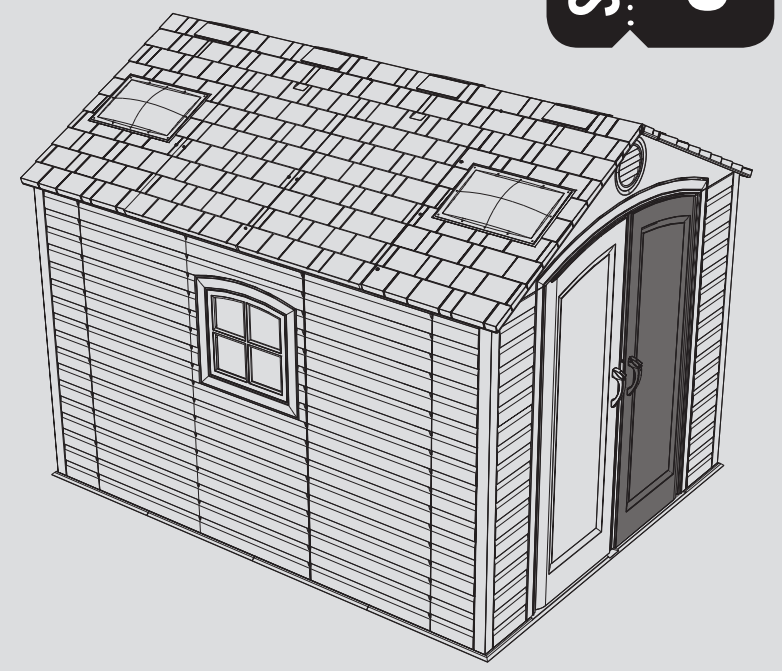

SEC 6.5

Attach the Right Handle Assembly to the Door using three (3) **#10 x 1/2” Flat Washers (AEE)** and three (3) **#10 x 3/4” Pan-Head Screws (ADW)**.

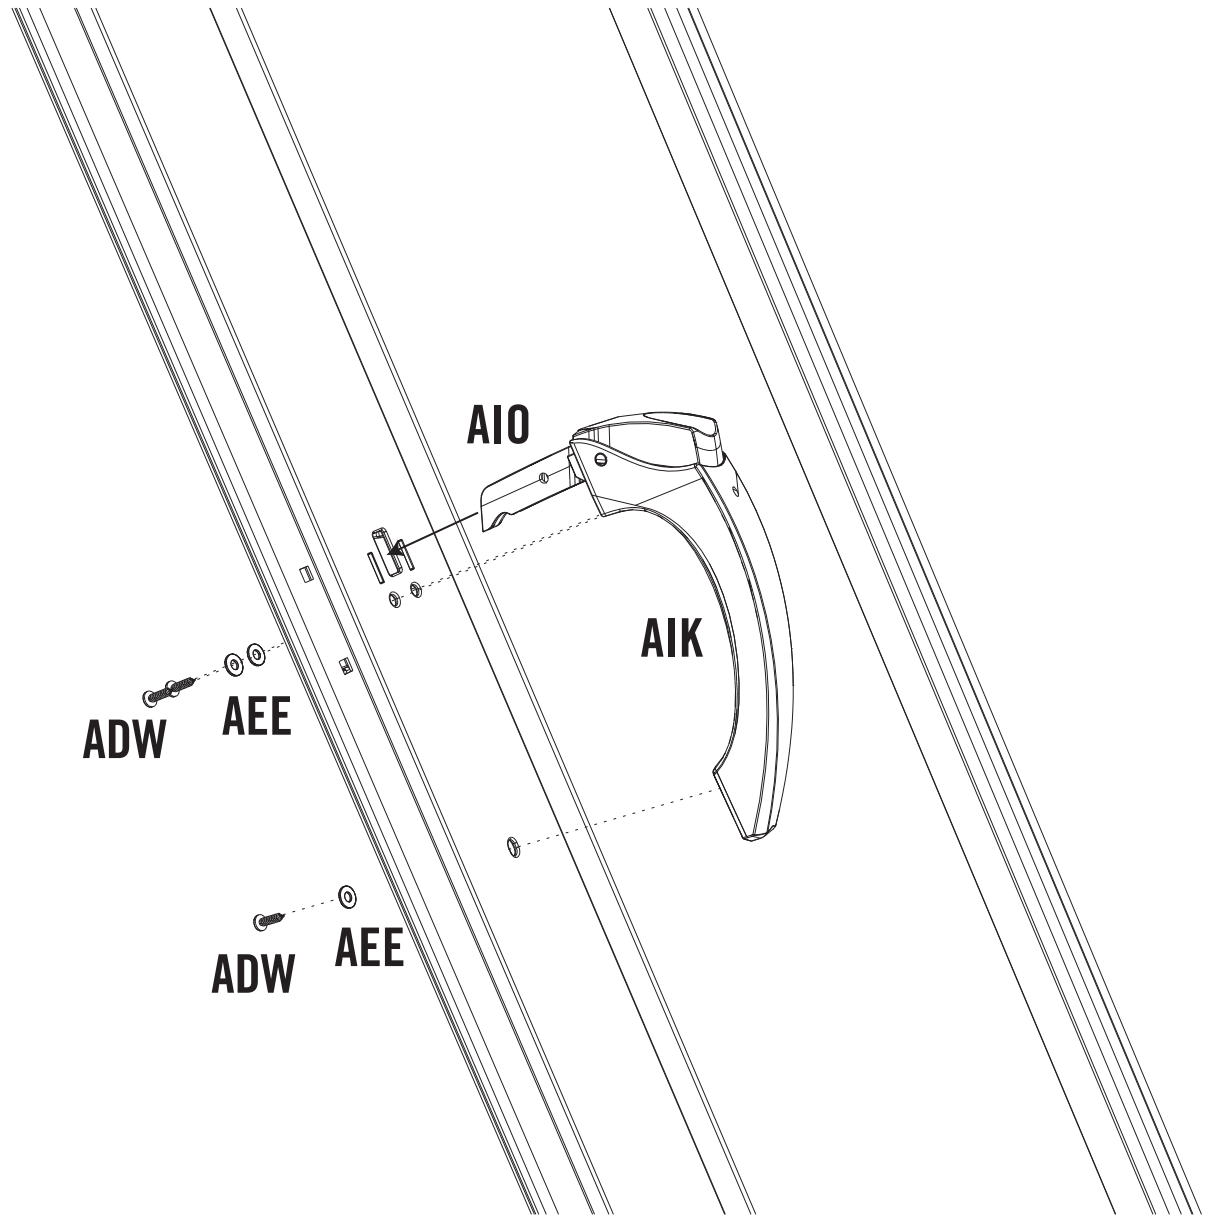
AIO
AIK
ADW
AEE
ADW
AEE

CAUTION

Do not overtighten. Overtightening may damage parts and void warranty.

SEC 6.6

Install Handle Latch assembly onto the Right Shed Door using the required hardware.

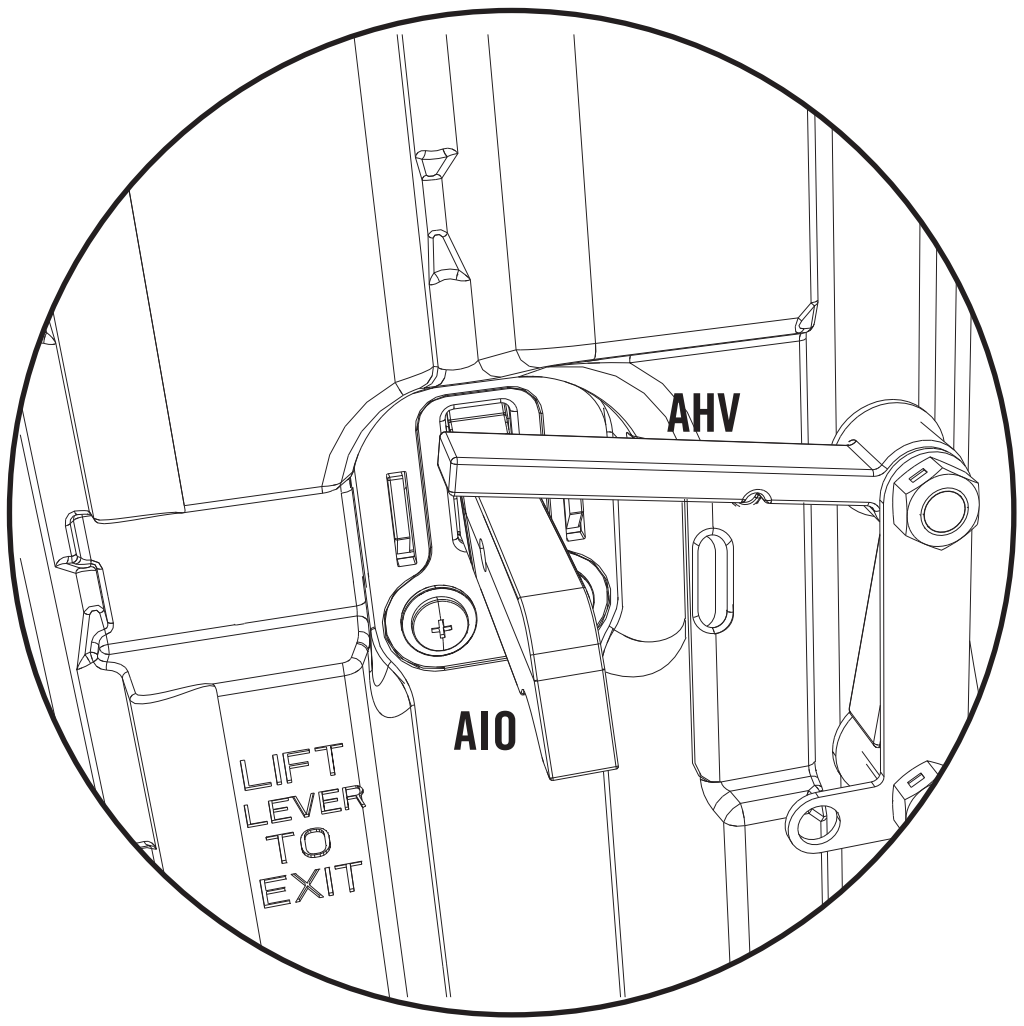
AHV
AIO
LIFT LEVER TO EXIT

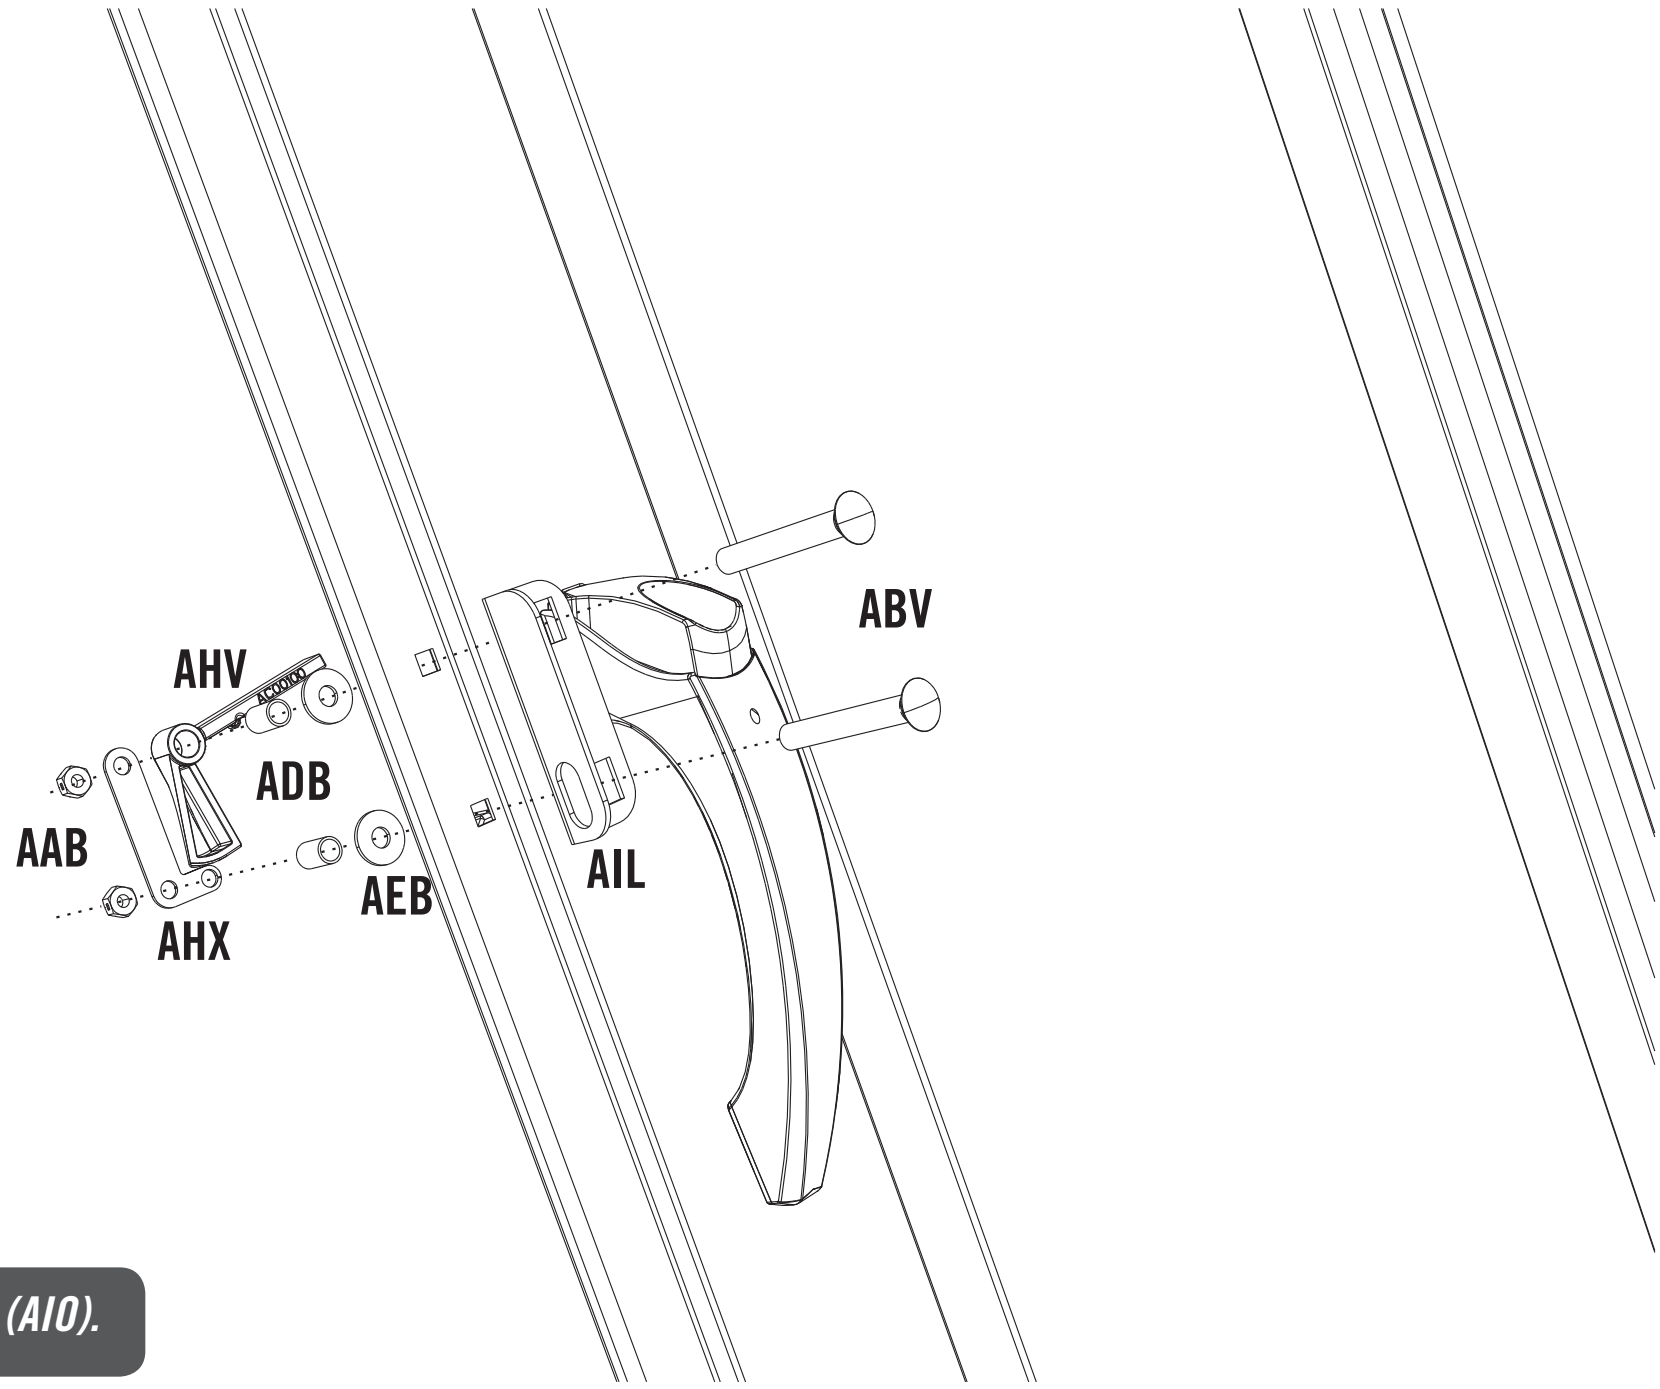
ABV
AHV
ADB
AAB
AEB
AHX
AIL

! *Note: The Door Latch (AHV) goes on top of the Thumb Lever (AIO).*

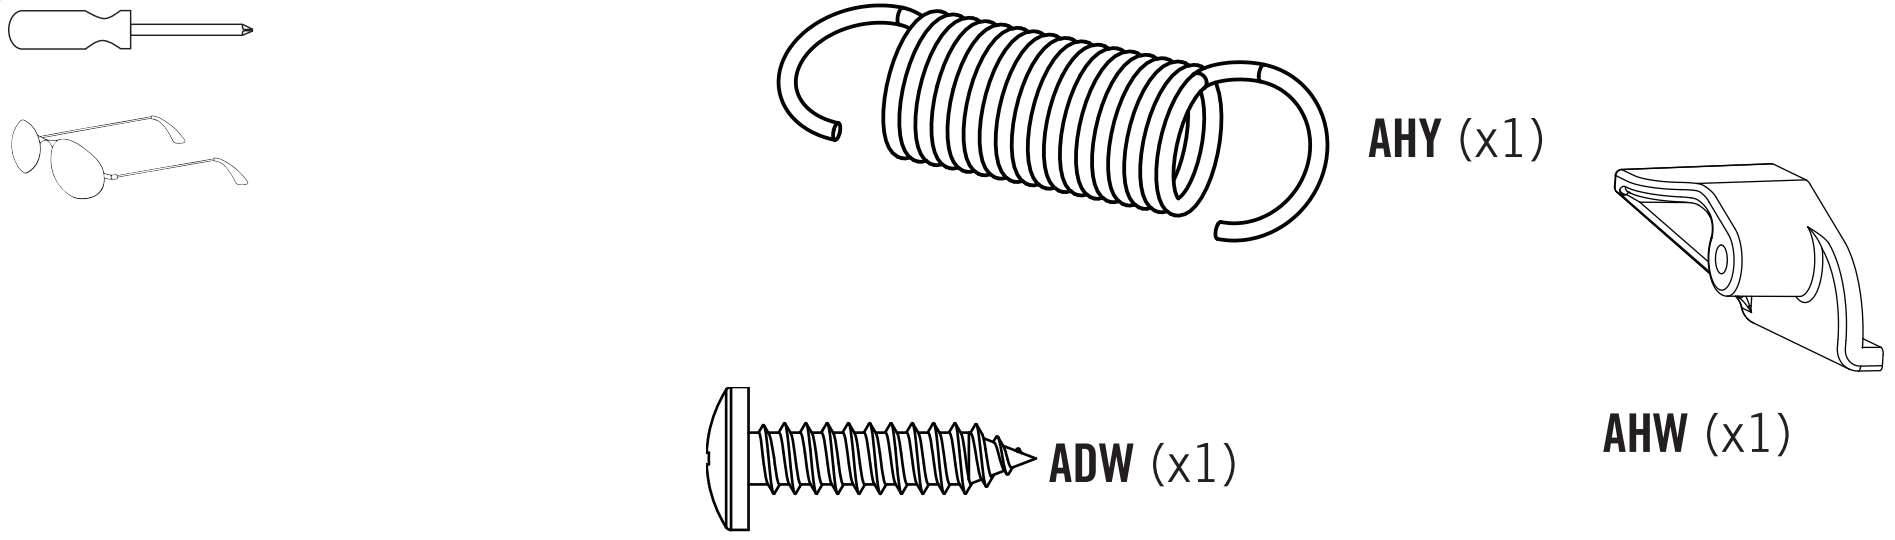
AHY (x1)
ADW (x1)
AHW (x1)

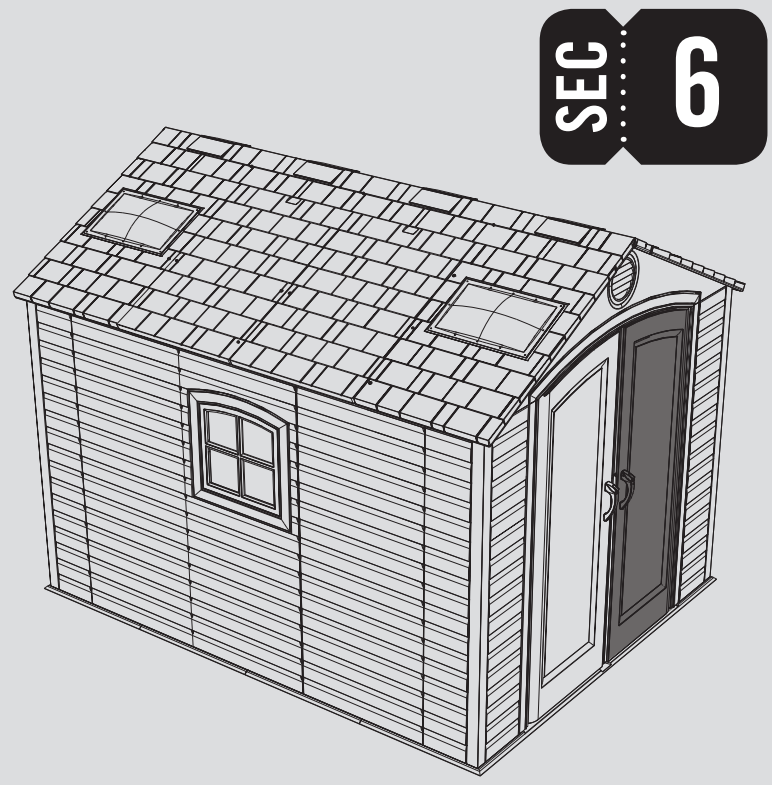

SEC 6.7

Line up the hole in the **Latch Block (AHW)** with the hole in the Thumb Lever and secure with one (1) **#10 X 3/4" Pan-Head Screw (ADW)**.

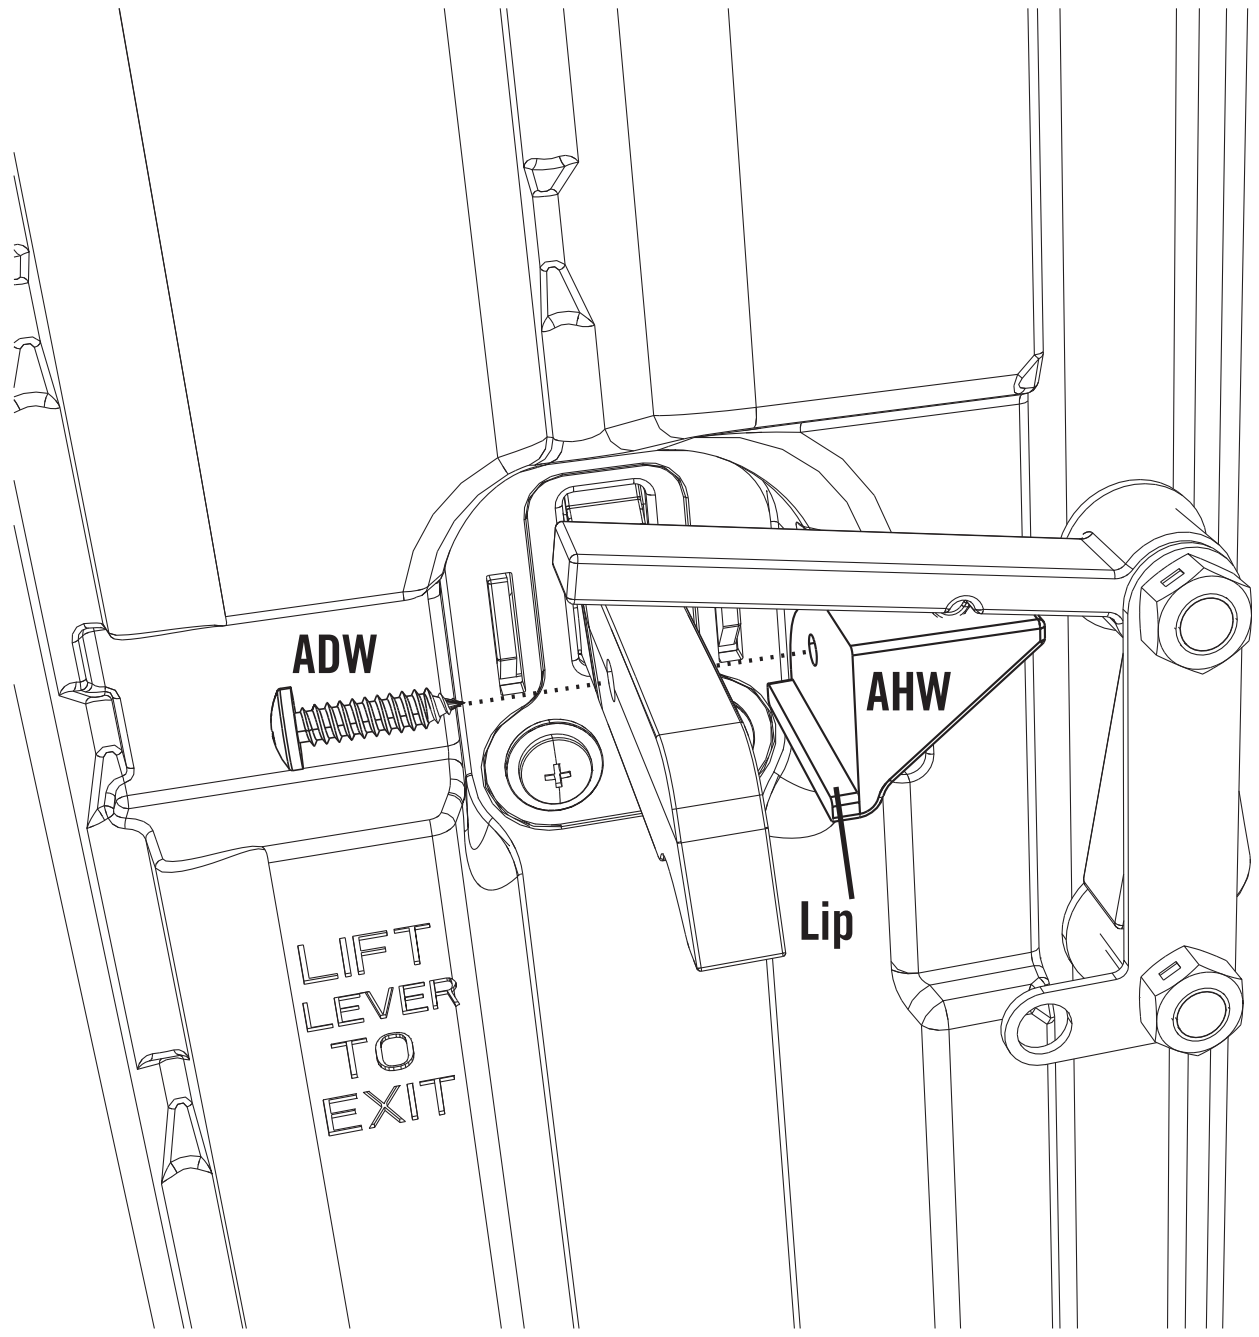
ADW
AHW
Lip
LIFT LEVER TO EXIT

! *Note: The lip of the Latch Block (AHW) fits under the Thumb Lever (AIO).*

SEC 6.8

Attach **Latch Spring (AHY)** to the **Door Latch (AHV)** and the **Latch Cover Plate (AHX)**. Set the Door aside.

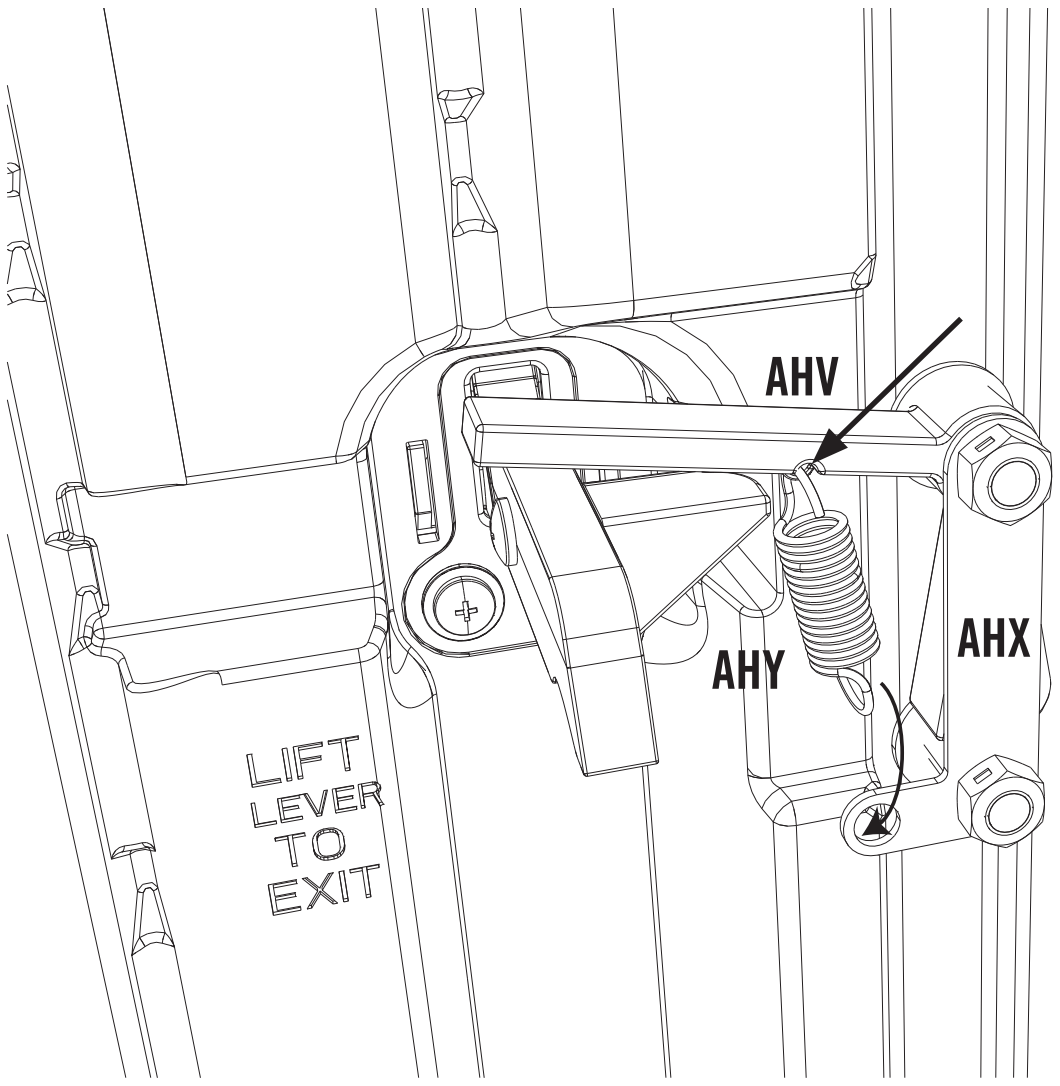
AHV
AHY
AHX
LIFT LEVER TO EXIT

! *Note: Use pliers to pull spring down and hook into bottom hole.*

WARNING

When pulling on spring, each person should use protective eye glasses to help prevent serious eye injury.

SEC 7 GABLE ASSEMBLY

HARDWARE REQUIRED — HARDWARE BAG REQUIRED: BHV (x2)

Hardware shown at actual size



AEE (x10)
#10 x 1/2” Flat Washer



ADW (x10)
#10 x 3/4” Pan-Head Screw



ADZ (x8)
1/4” x 5/8” Pan-Head Screw
(Only 4 used)



ADV (x12)
1/4” x 1 1/8” Pan-Head Screw
(Only 6 used)

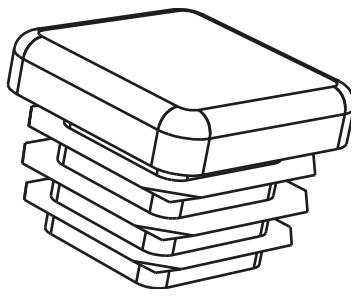

AHS (x4)
End Plug
(Only 2 used)



ACB (x2)
#10 x 1 1/4” Pan-Head Screw
(Not used in this model)

Parts shown at 8% of actual size

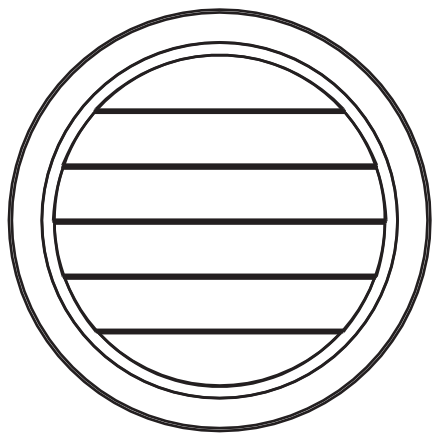

AGP (x2)
Louvered Vent

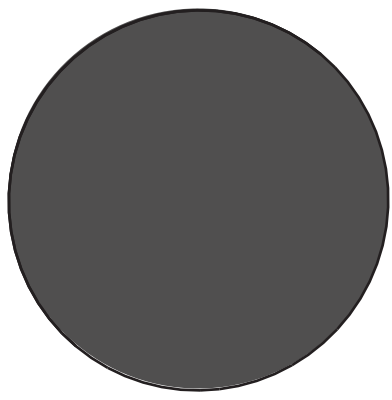

AIQ (x2)
Vent Screen

METAL PARTS REQUIRED — METAL PARTS KIT REQUIRED: CTD

Part shown at 8% of actual size

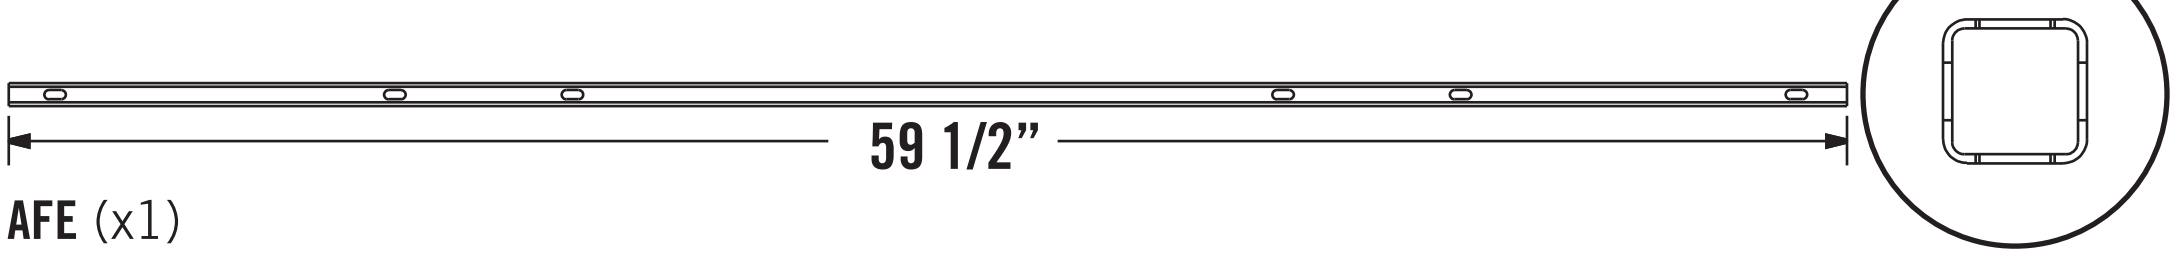

AFE (x1)
Entry Header Bar

PLASTIC PARTS REQUIRED — LOCATED IN BOX 1

Parts shown at 4% of actual size

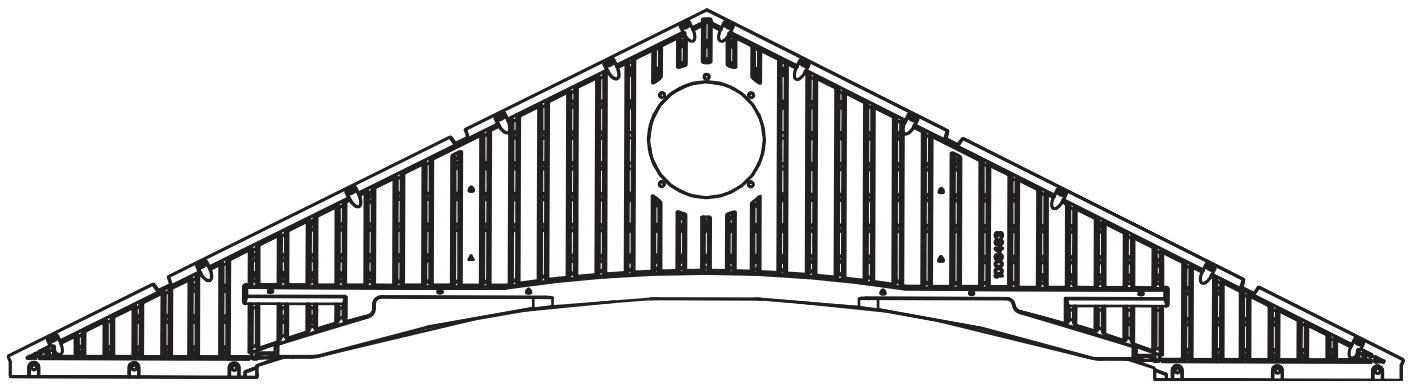

AGF (x1)
Entry Gable
(Rear View)

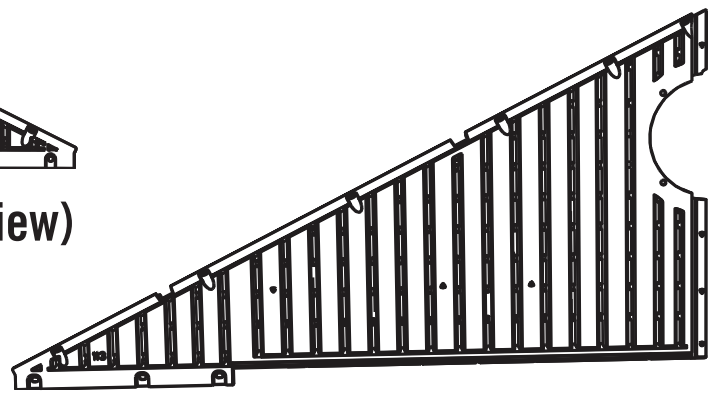

AGH (x1)
Rear Gable 1
(Rear View)

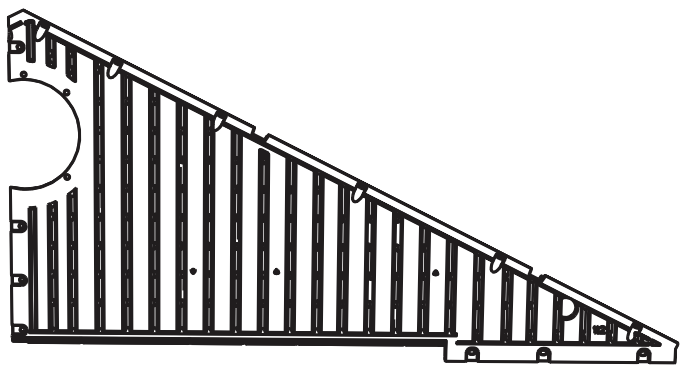

AGI (x1)
Rear Gable 2
(Rear View)

TOOLS REQUIRED



Phillips Screwdriver



Safety Glasses

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE





ADZ (x4)

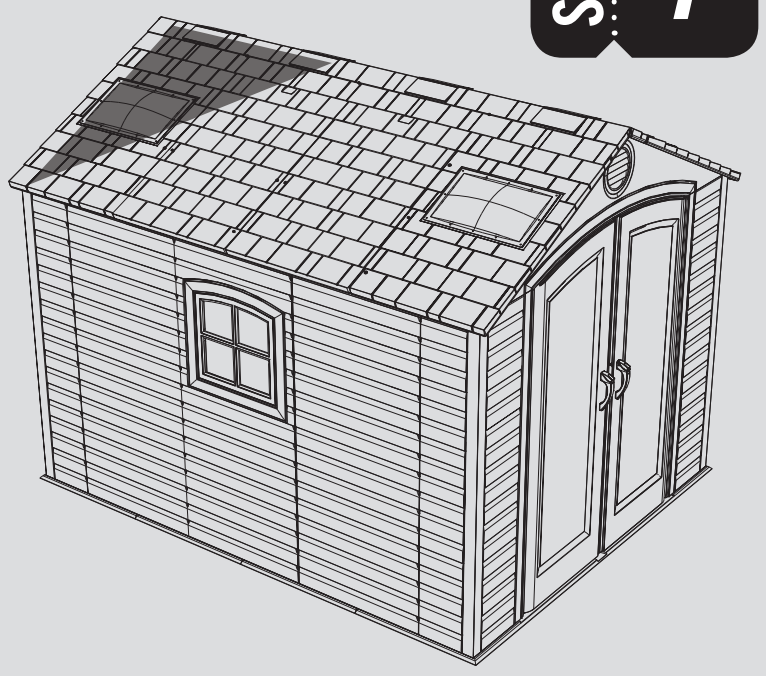

SEC 7.1

REAR GABLE ASSEMBLY

Lay the edge of **Rear Gable 2 (AGI)** over **Rear Gable 1 (AGH)** as shown, and align the four holes.

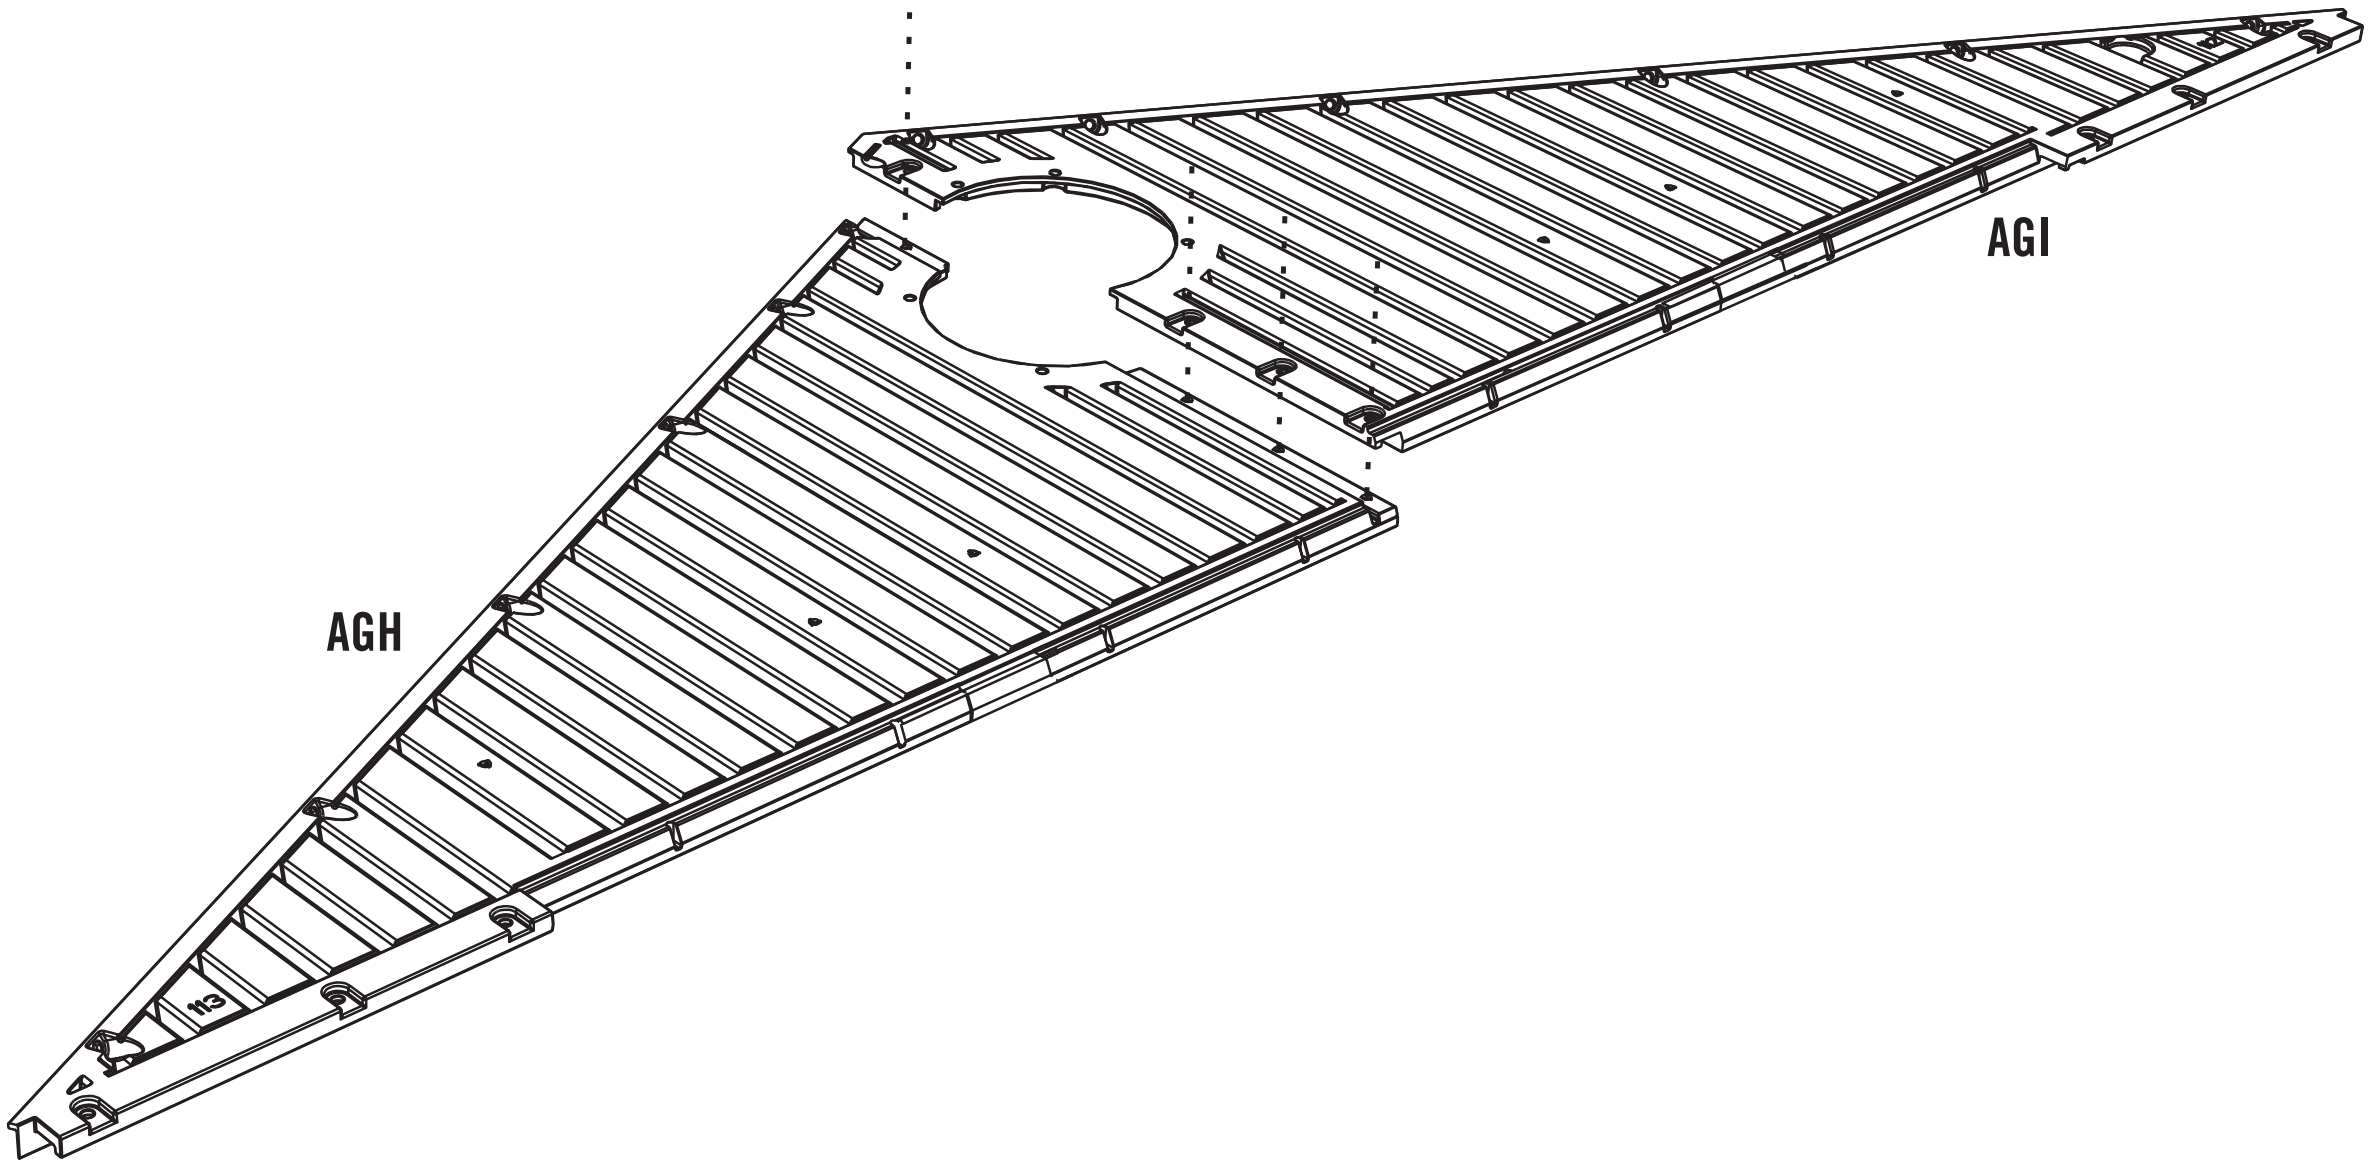

SEC 7.2

Connect Rear Gables 1 & 2 together using four (4) **1/4” x 5/8” Pan-Head Screws (ADZ)** as shown.

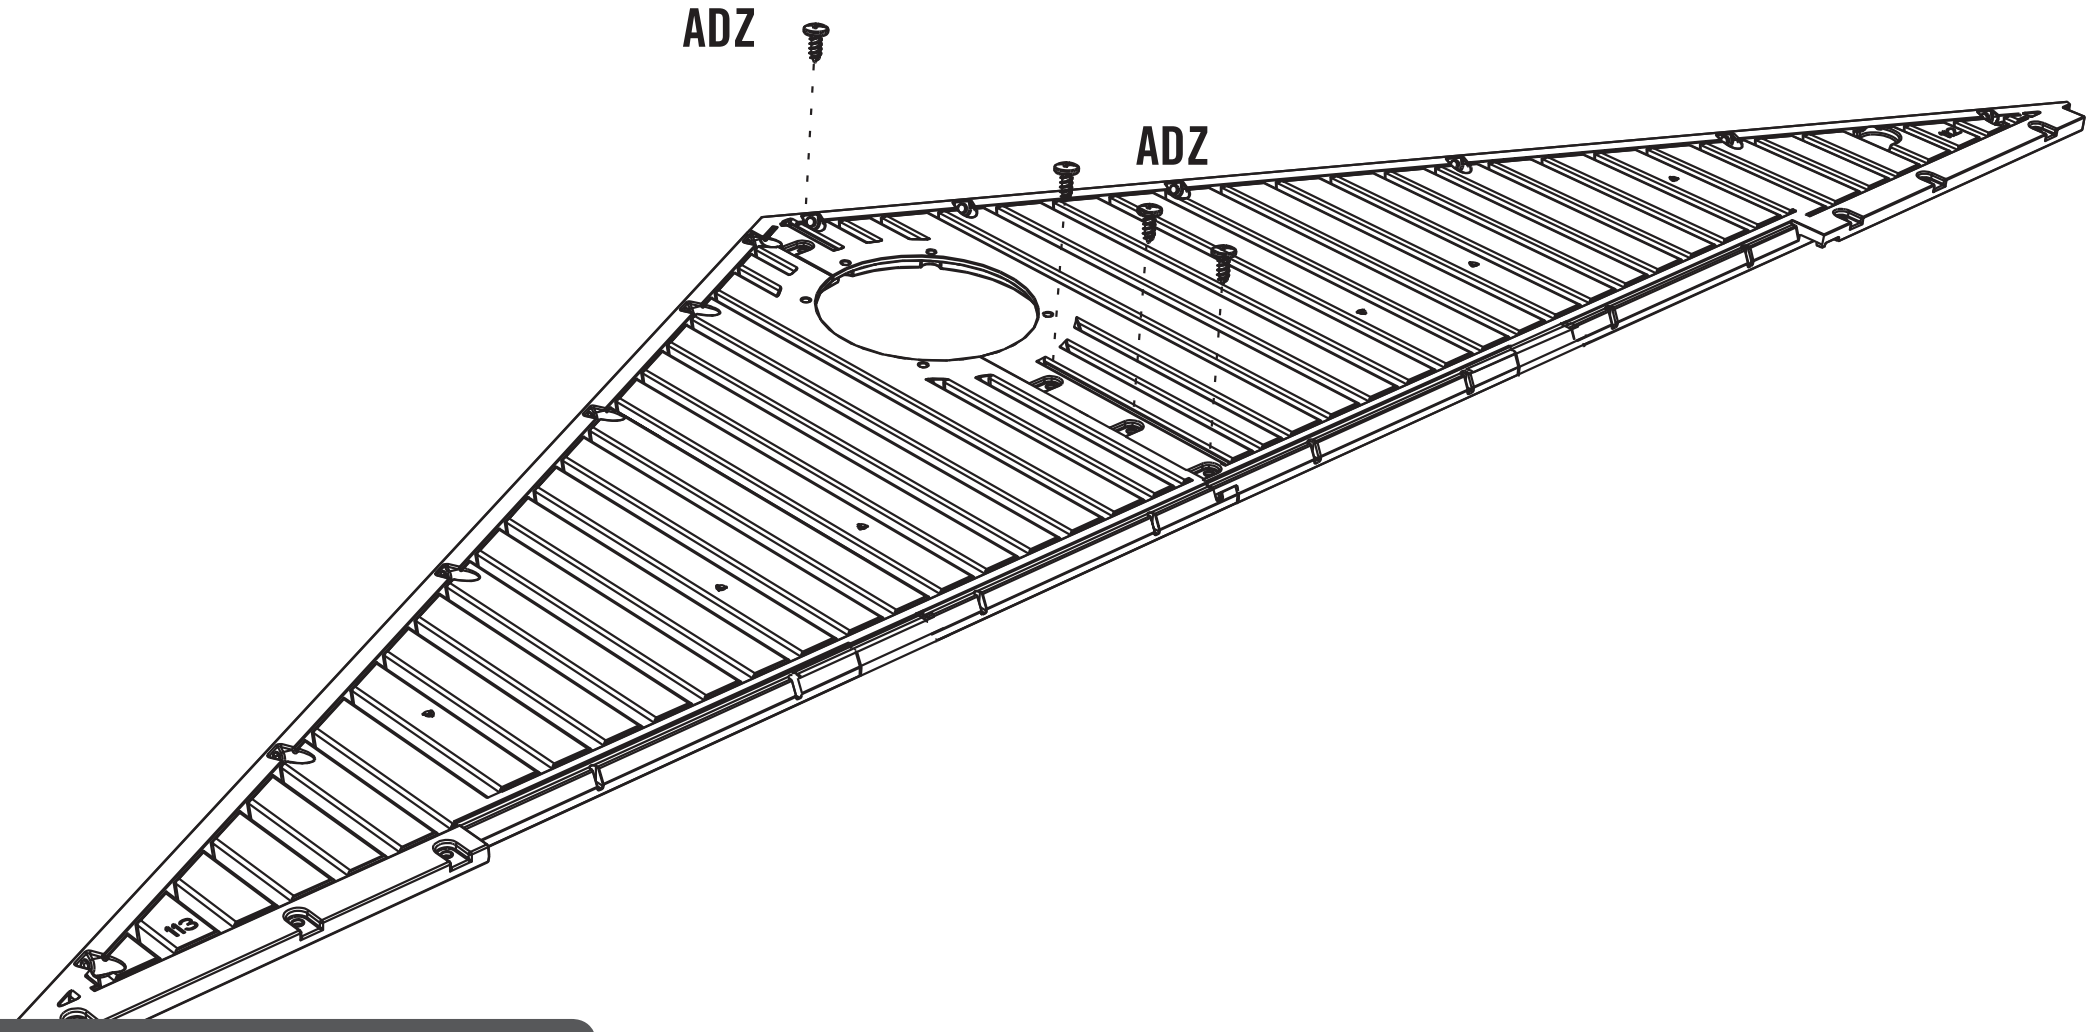



! *Note: Only use a hand screwdriver in this step.*

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

SEC 7





ADW (x5)



AEE (x5)

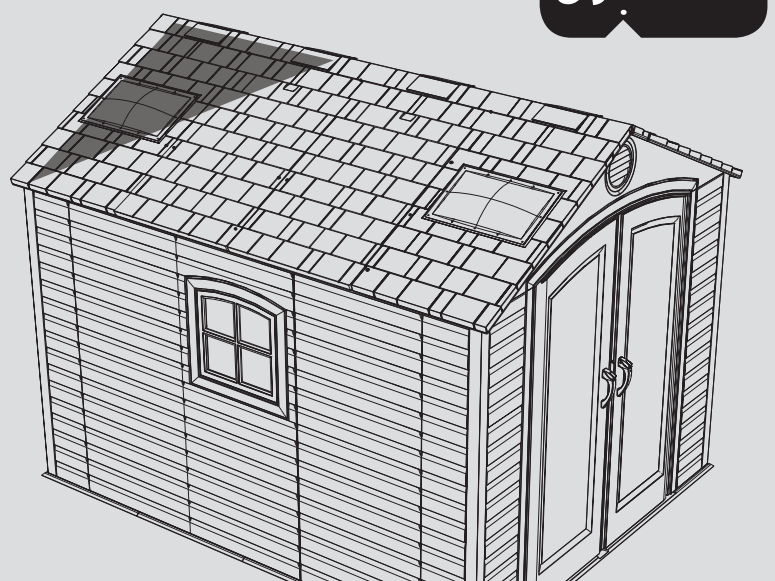

SEC 7.3

Lay Rear Gable Assembly flat on the ground over the **Vent Screen (AIQ)** and **Louvered Vent (AGP)**. Align the holes in the Louvered Vent with those in the Rear Gable Assembly.

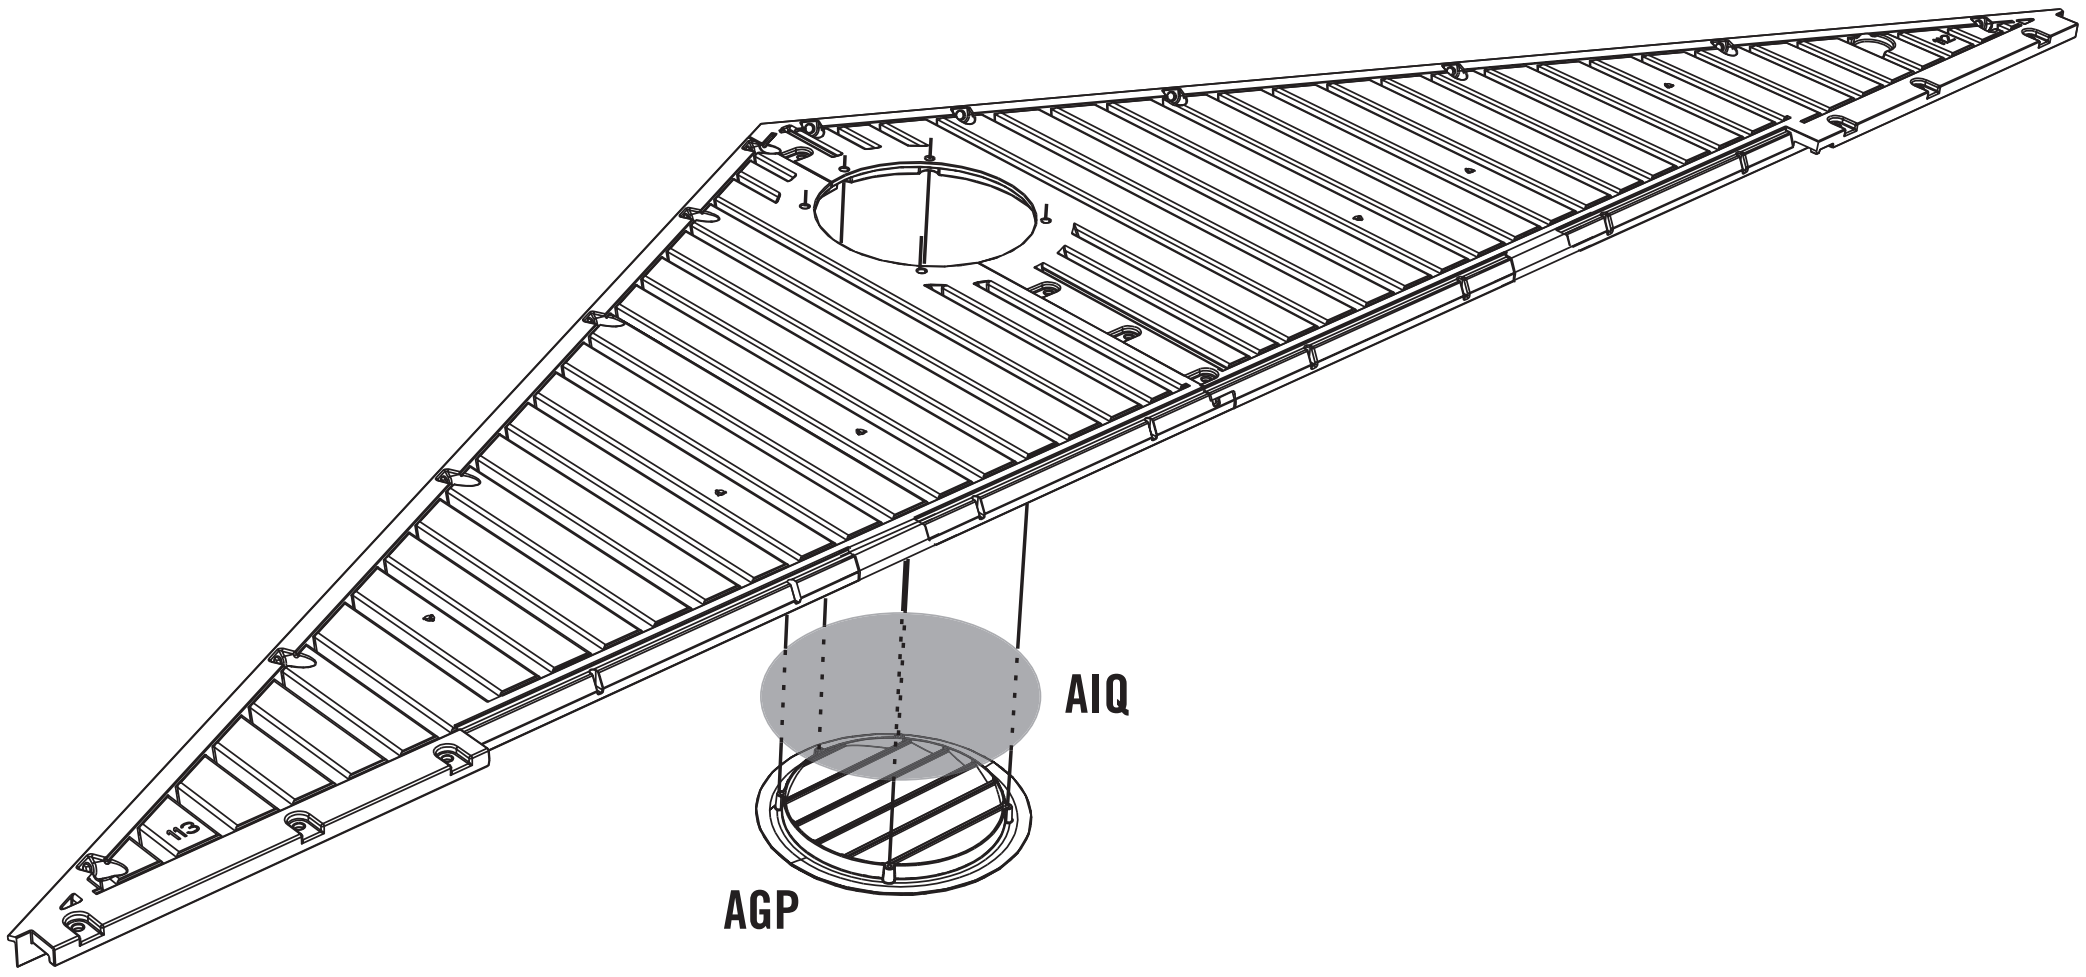

SEC 7.4

After aligning the holes, press down firmly on the Rear Gable Assembly while inserting the five (5) **#10 x 3/4” Pan-Head Screws (ADW)** and the five (5) **#10 x 1/2” Flat Washers (AEE)**. Pressing down firmly while inserting the Screws will help prevent the Vent Screen from twisting. Set aside.

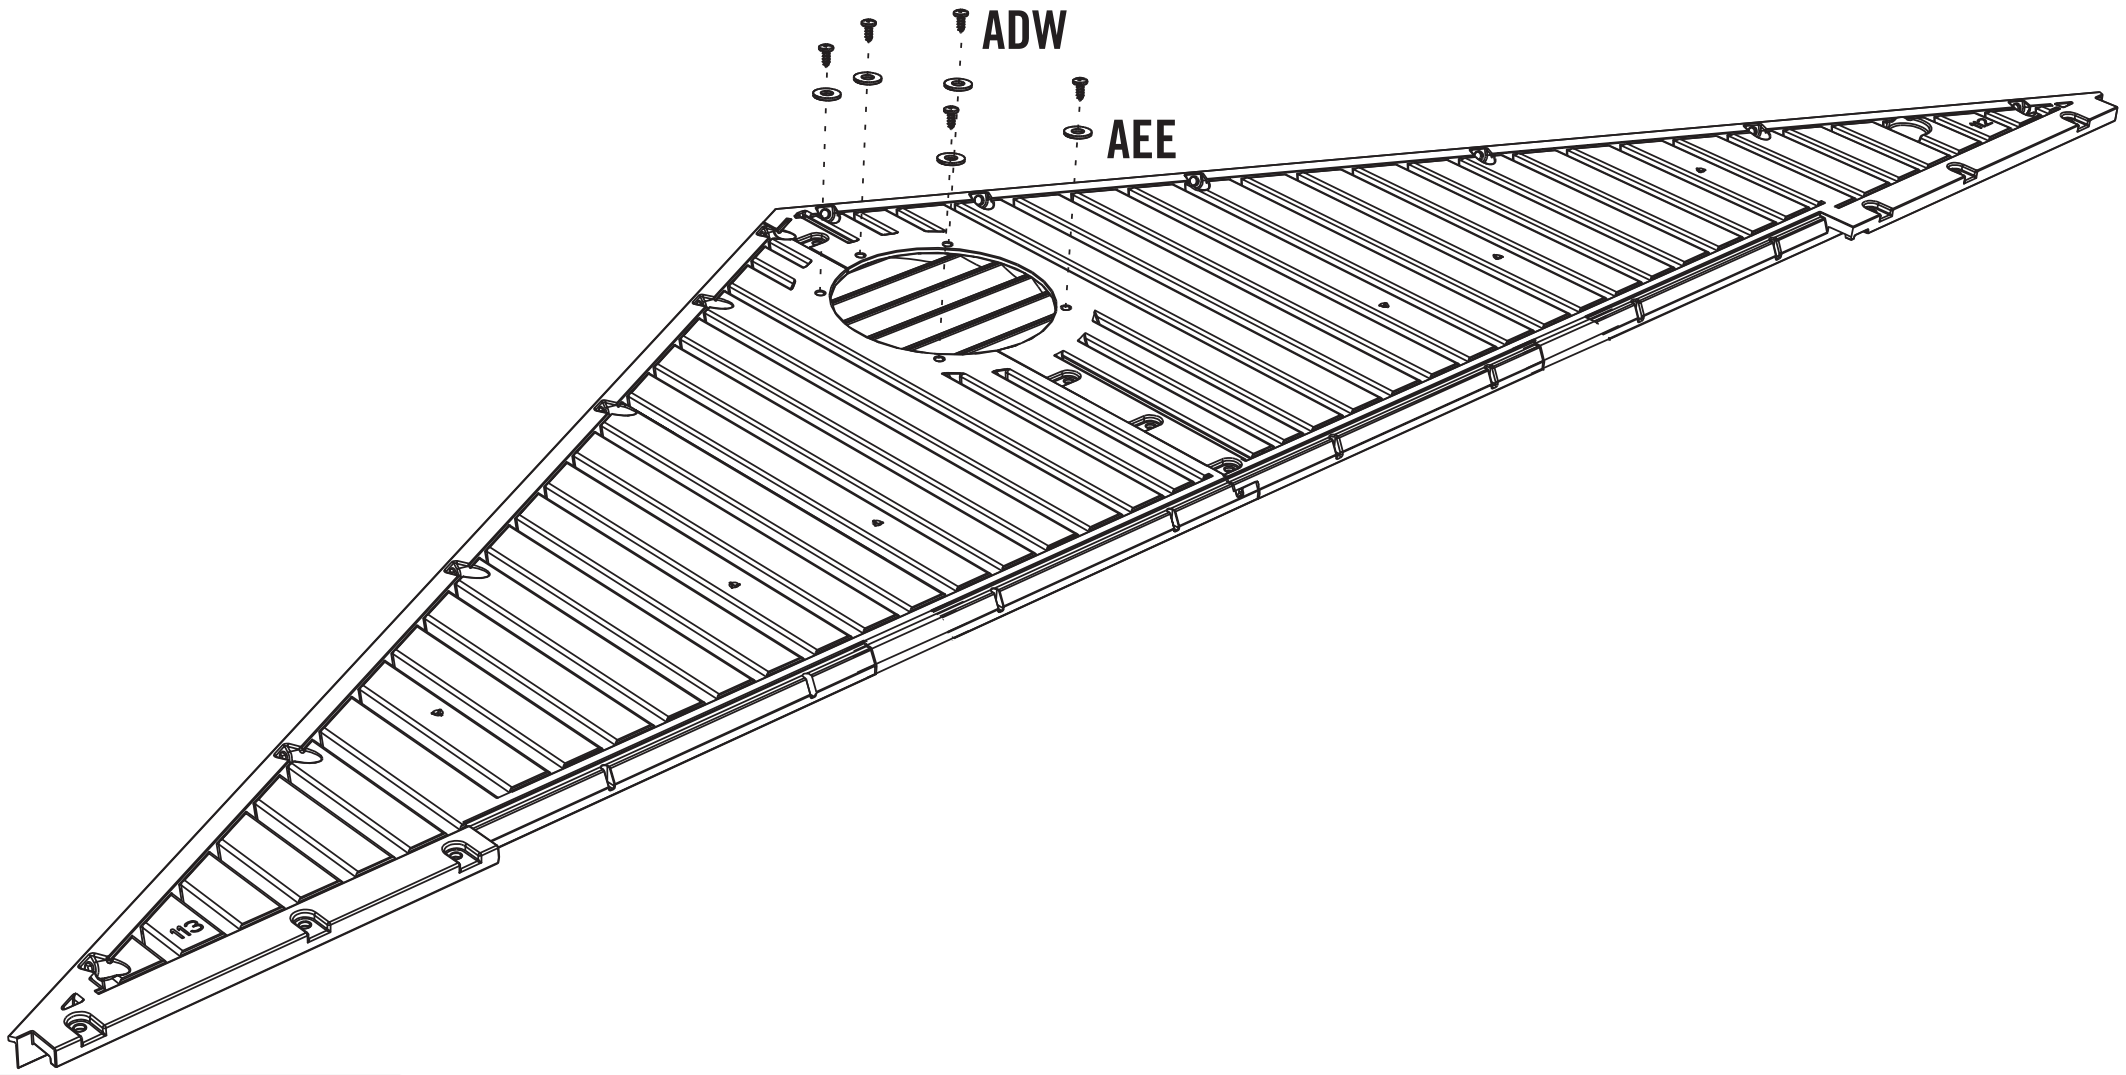



! *Note: Only use a hand screwdriver in this step.*

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE


ADW (x5)


AEE (x5)

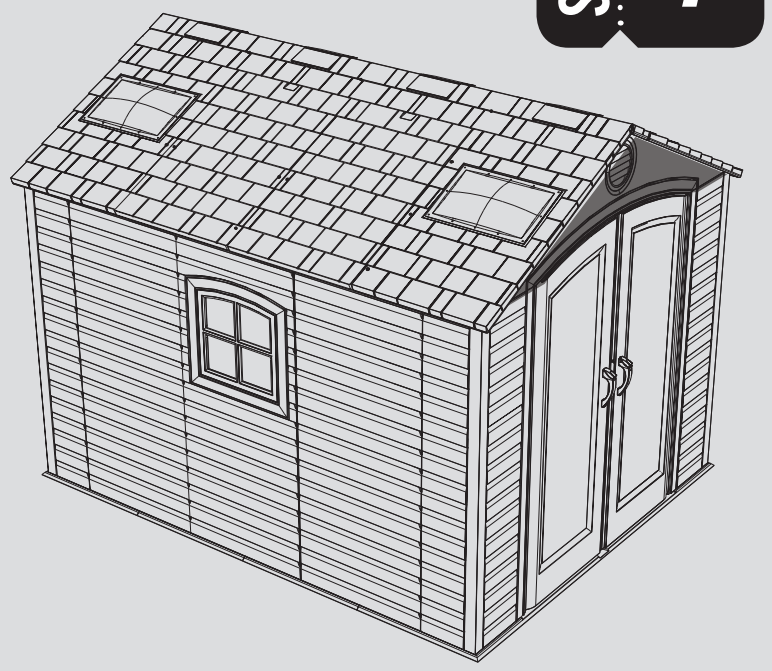

SEC 7.5

ENTRY GABLE ASSEMBLY

Lay **Entry Gable (AGF)** flat on the ground over the **Vent Screen (AIQ)** and **Louvered Vent (AGP)** as shown. Align the holes in the Louvered Vent with those in the Entry Gable.

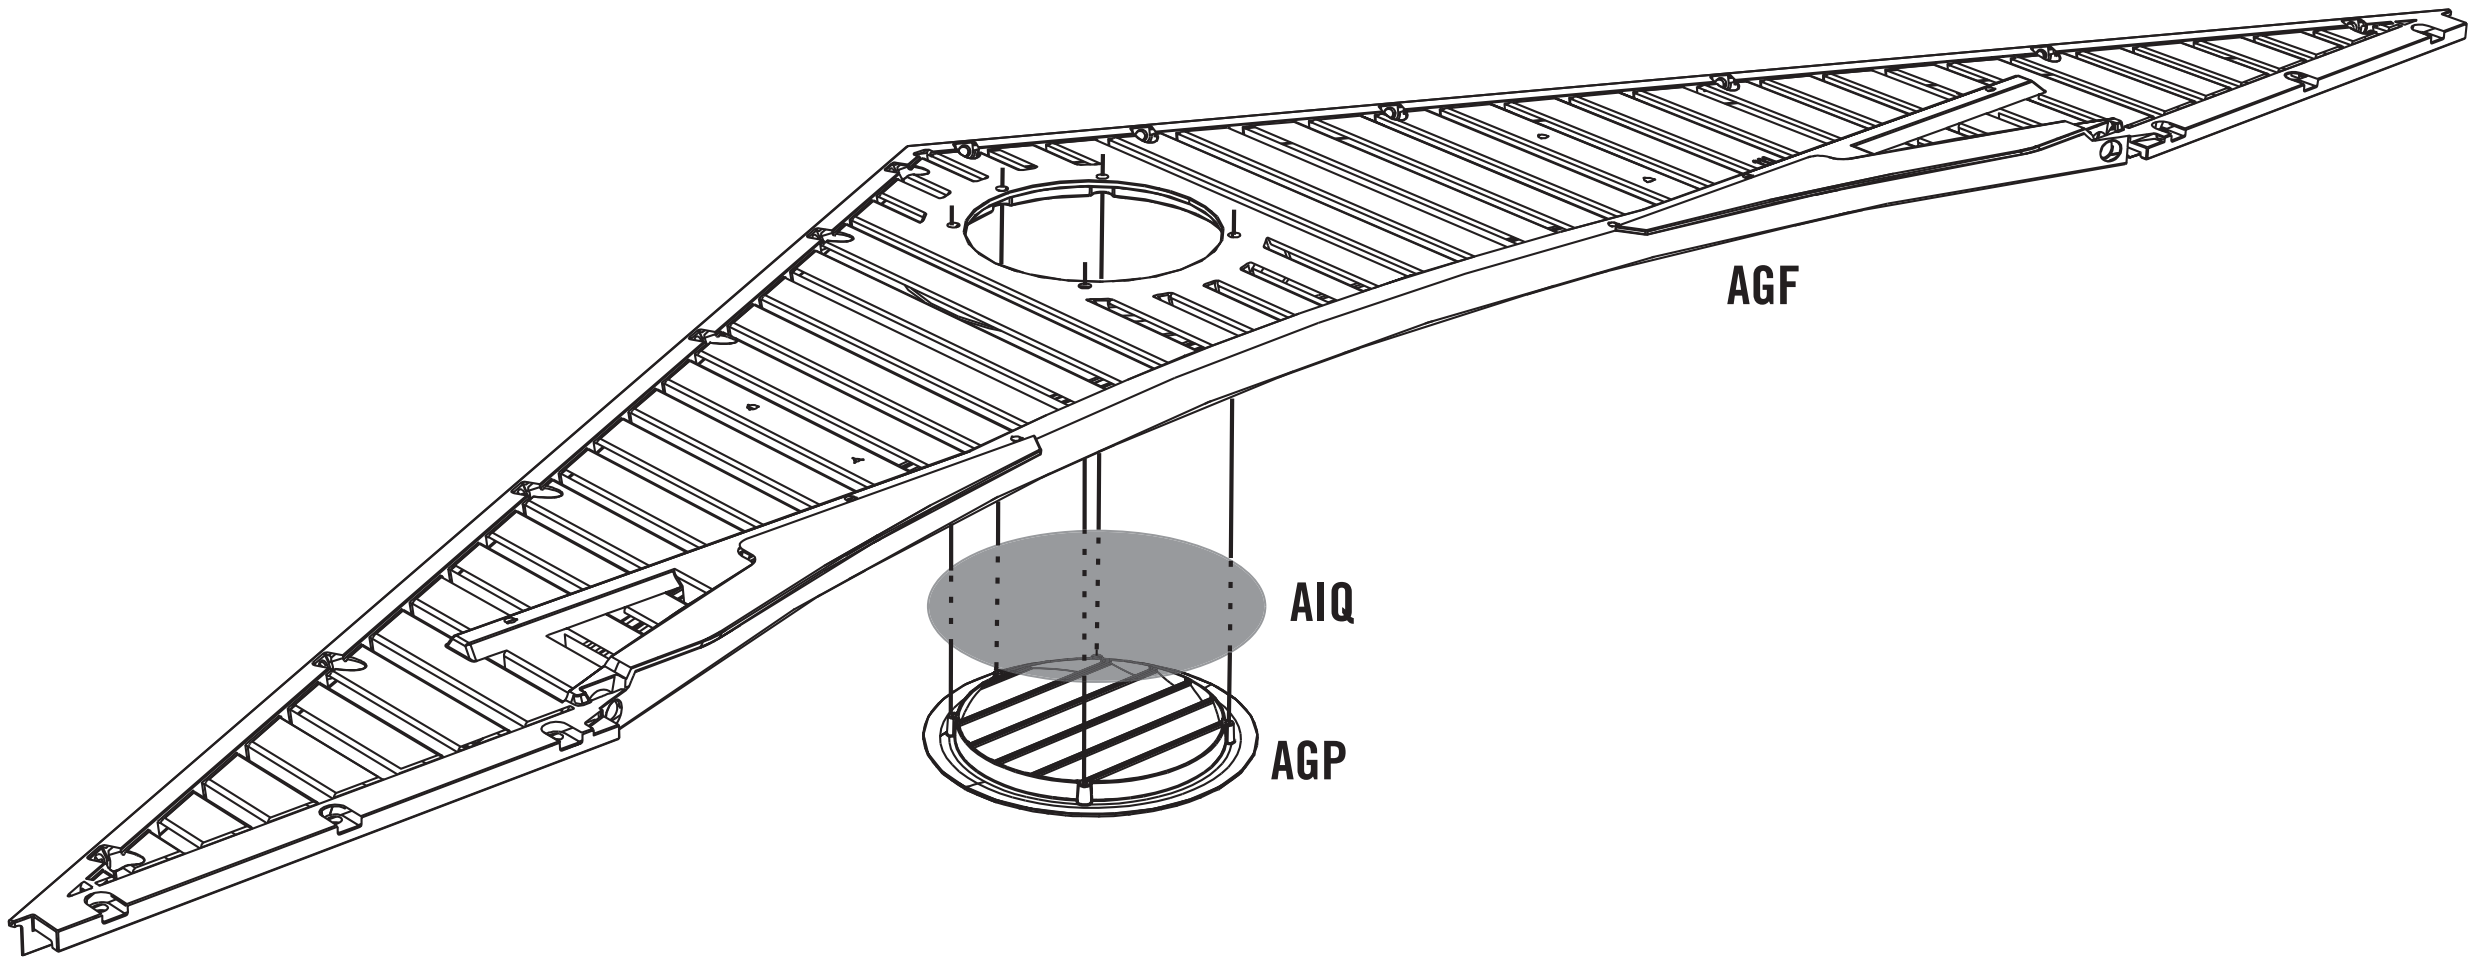

SEC 7.6

After aligning the holes, press down firmly on the Entry Gable when inserting the five (5) **#10 x 3/4" Pan-Head Screws (ADW)** and the five (5) **#10 x 1/2" Flat Washers (AEE)**. Pressing down firmly while inserting the Screws will help prevent the Vent Screen from twisting.

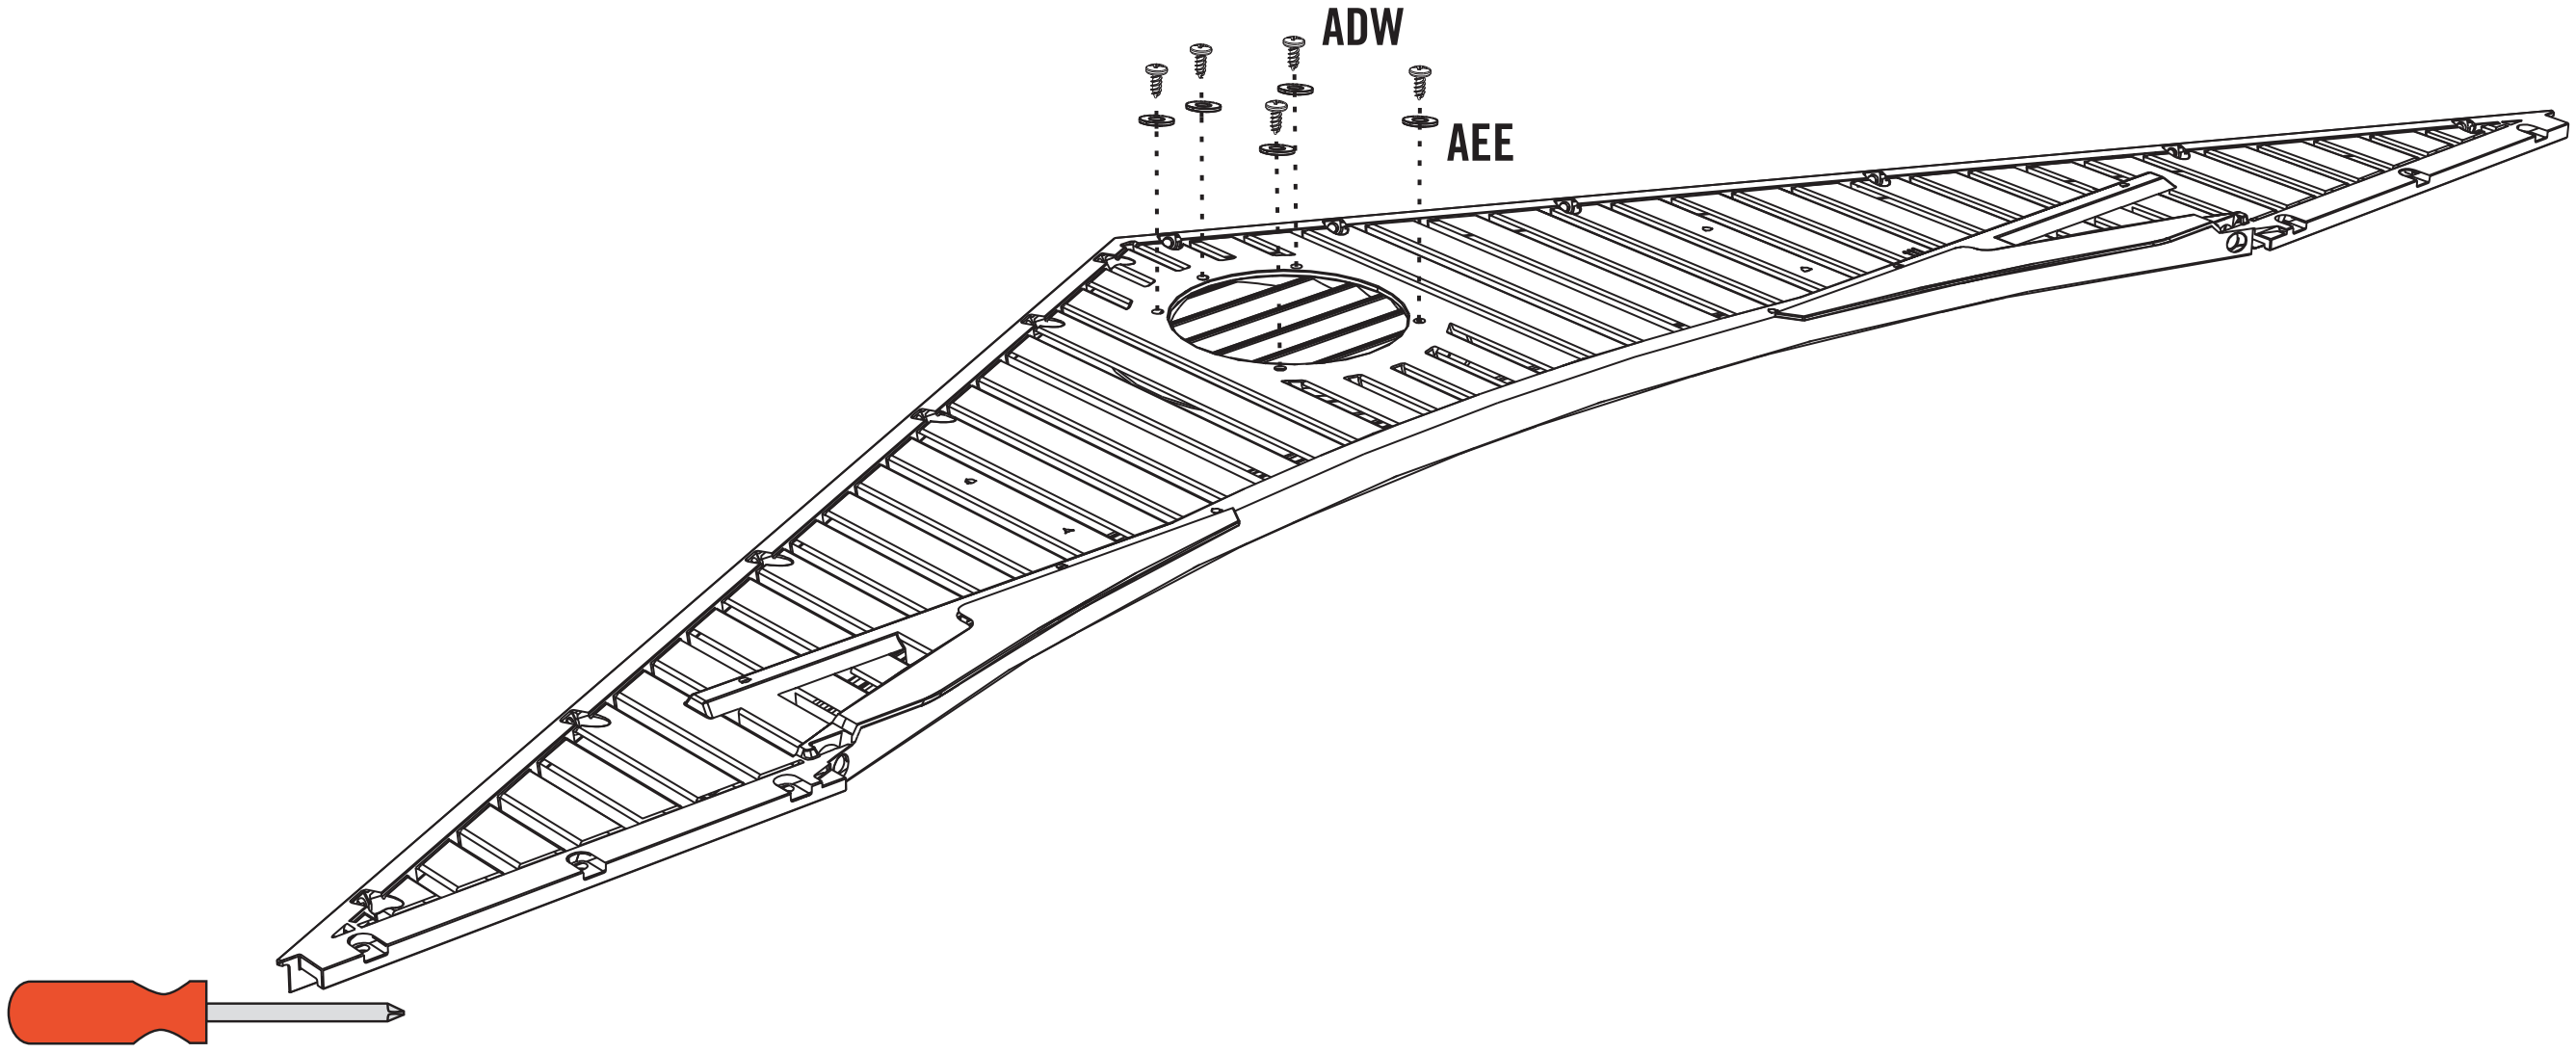

! *Note: Only use a hand screwdriver in this step.*

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



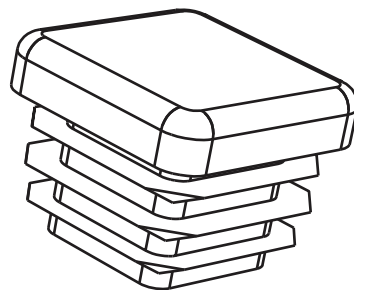

AHS (x2)



ADV (x6)

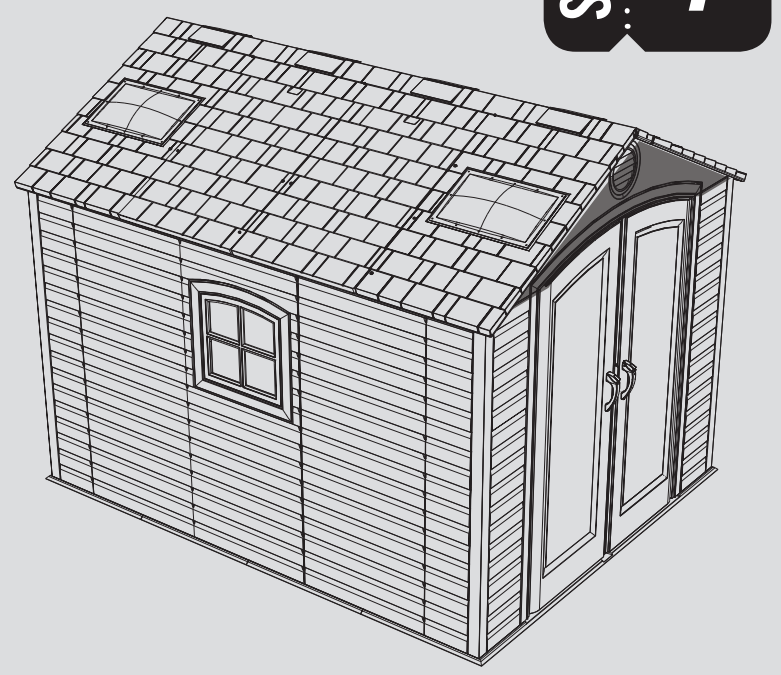

SEC 7.7

Insert an **End Plug (AHS)** into each end of **Entry Header Bar (AFE)**.

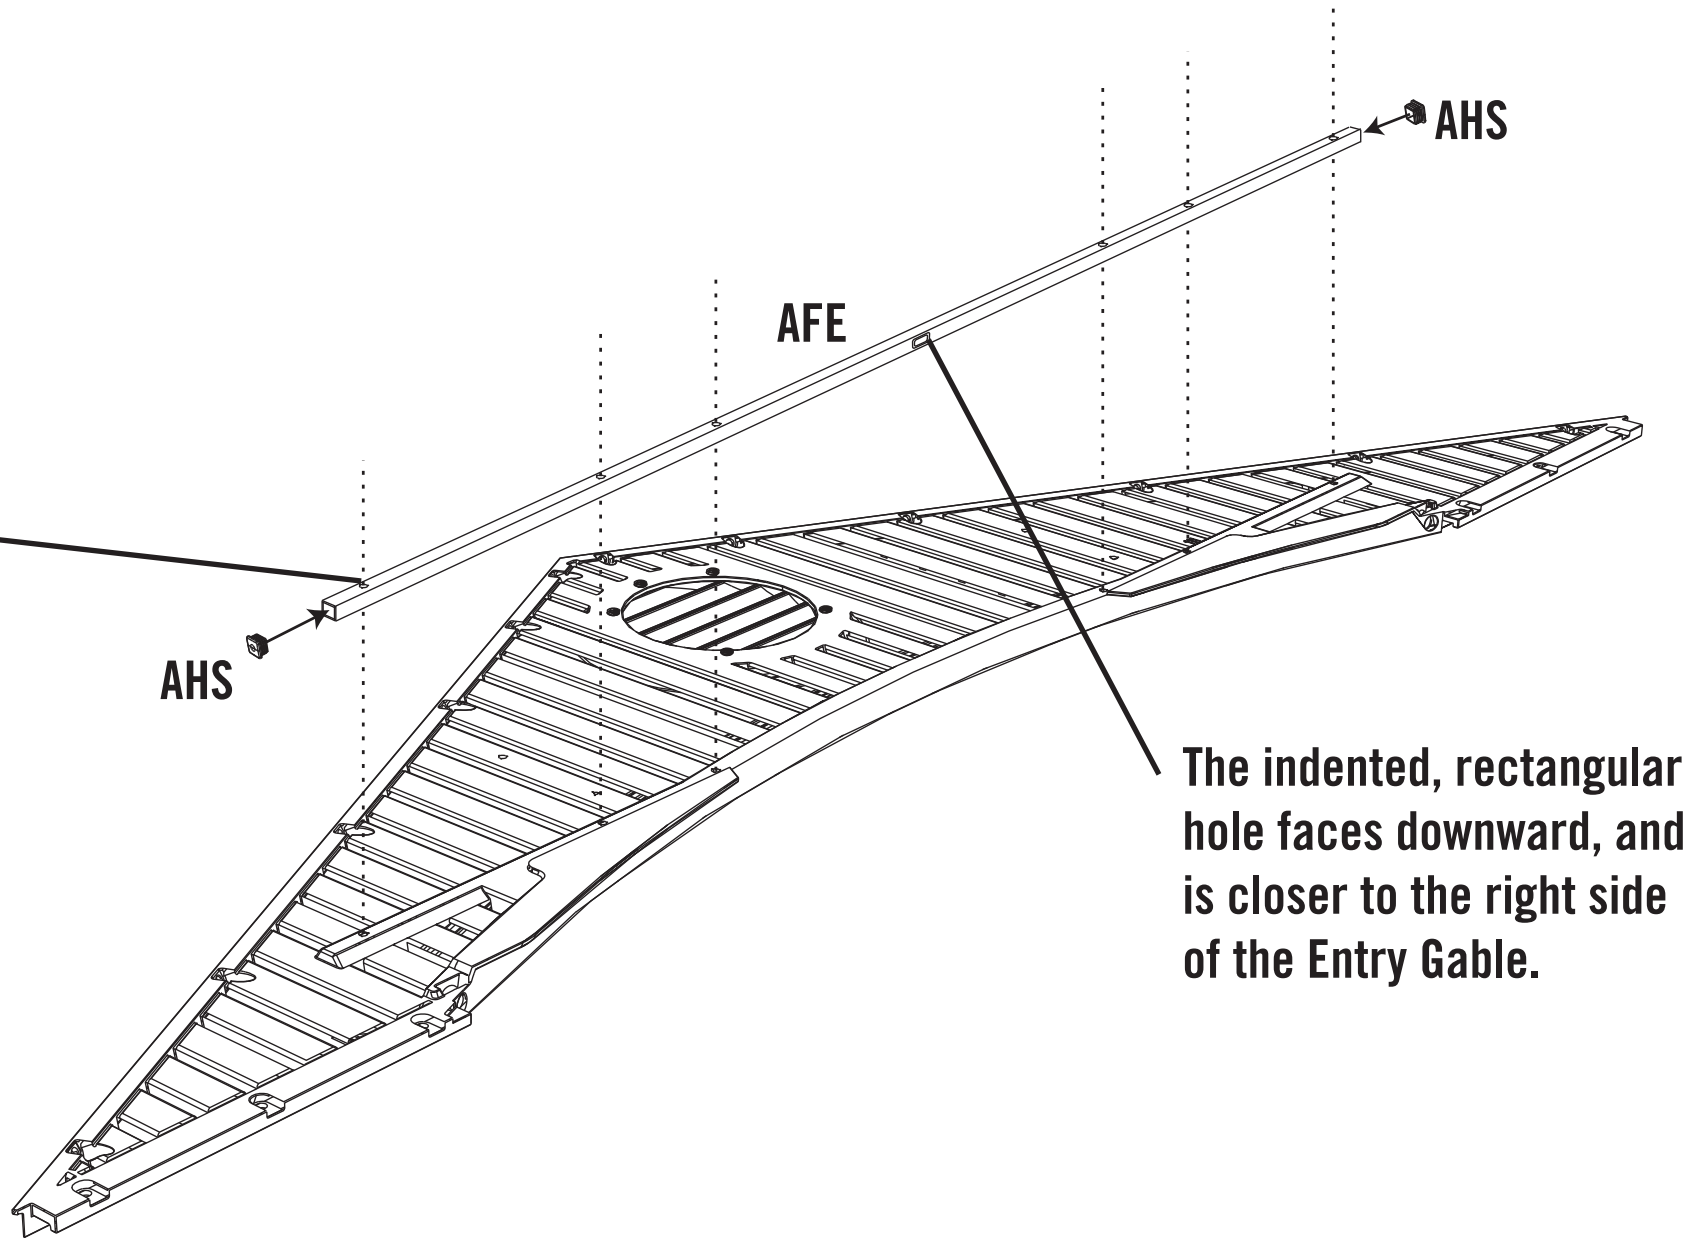

The flat screw holes should face away from the Entry Gable.

The indented, rectangular hole faces downward, and is closer to the right side of the Entry Gable.

! *Note: Only use a hand screwdriver in this step.*

SEC 7.8

Attach the Entry Header Bar to the Entry Gable Assembly, and secure with six (6) **1/4” x 1 1/8” Pan-Head Screws (ADV)**. Set aside.

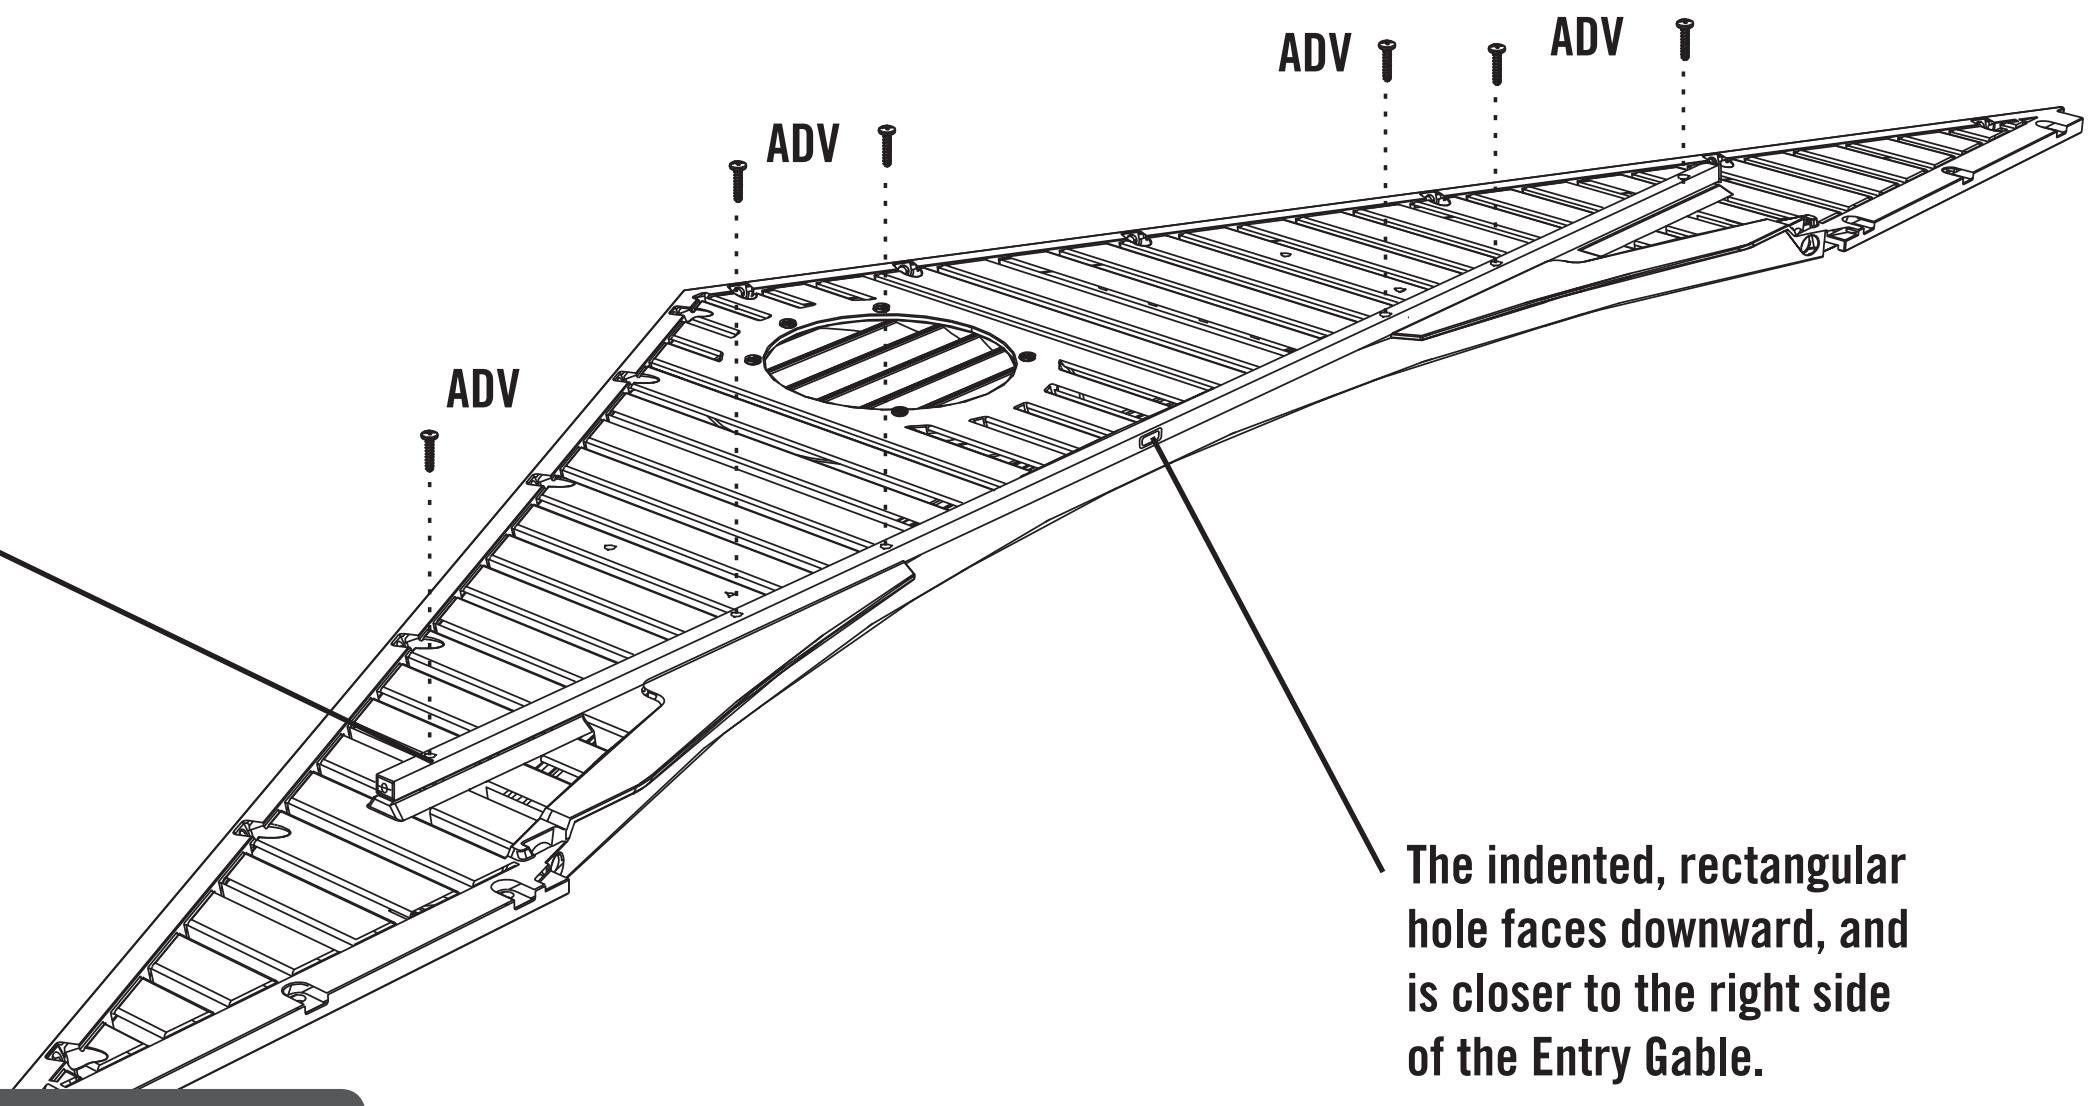

The flat screw holes should face away from the Entry Gable.

The indented, rectangular hole faces downward, and is closer to the right side of the Entry Gable.



! *Note: Only use a hand screwdriver in this step.*

SEC 8 DOMED SKYLIGHT ASSEMBLY

HARDWARE REQUIRED — HARDWARE BAG REQUIRED: BEC (x2)

Hardware is actual size (*Unless indicated otherwise)



ACR (x24)
#10 x 5/8” Carriage Bolt



ADK (x24)
#10 Cap Nut



AEE (x24)
#10 x 1/2” Flat Washer

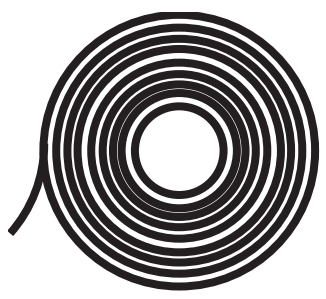

***AHI** (x2) Butyl Tape

PLASTIC PARTS REQUIRED — LOCATED IN BOX 1 & SMALL PARTS KIT: BON

Part shown at 4% actual size

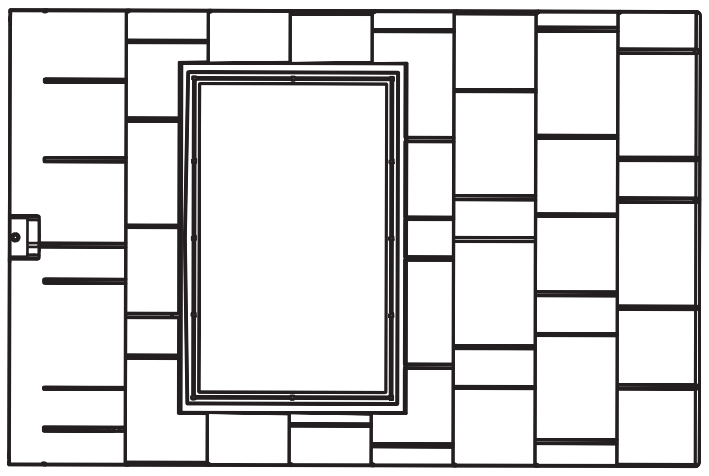

AHB (x2)
Roof Panel for Domed Skylight

Part shown at 8% actual size

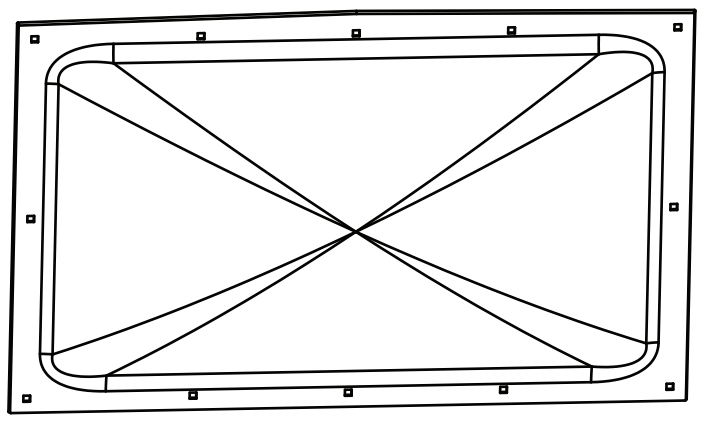

AGB (x2)
Domed Skylight

TOOLS REQUIRED



Plain Screwdriver

3/8” Wrench



Safety Glasses

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

SEC 8



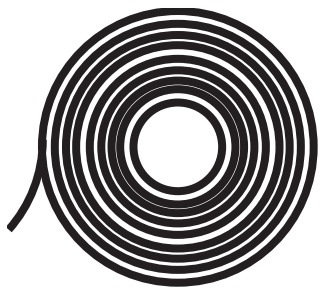

AHI (x2)
(Not to scale)

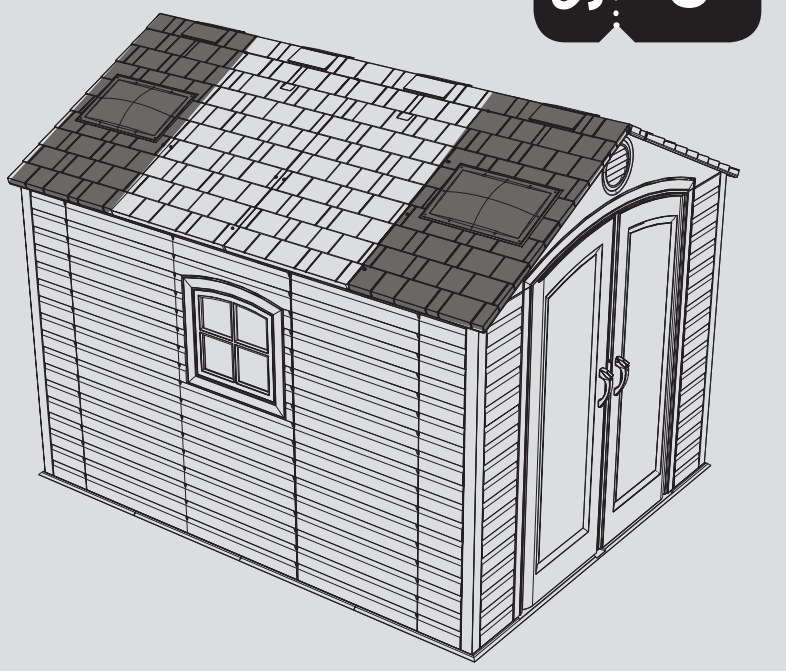

SEC 8.1

DOMED SKYLIGHT ASSEMBLY

Use a plain screwdriver to gently remove any excess plastic from the twelve holes in the **Roof Panel for Domed Skylight (AHB)**. It's important that the hole stay square; try not to round the corners of the edges of the holes.

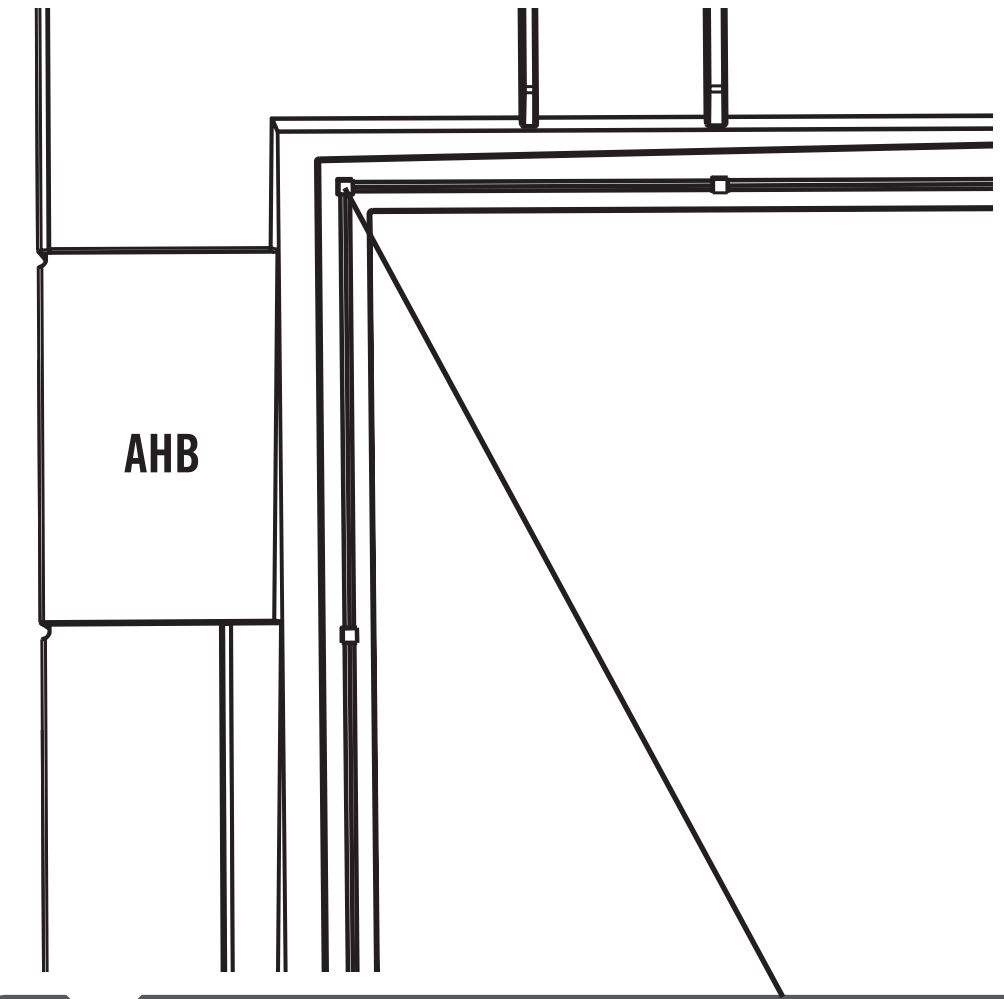

! *Note: Use a plain screwdriver to remove any excess plastic from all holes in Panel. Ensure the holes remain square.*

SEC 8.2

Stick the end of the **Butyl Tape (AHI)** over the groove and top, left hole of the Roof Panel for Domed Skylight as indicated below. Move to the right and over the groove covering all the holes along the top of the opening. Once the top, right corner and hole are covered, cut the Butyl Tape. Run your finger along the paper backing pressing down slightly to remove any gaps or bubbles between the Butyl Tape and the groove. Remove the paper backing from the piece you just applied. Overlap the end of the roll of Butyl Tape with the end you just cut and apply the Butyl Tape over the holes along the groove on the right of the opening. Continue applying the Butyl Tape in this fashion until all holes have been covered and the ends overlap.

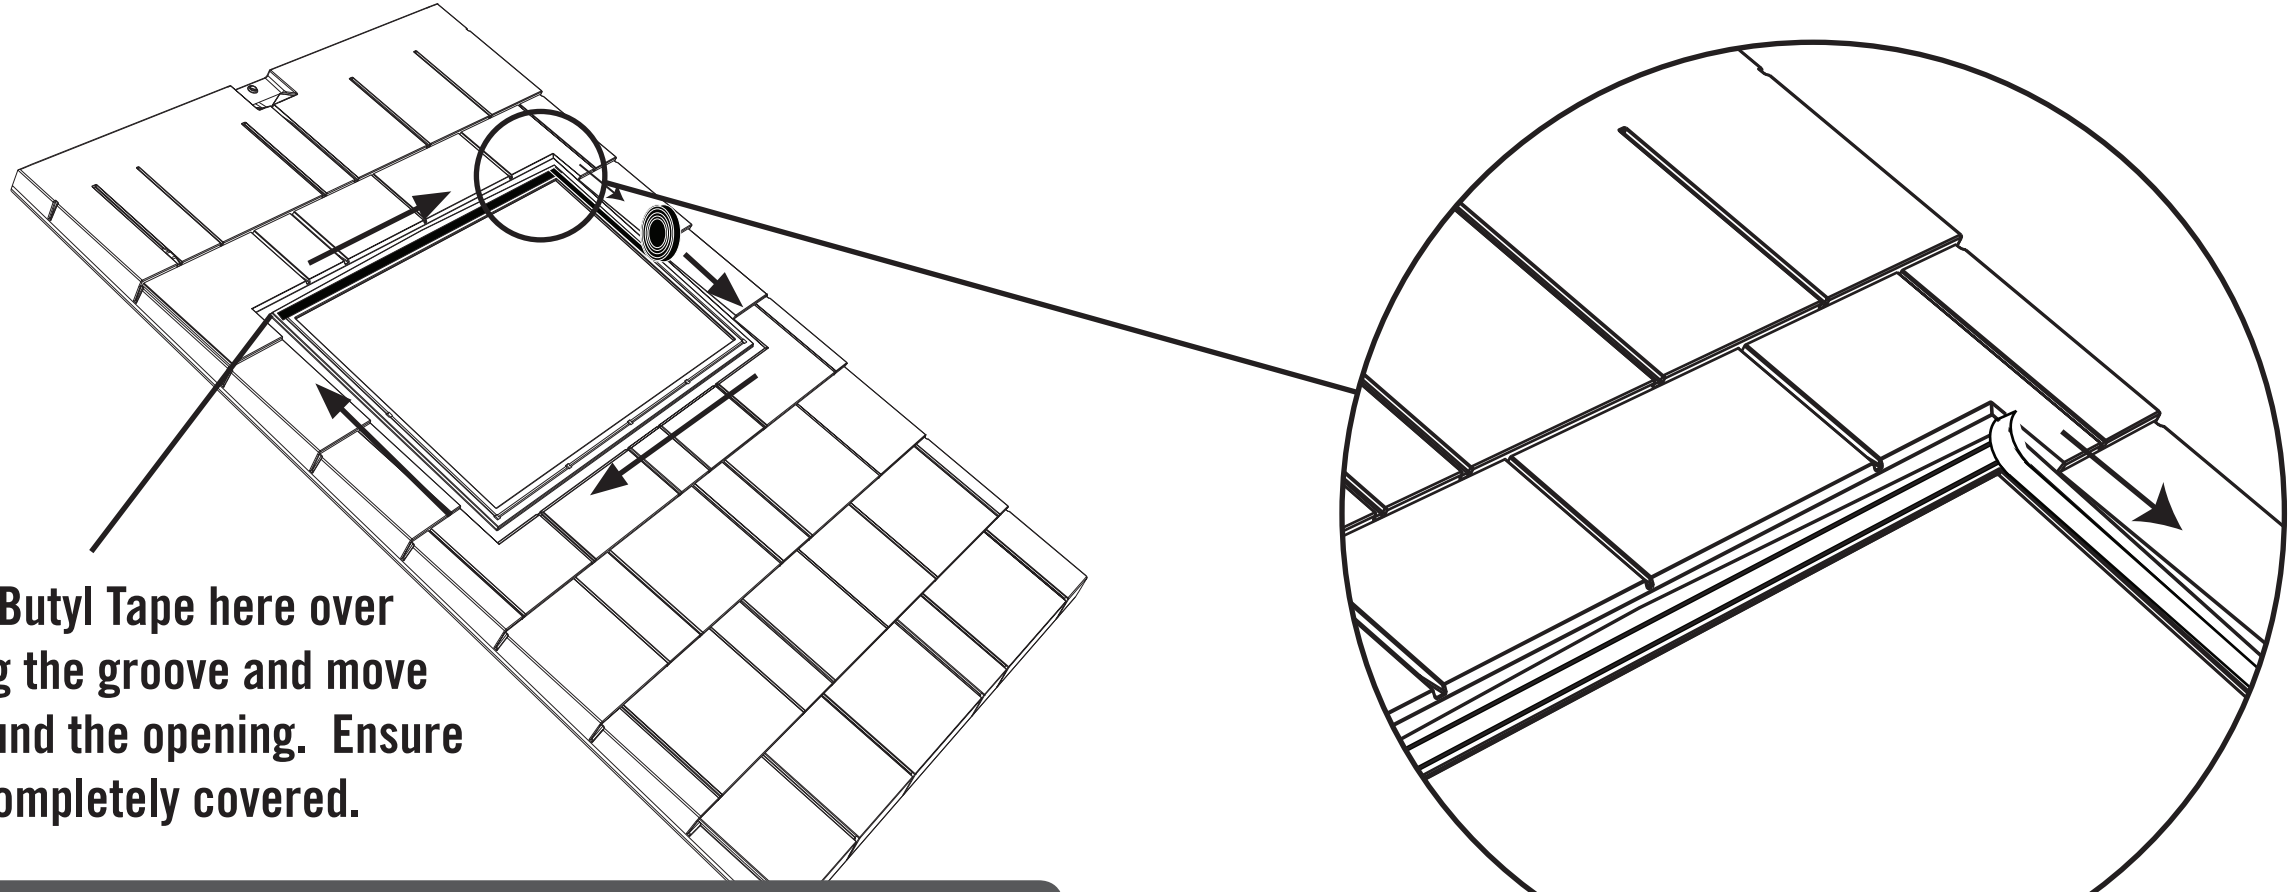

Start applying Butyl Tape here over the holes along the groove and move clockwise around the opening. Ensure all holes are completely covered.

! *Note: Butyl Tape must overlap at ends and cover all twelve holes.*

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



NO HARDWARE REQUIRED FOR THIS PAGE

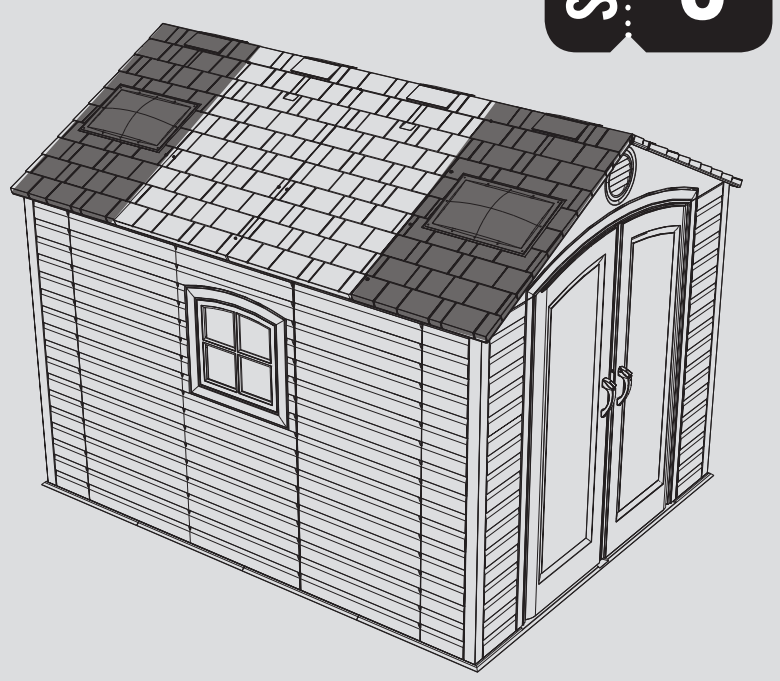

SEC 8.3

Insert a screwdriver through the Butyl Tape and into the twelve holes. This will help you align the holes in the Domed Skylight with those in the Roof Panel for Domed Skylight in the next step.

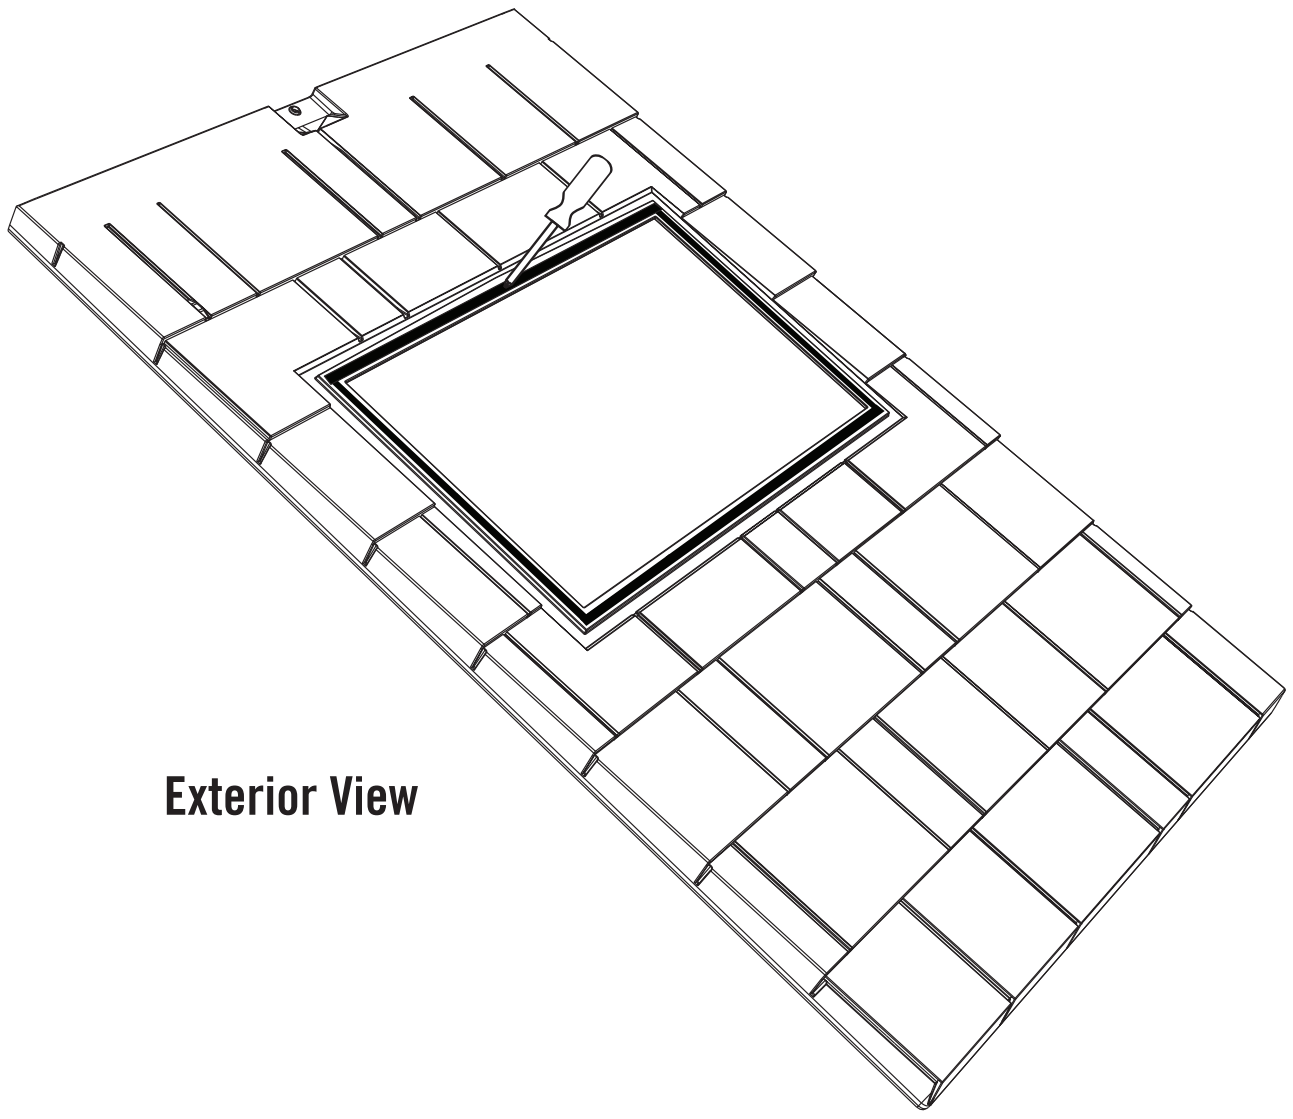

Exterior View

SEC 8.4

Remove the protective plastic film from **both** sides of the **Domed Skylight (AGB)**. Carefully align the holes in the Domed Skylight with those in the Butyl Tape. Set the Domed Skylight over the opening in the Roof Panel for Domed Skylight. Press down and verify there are no gaps or bubbles between the Butyl Tape and the Domed Skylight.

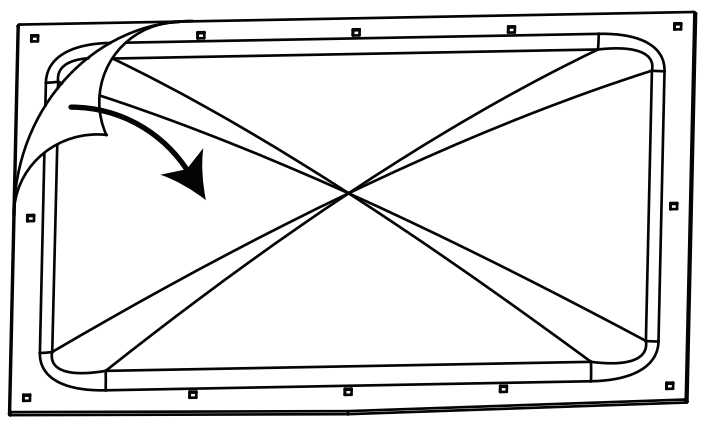

AGB

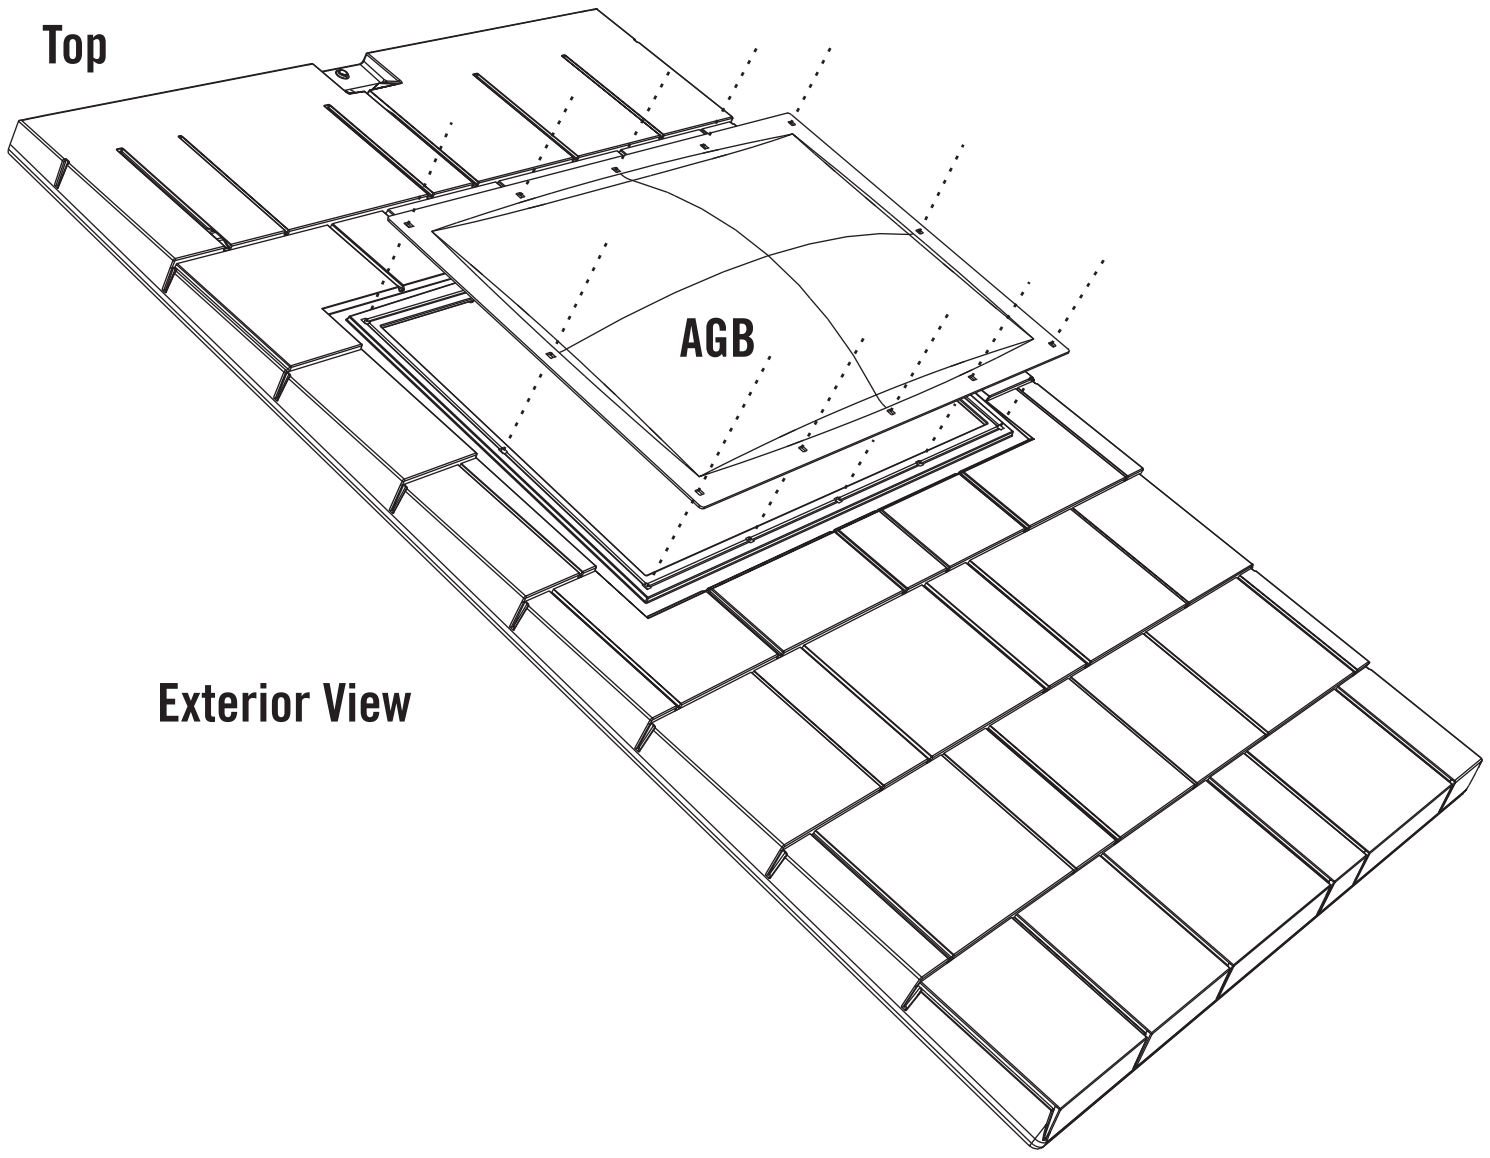

Exterior View

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

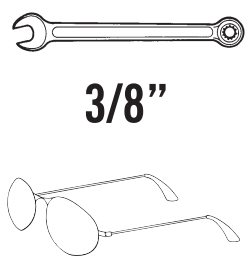



ACR (x24)



ADK (x24)



AEE (x24)

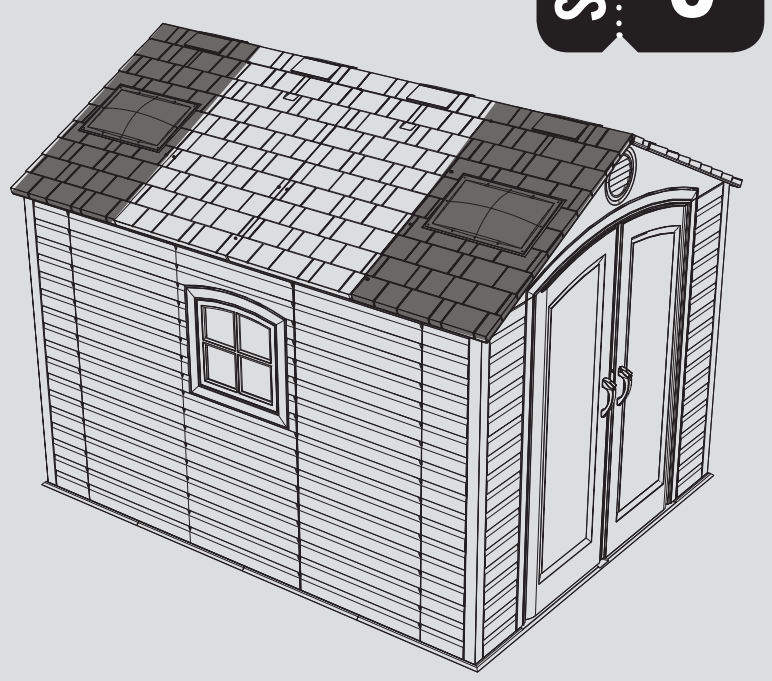

SEC 8.5

Insert one **#10 x 5/8” Carriage Bolt (ACR)** through each hole in the Domed Skylight. Press the Bolt through the Butyl Tape and through the Roof Panel for Domed Skylight. The necks of the Carriage Bolts fit into the square holes in the Domed Skylight.

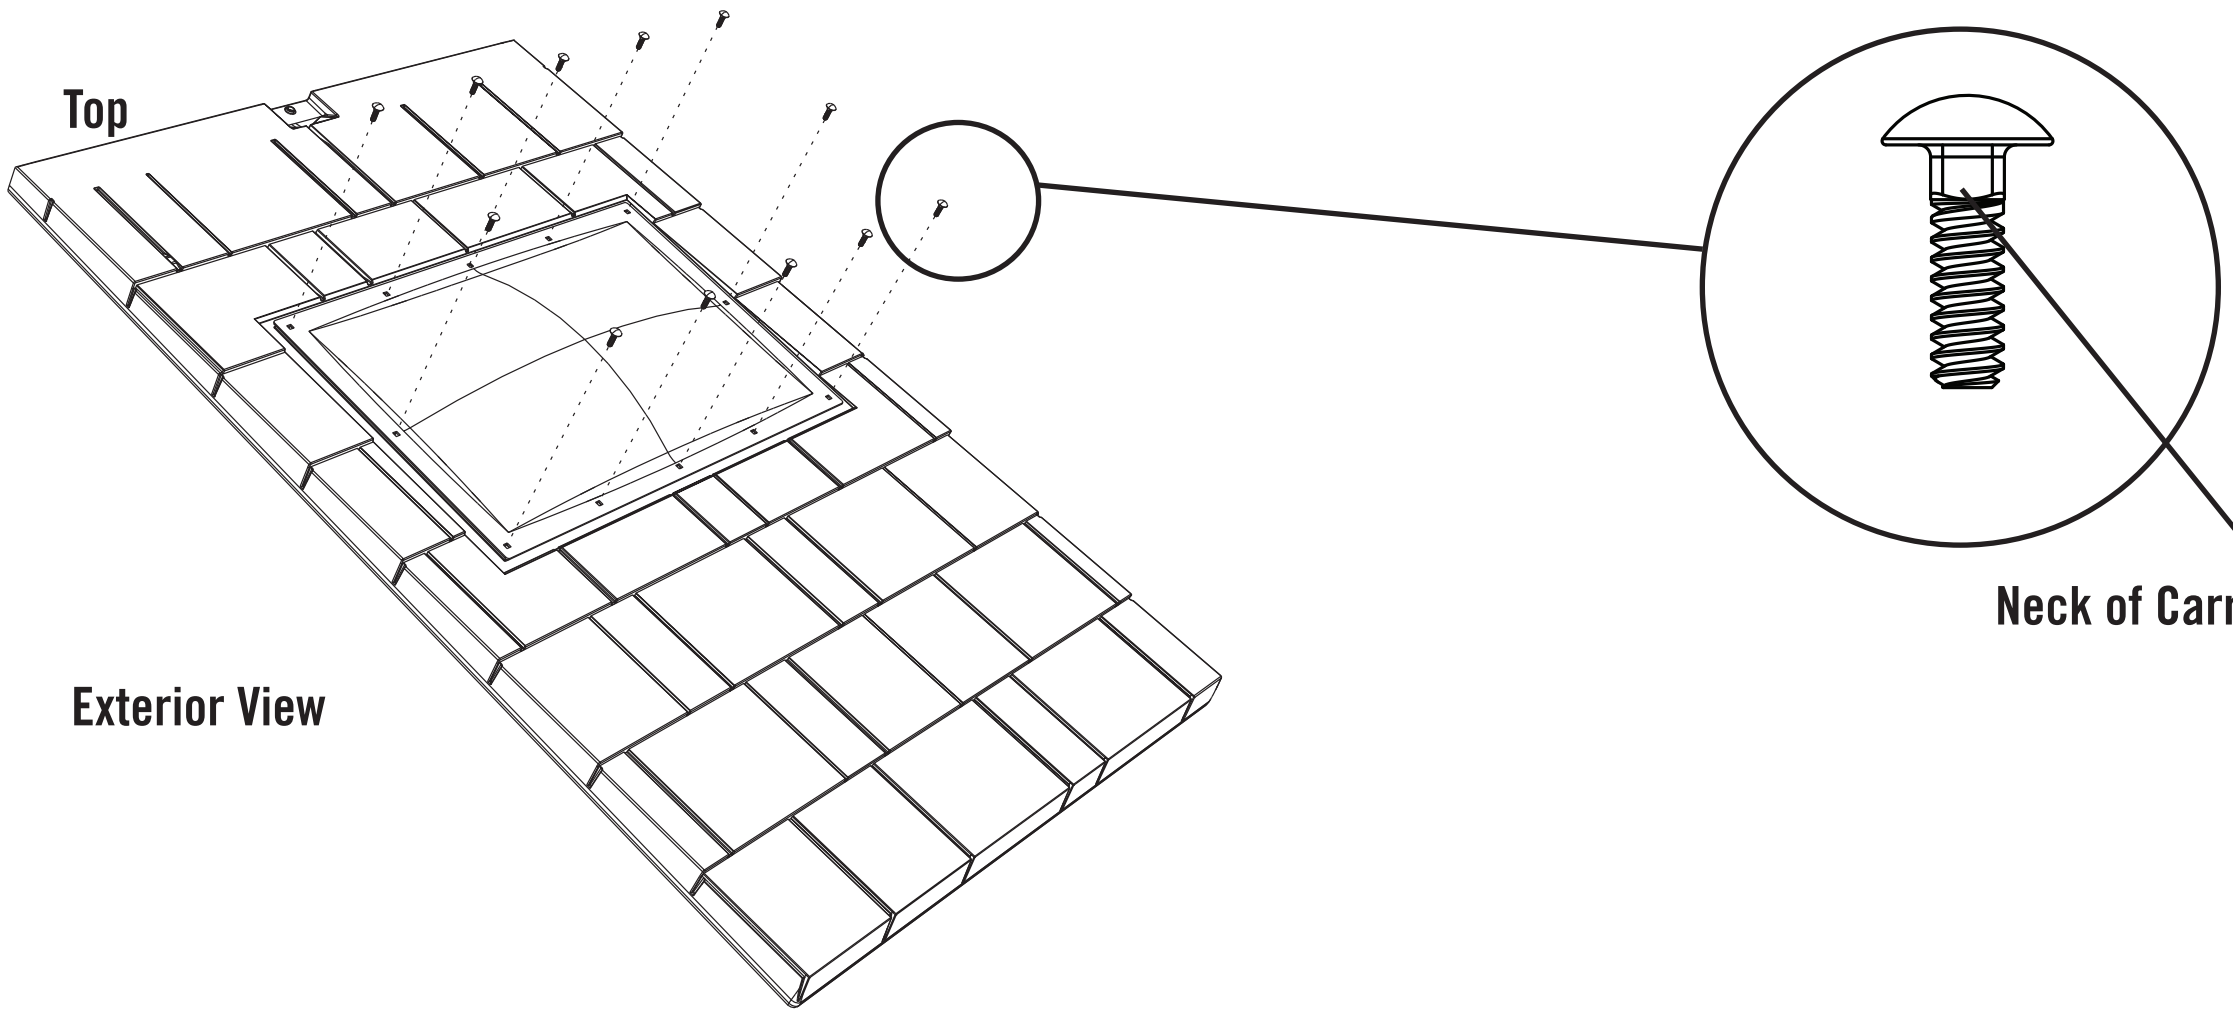
Top
Exterior View
Neck of Carriage Bolt

SEC 8.6

Secure the Domed Skylight to the Roof Panel for Domed Skylight with one (1) **#10 x 1/2” Flat Washer (AEE)** and one (1) **#10 Cap Nut (ADK)** for each Carriage Bolt. Set Skylight/Panel Assembly aside. **Repeat this section for the second Roof Panel for Domed Skylight.**

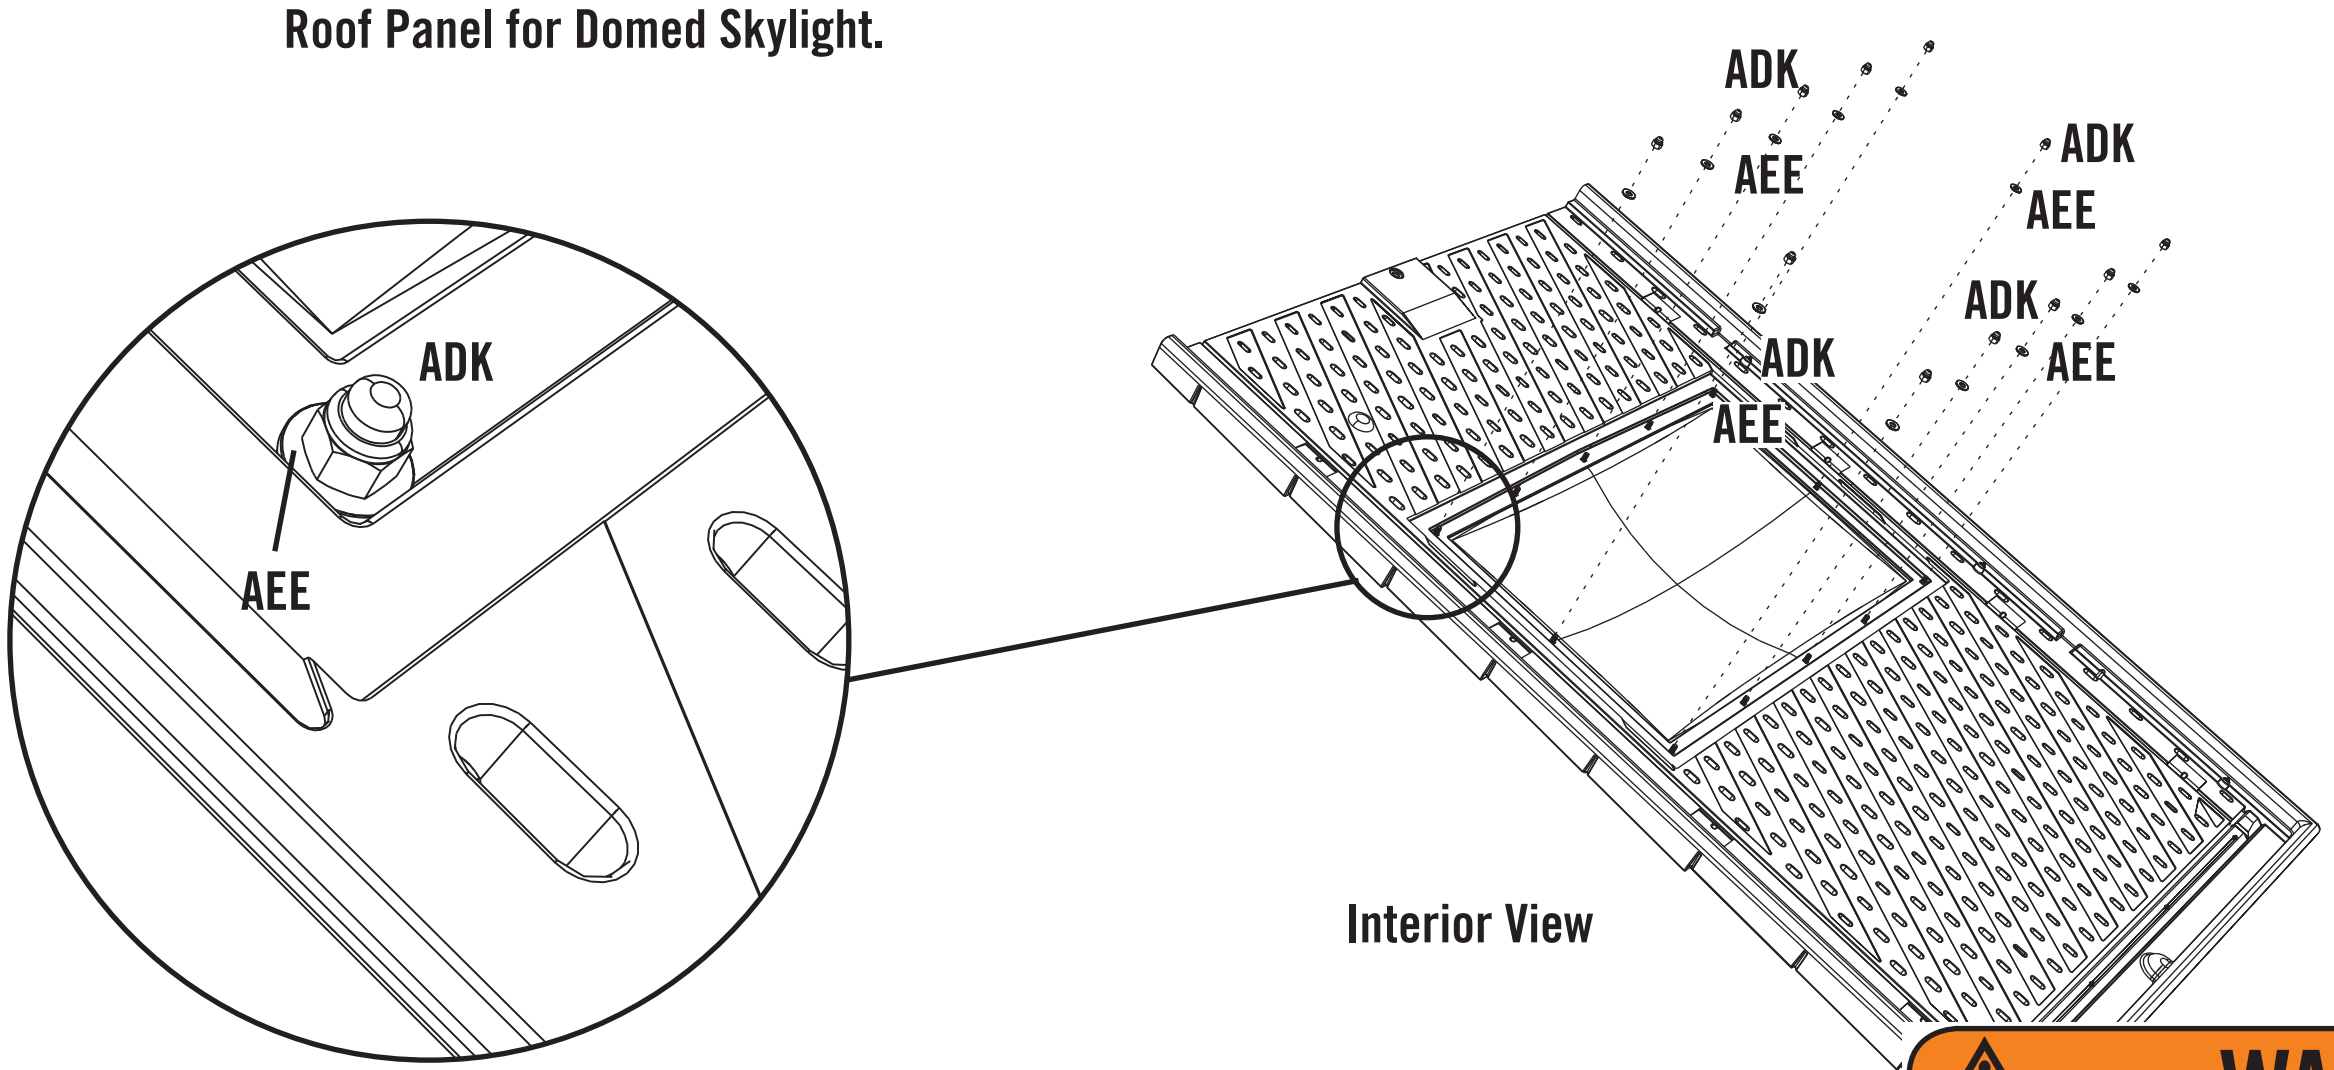
ADK
AEE
ADK
AEE
ADK
AEE
ADK
AEE
ADK
AEE
Interior View

WARNING

Do not overtighten the Cap Nut. If the end of the Bolt breaks through the plastic cap, call our Customer Service Department. Exposed threads on the end of the Bolt may cause serious injuries.

SEC 9 DOOR & ENTRY GABLE INSTALLATION

HARDWARE REQUIRED HARDWARE BAG REQUIRED: BHZ

Hardware shown at actual size (*Unless noted otherwise)



ADZ (x6)
1/4” x 5/8” Pan-Head Screw



AHP (x2)
Cotter Pin



ADX (x4)
#10 x 1/2” Pan-Head Screw

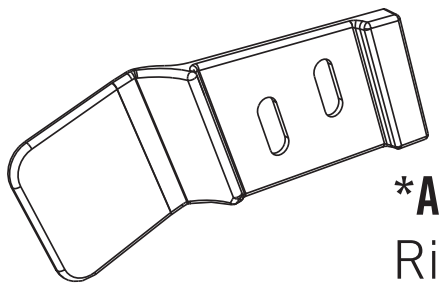

***AIM** (x1)
Right Gap Flap



***AIC** (x1)
Left Gap Flap

PLASTIC PARTS REQUIRED FROM SECTIONS 5, 6, & 7

Parts shown at 4% of actual size

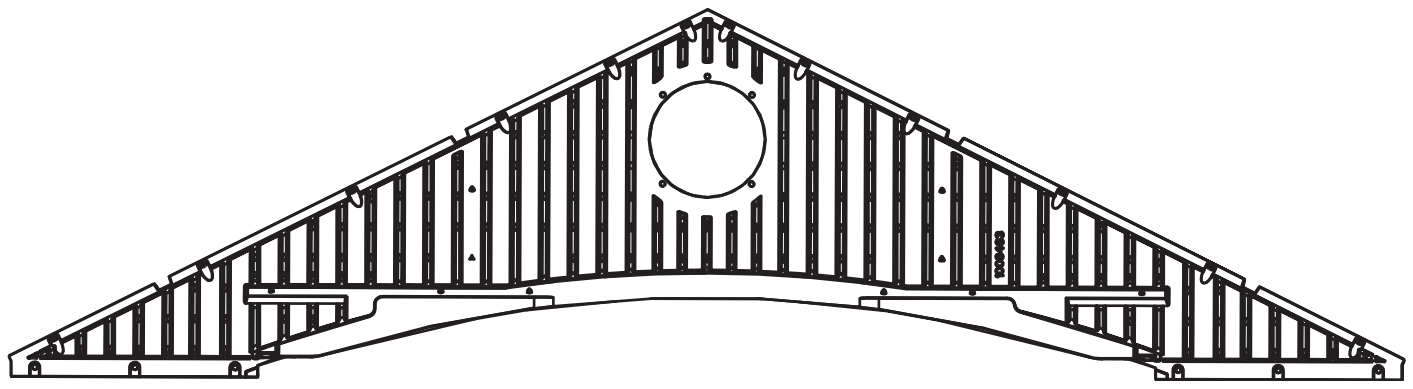

Entry Gable Assembly **Rear View**

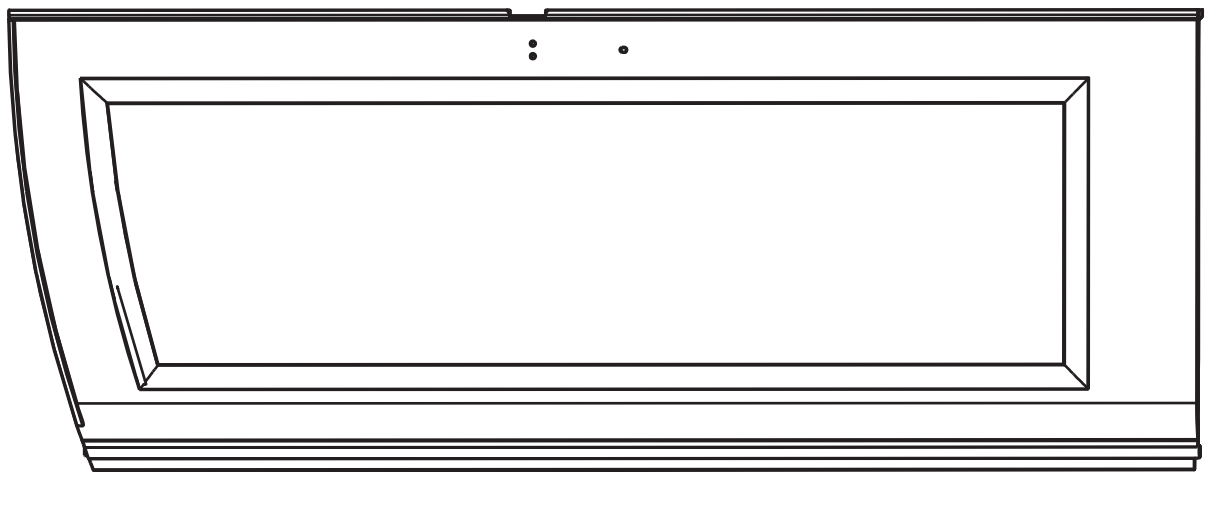

Left Door Assembly

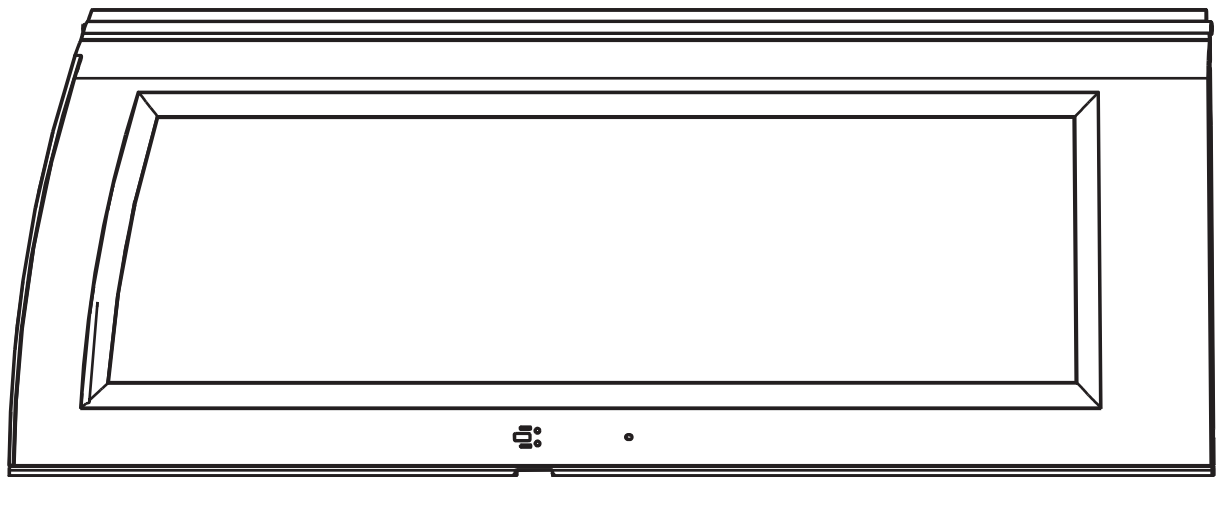

Right Door Assembly

TOOLS REQUIRED



Phillips Screwdriver



Pliers



Safety Glasses

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE

SEC 9

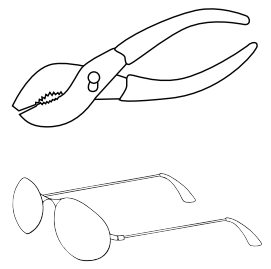



AHP (x2)

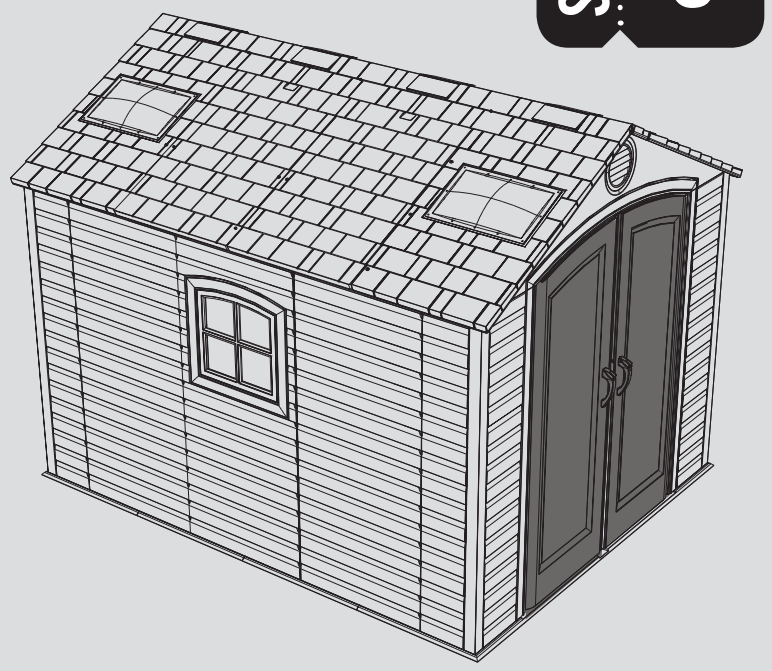

SEC 9.1

DOOR INSTALLATION

Align the hole in the bottom of the Hinge of the **Left Door Assembly** with the hole in the Door Hinge Bushing on the Floor of your shed, and insert the Door Hinge Tube into the Door Hinge Bushing.

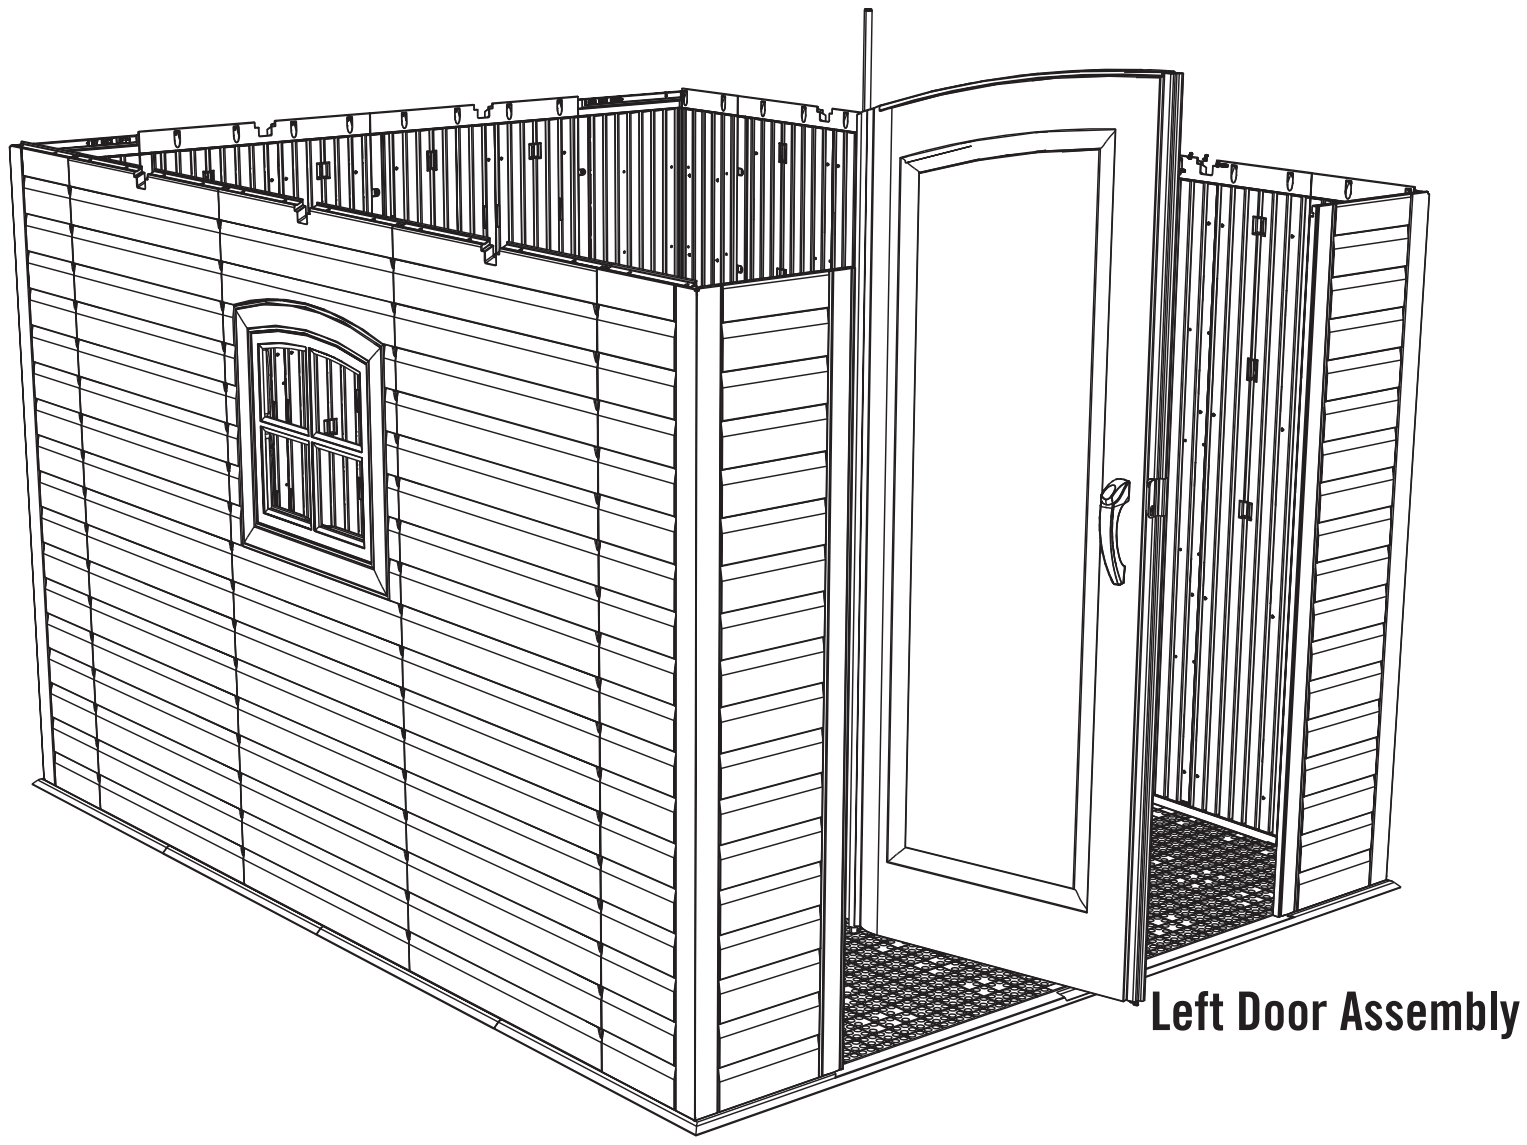

SEC 9.2

Insert a **Cotter Pin (AHP)** through the Bushing and Door Hinge. Use a pair of pliers to bend the ends of the Cotter Pins outward. **Repeat these steps for the Right Door Assembly.**

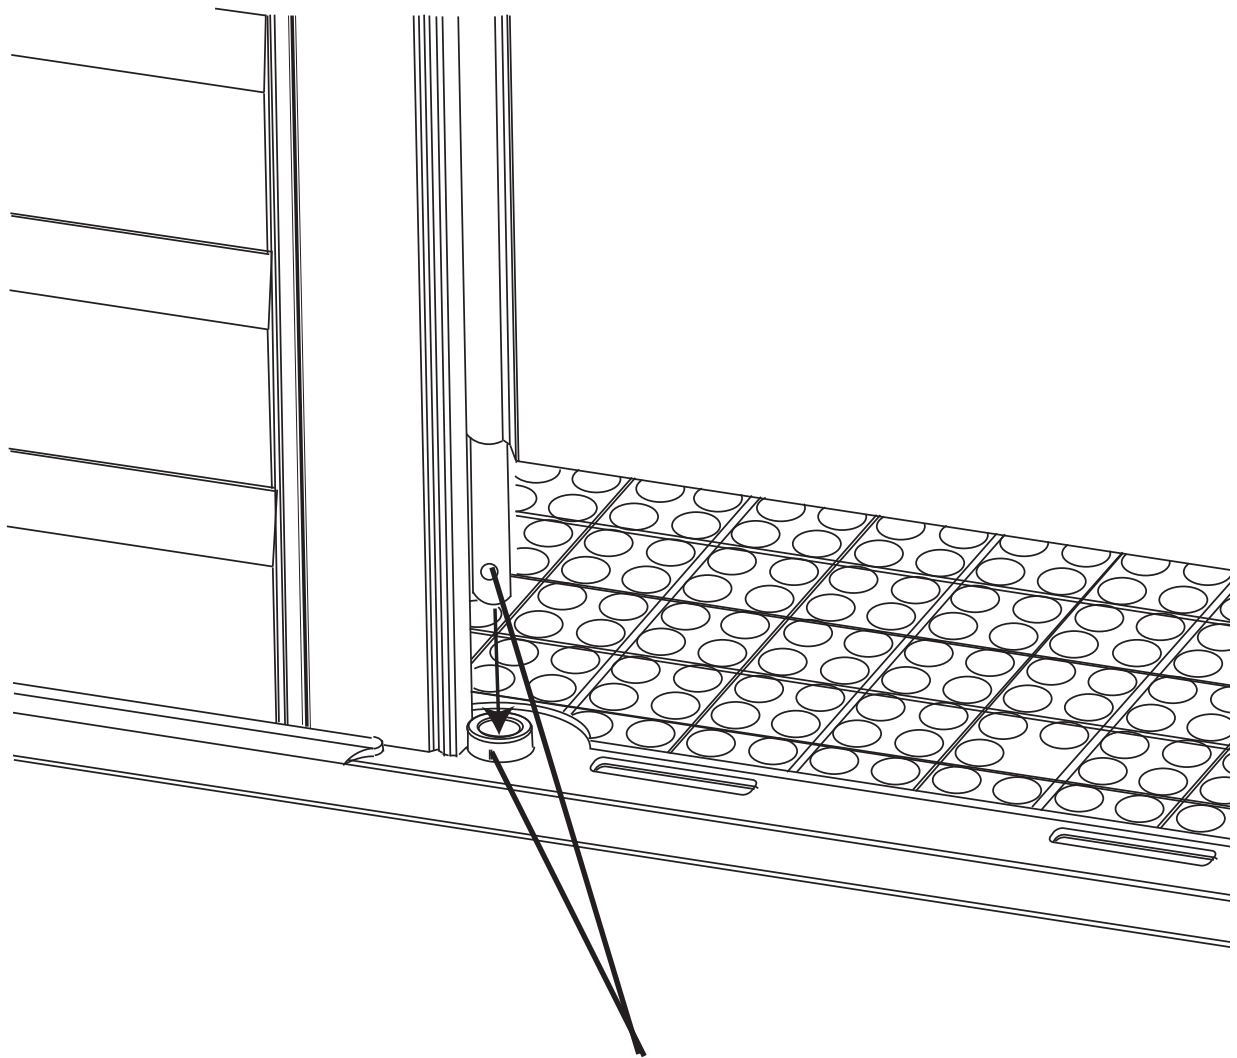

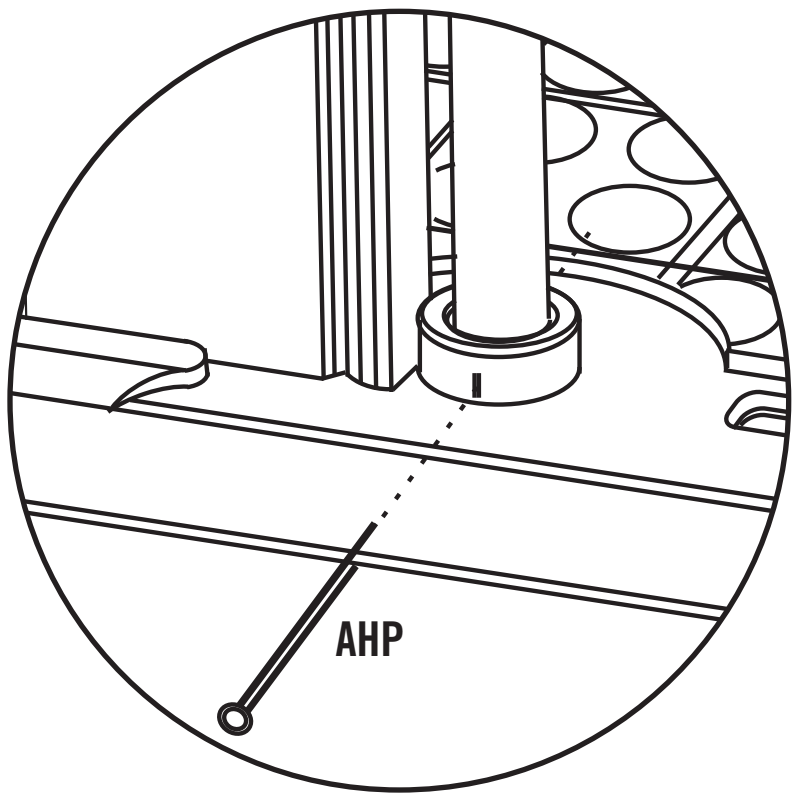

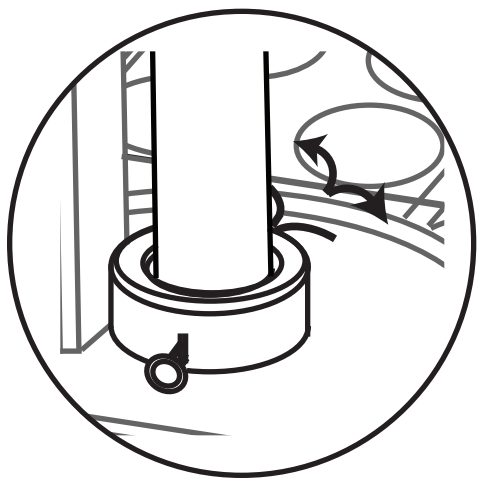

! *Note: Use pliers to bend back the ends of the Cotter Pin (AHP).*

! *Note: Ensure that these two holes line up, so that the Cotter Pin (AHP) can be inserted.*

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE





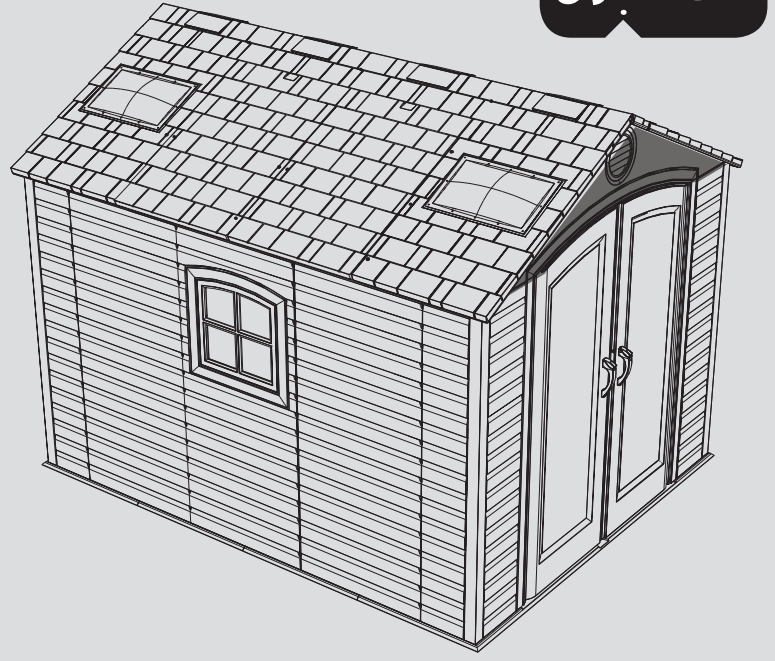

2 ADULTS REQUIRED FOR THE STEPS ON THIS PAGE

SEC 9.3

ENTRY GABLE INSTALLATION

Slide the two holes in the **Entry Gable Assembly** down over the Door Hinge Tubes as shown.

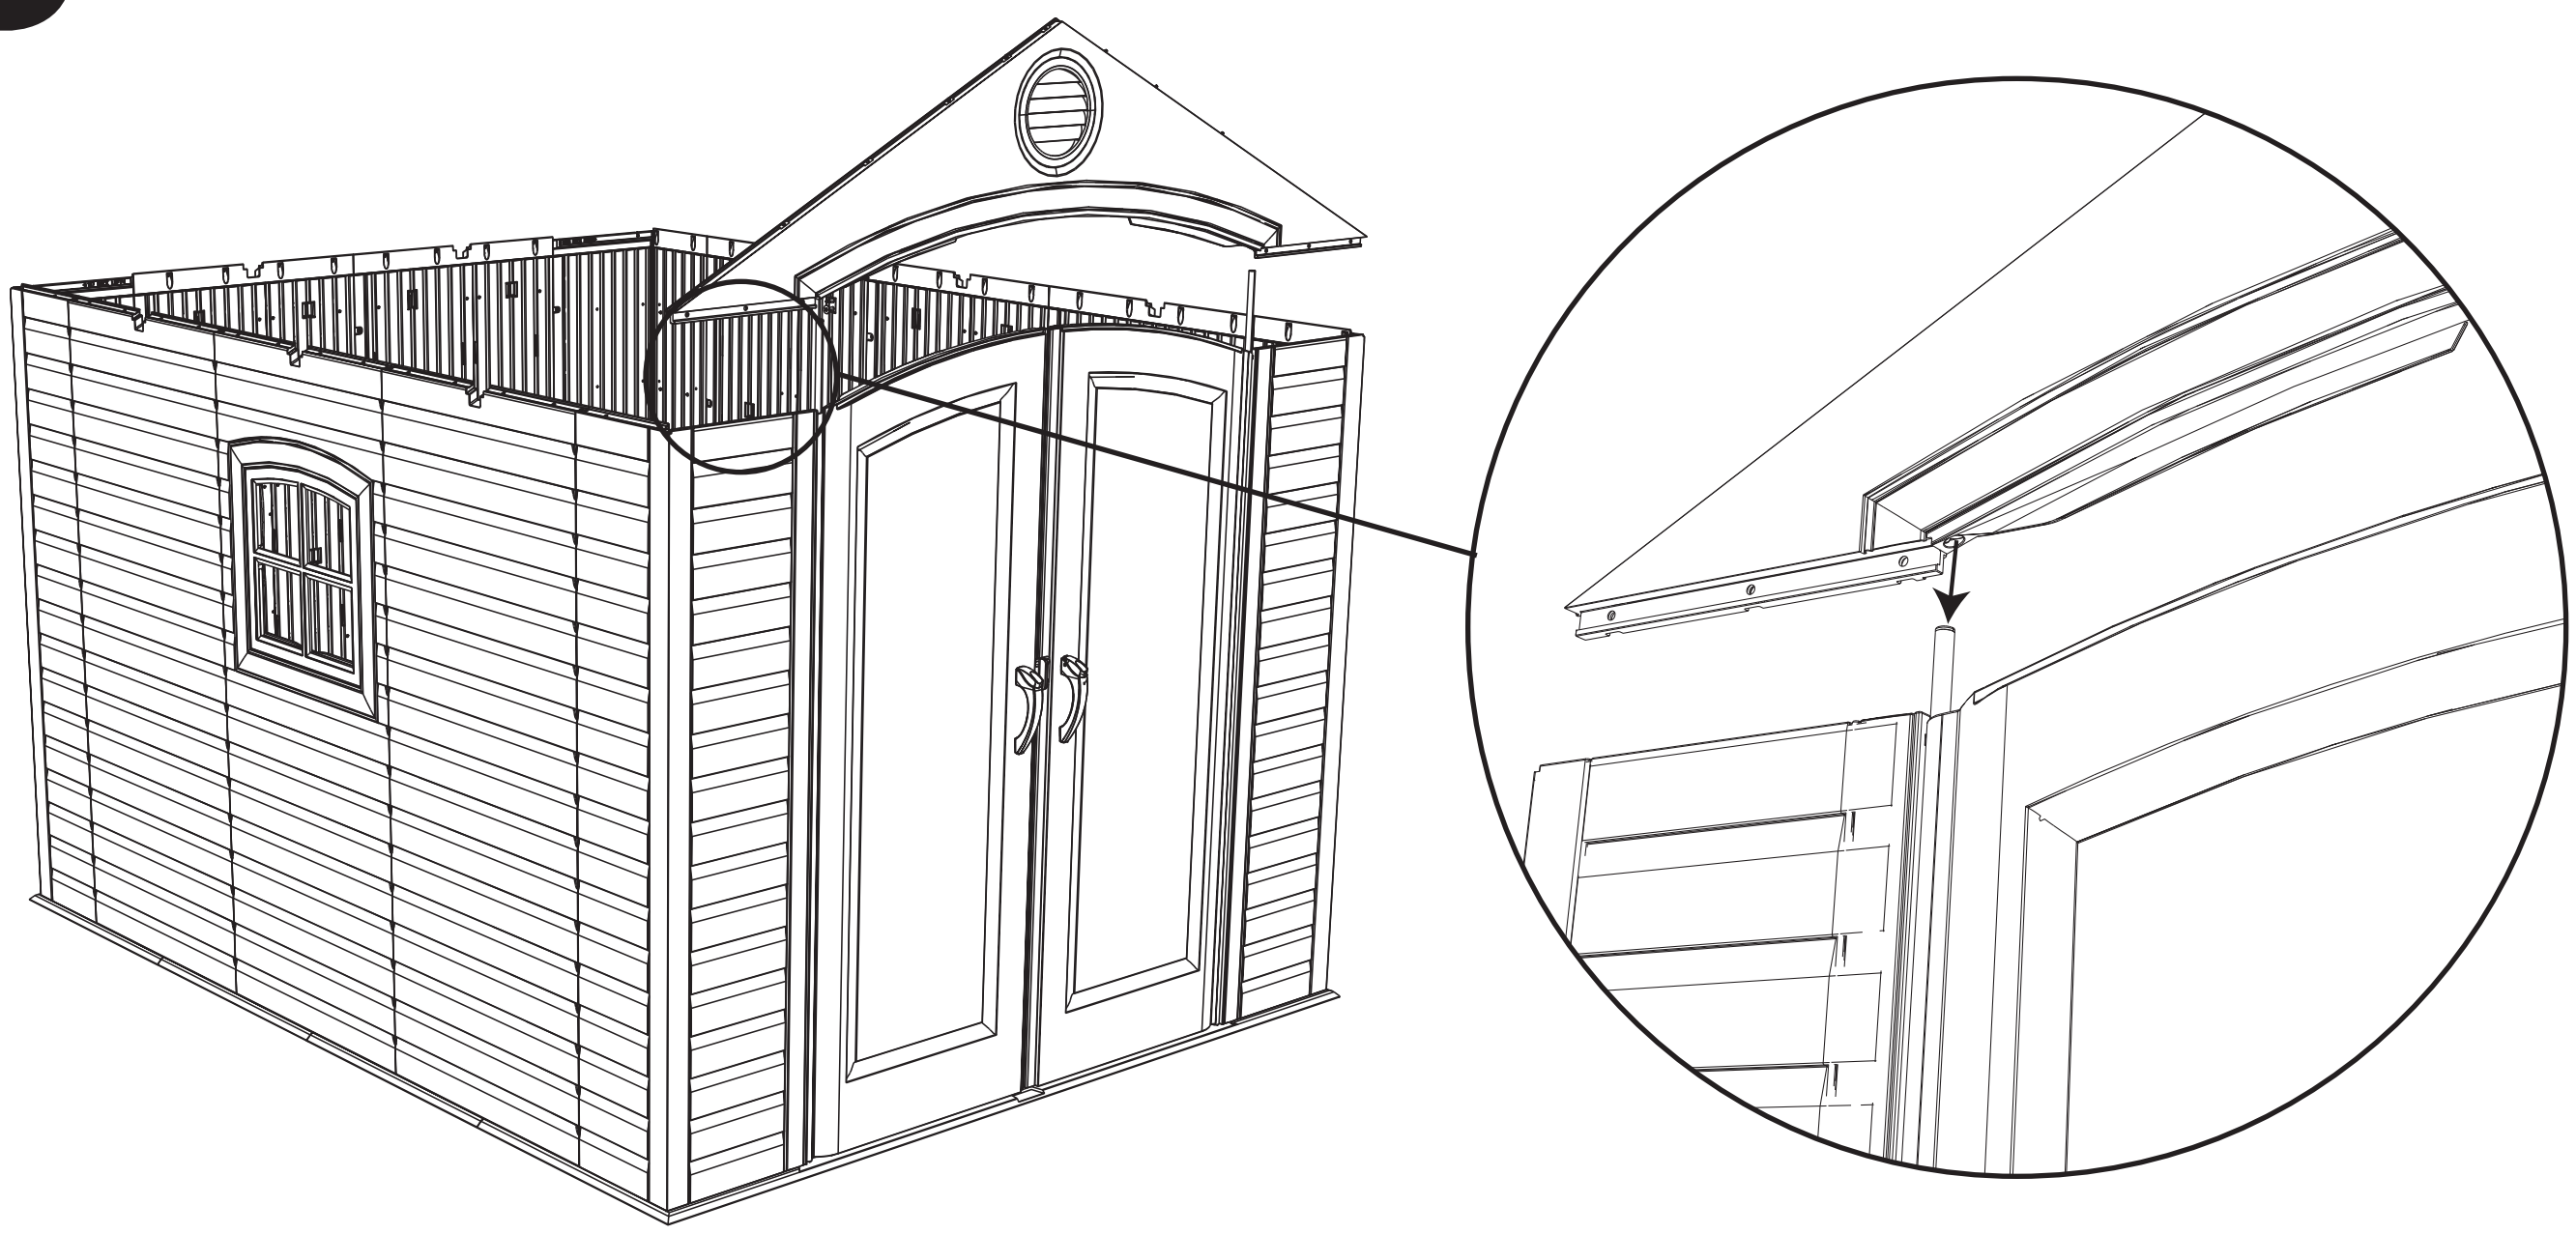

SEC 9.4

Align the holes in the sides of the Entry Gable Assembly with those in the tops of the Corner Wall Panels and secure with six (6) **1/4” x 5/8” Pan Head Screws (ADZ)** at the locations indicated.

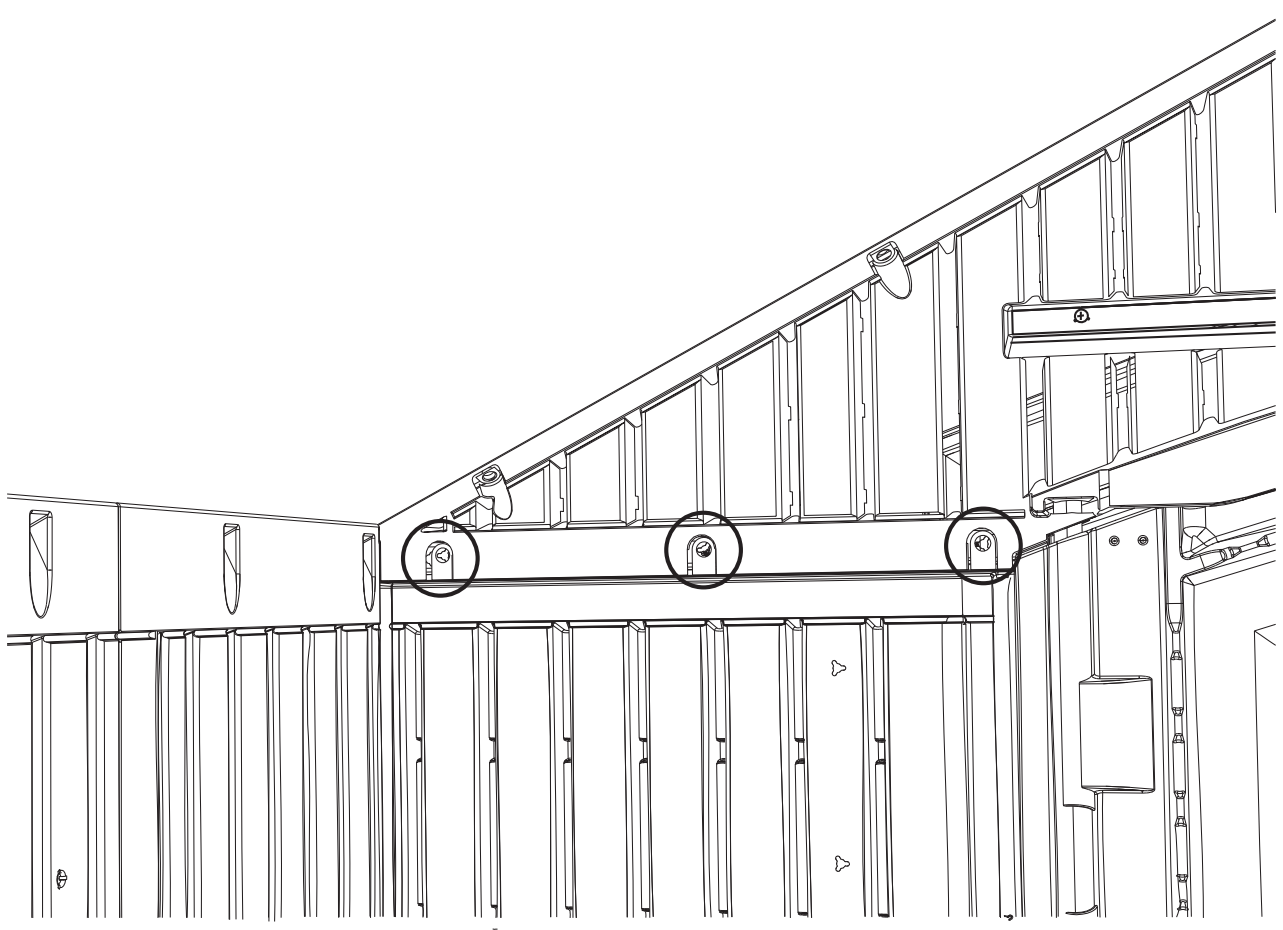

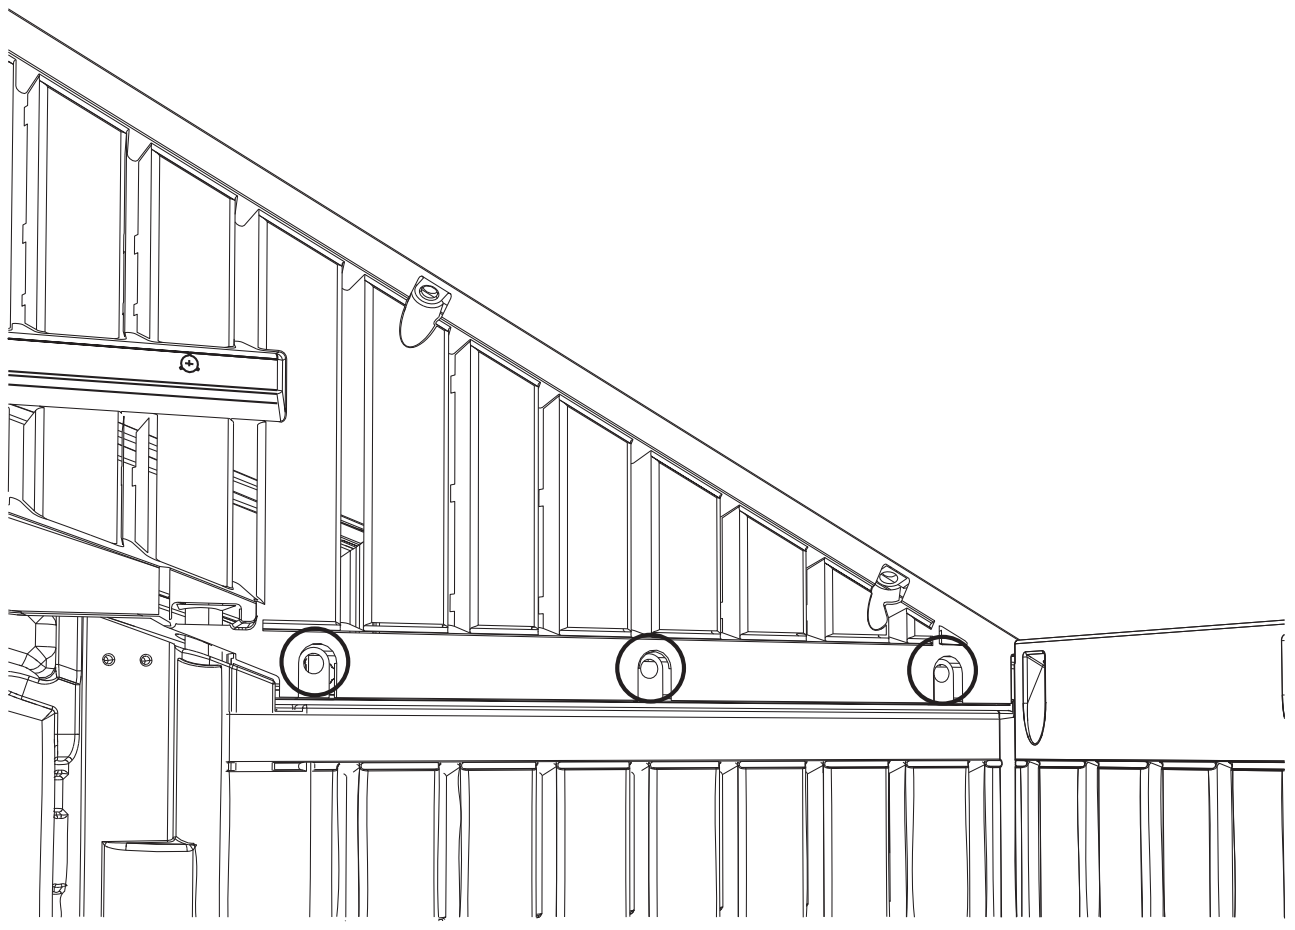

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE





ADX (x4)

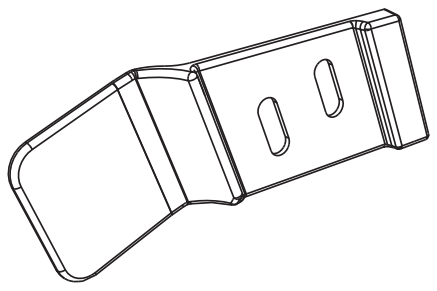

AIM (x1)
(Not to scale)



AIC (x1)
(Not to scale)

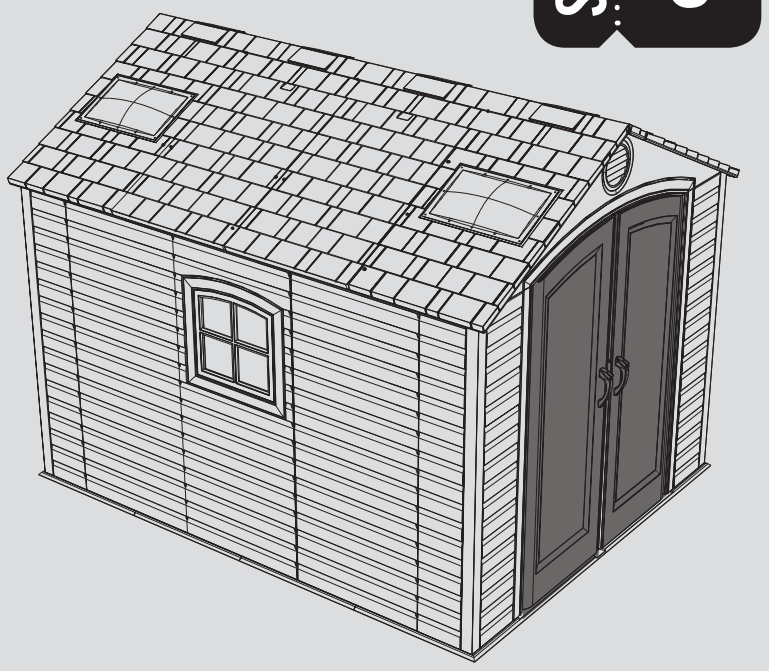

SEC 9.5

GAP FLAP INSTALLATION

Attach the **Right** & **Left Gap Flaps (AIM** & **AIC)** to the top, right and left corners of the Doors as shown. Before completely tightening the **#10 x 1/2” Pan-Head Screws (ADX)**, slide the Gap Flaps up until they cover any gap between the tops of the Doors and the Gable.

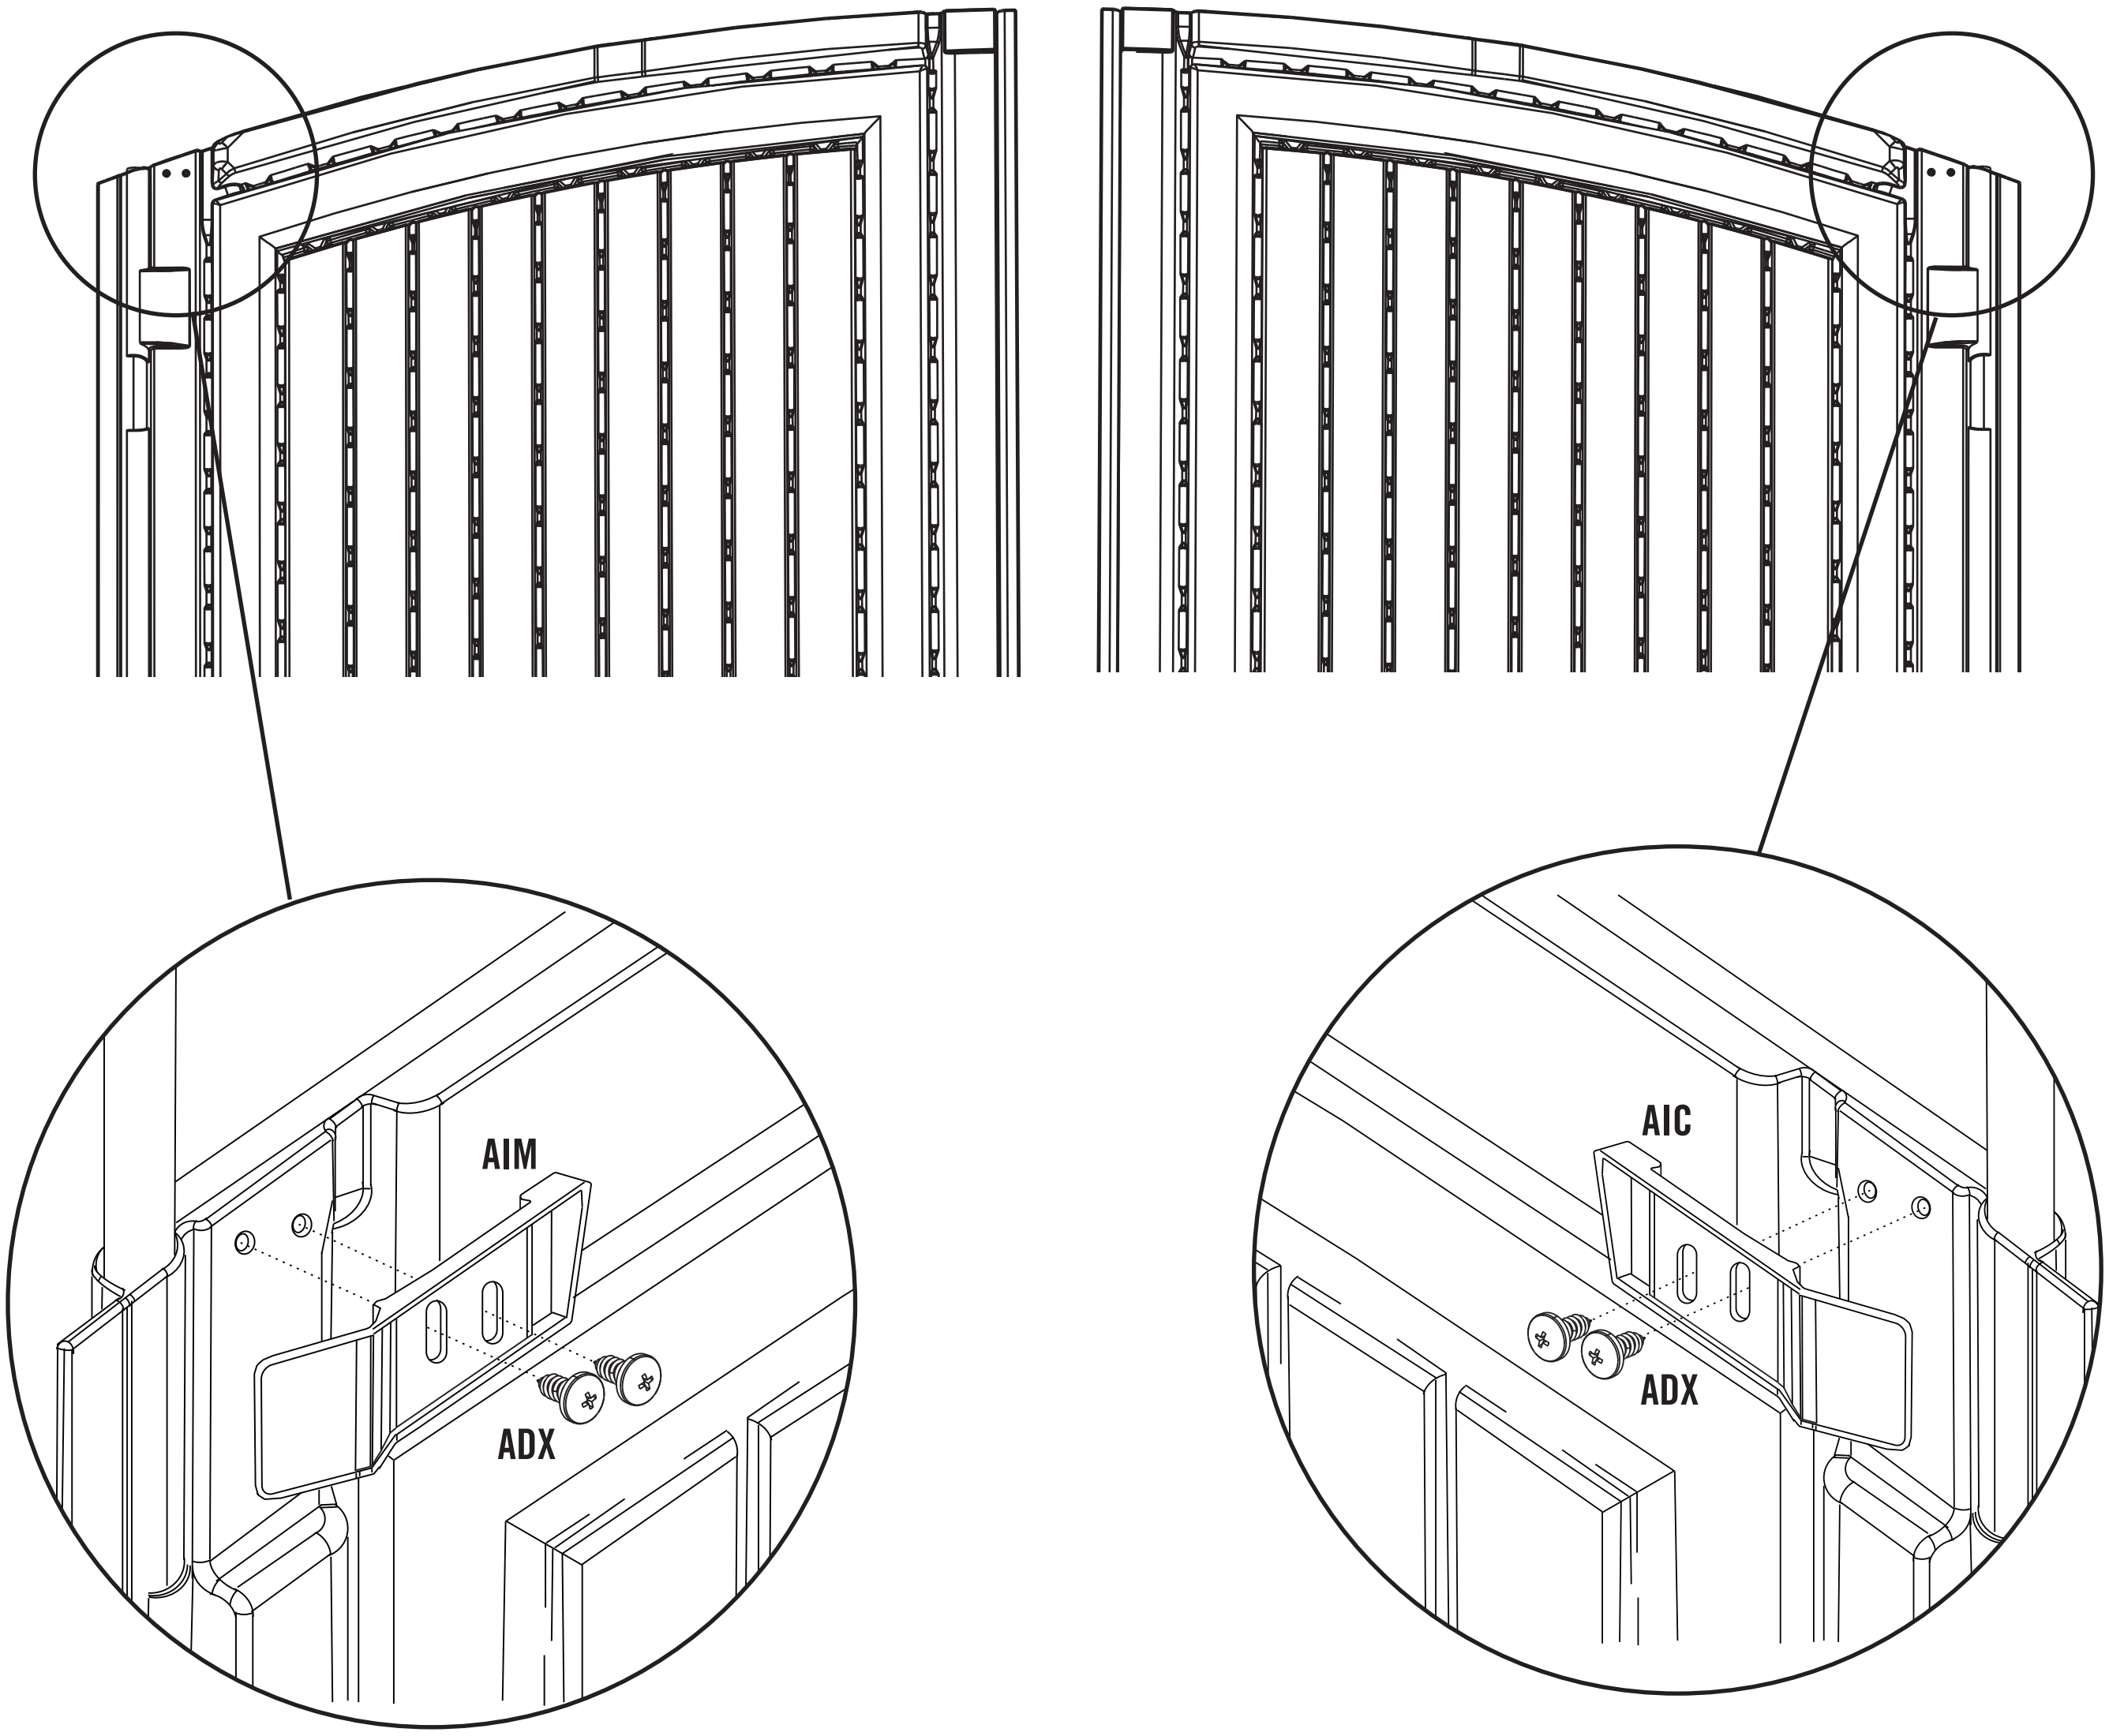

SEC 10 TRUSS, REAR GABLE, & ROOF INSTALLATION

HARDWARE REQUIRED — HARDWARE BAG REQUIRED: BHX

Hardware shown at actual size (*Unless otherwise noted)



ADZ (x126)
1/4” x 5/8” Pan-Head Screw
(Not all screws will be used)



ADX (x24)
#10 x 1/2” Pan-Head Screw

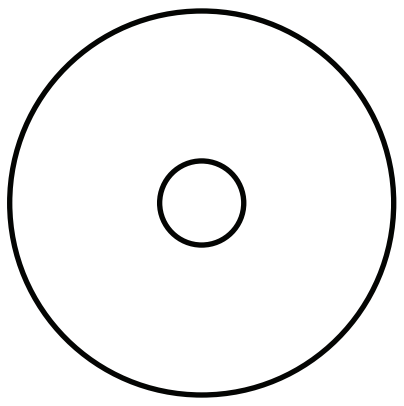

AED (x24)
#10 x 1” Fender Washer

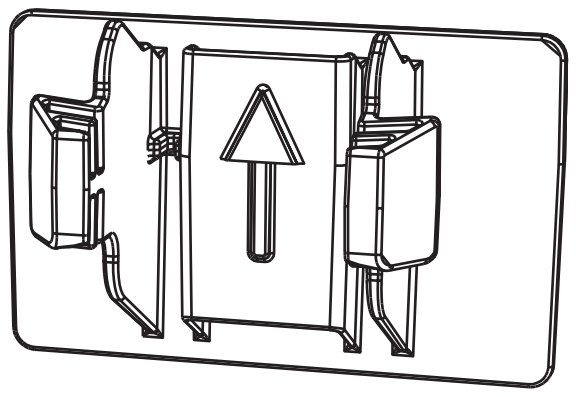

AXX (x2)
Truss Hole Insert

METAL PARTS REQUIRED — SMALL PARTS KIT REQUIRED: BON

Parts shown at 8% of actual size



AFL (x10)
Roof Support Strip

! *Note: The hole in the Roof Support Strip is for manufacturing purposes only.*

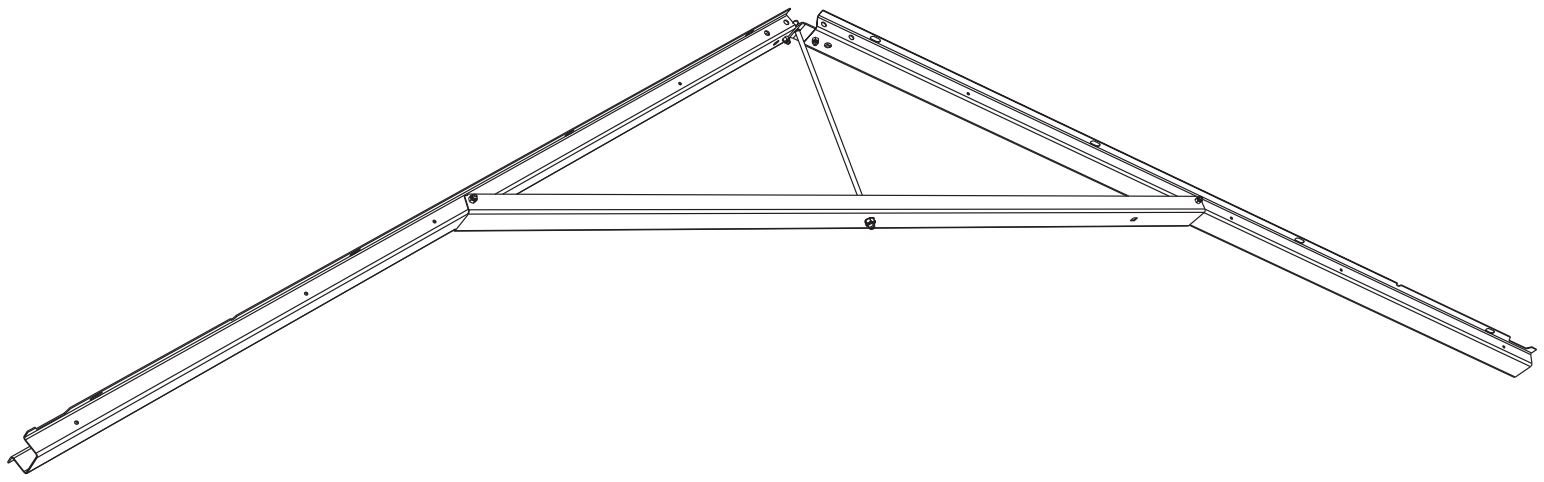

Truss Assembly (x3)

PLASTIC PARTS REQUIRED — LOCATED IN BOX 1 & SMALL PARTS KIT: BON

Parts shown at 4% of actual size

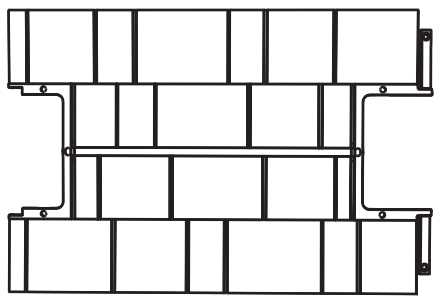

AFY (x3)
Center Roof Cap

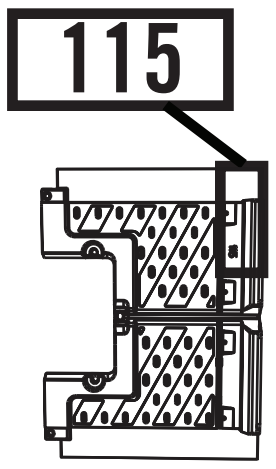

AGG (x1)
Front Roof Cap

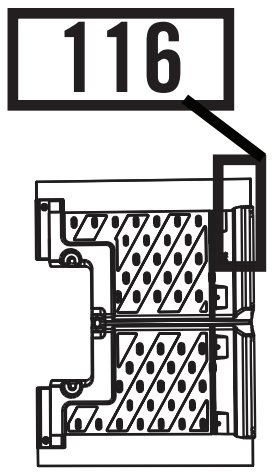

AFW (x1)
Rear Roof Cap

Parts shown at 8% of actual size

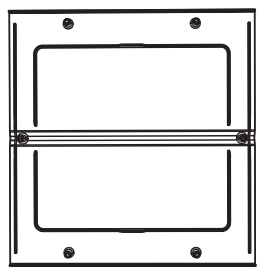

AHC (x4)
Skylight

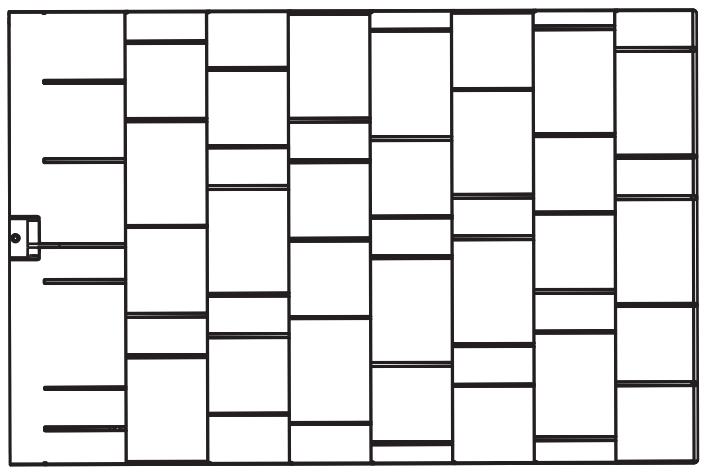

***AGQ** (x6)
Roof Panel

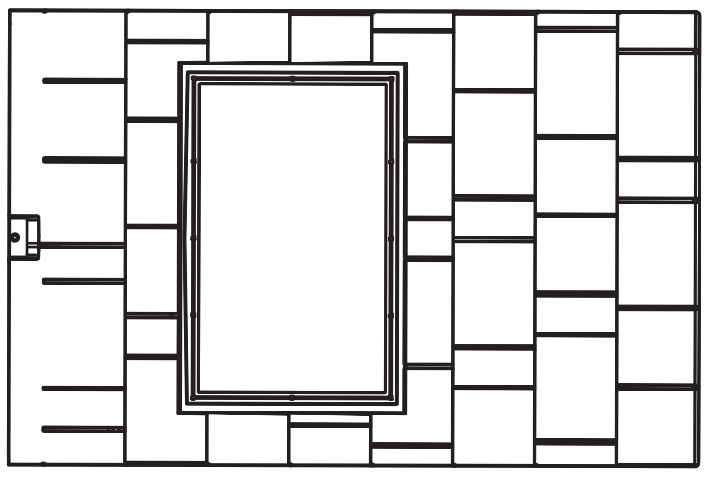

Roof Panel for Skylight Assembly (x2)

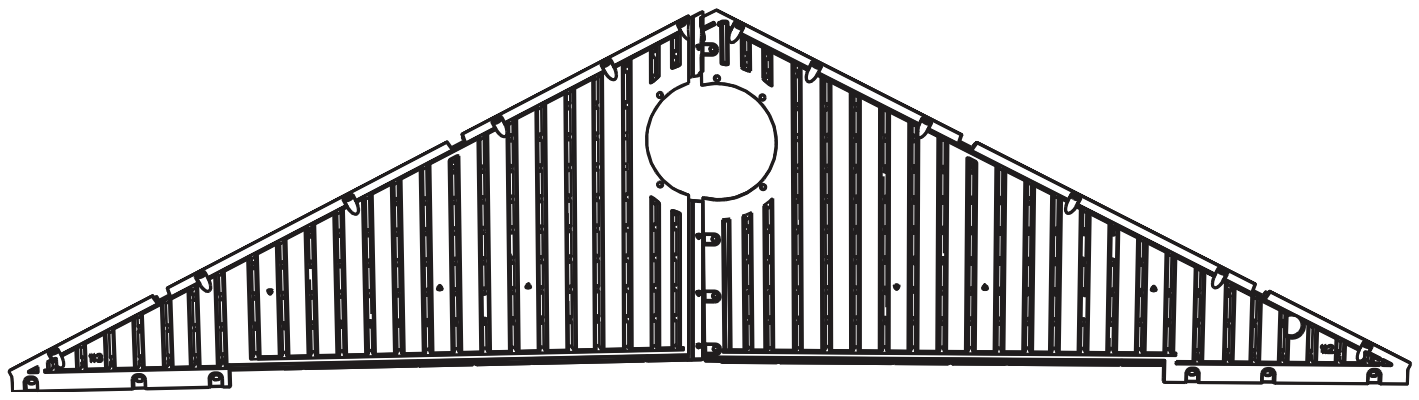

Rear Gable Assembly

TOOLS REQUIRED



Phillips Screwdriver



Flashlight



Safety Glasses

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



NO HARDWARE REQUIRED FOR THIS STEP

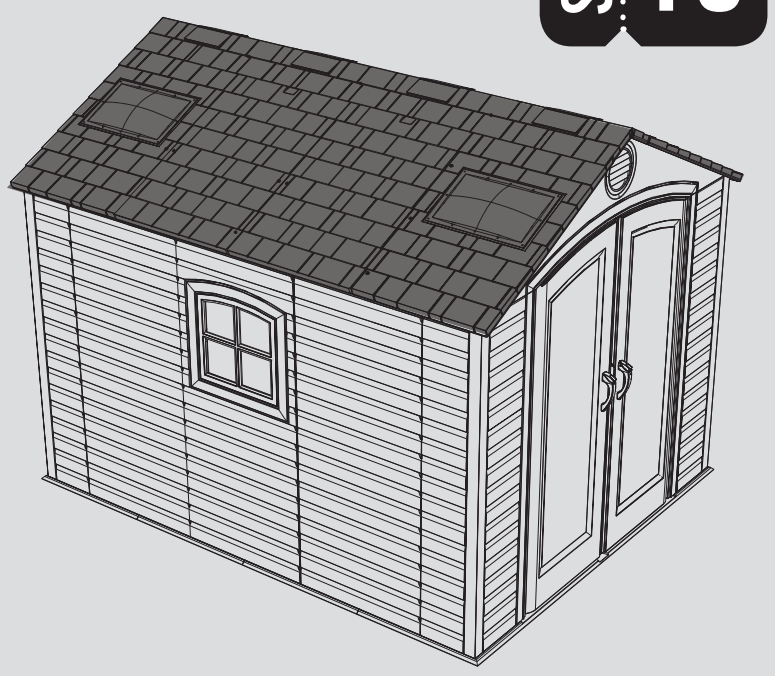

3 ADULTS REQUIRED FOR STEPS 10.1 - 10.8

SEC 10.1

TRUSS & ROOF INSTALLATION

Place the ends of a **Truss Assembly** into the notches on the Wall Panels as shown. While one adult holds the Truss Assembly in place, set a **Roof Panel for Domed Skylight Assembly** onto the Truss Assembly and Front Gable. The edge of the Roof Panel fits down inside the Truss Channel. **Roof Panels and Roof Panels for Domed Skylights are interchangeable; you may place them in any Roof Panel position.**

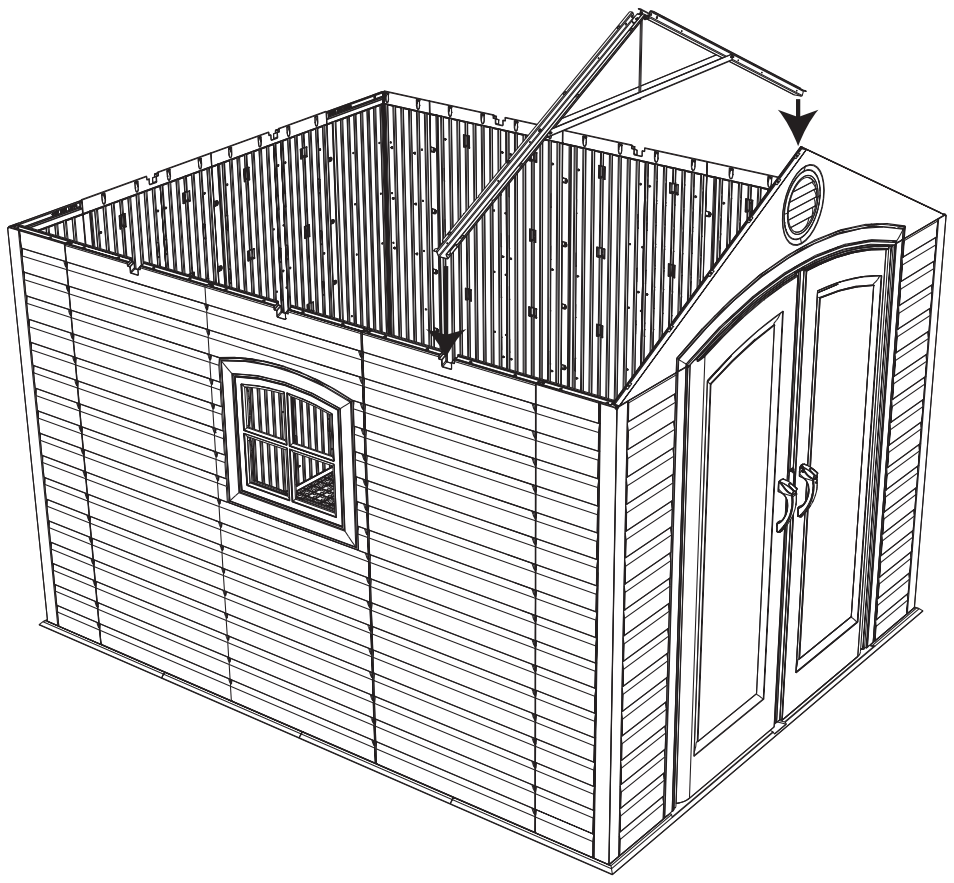

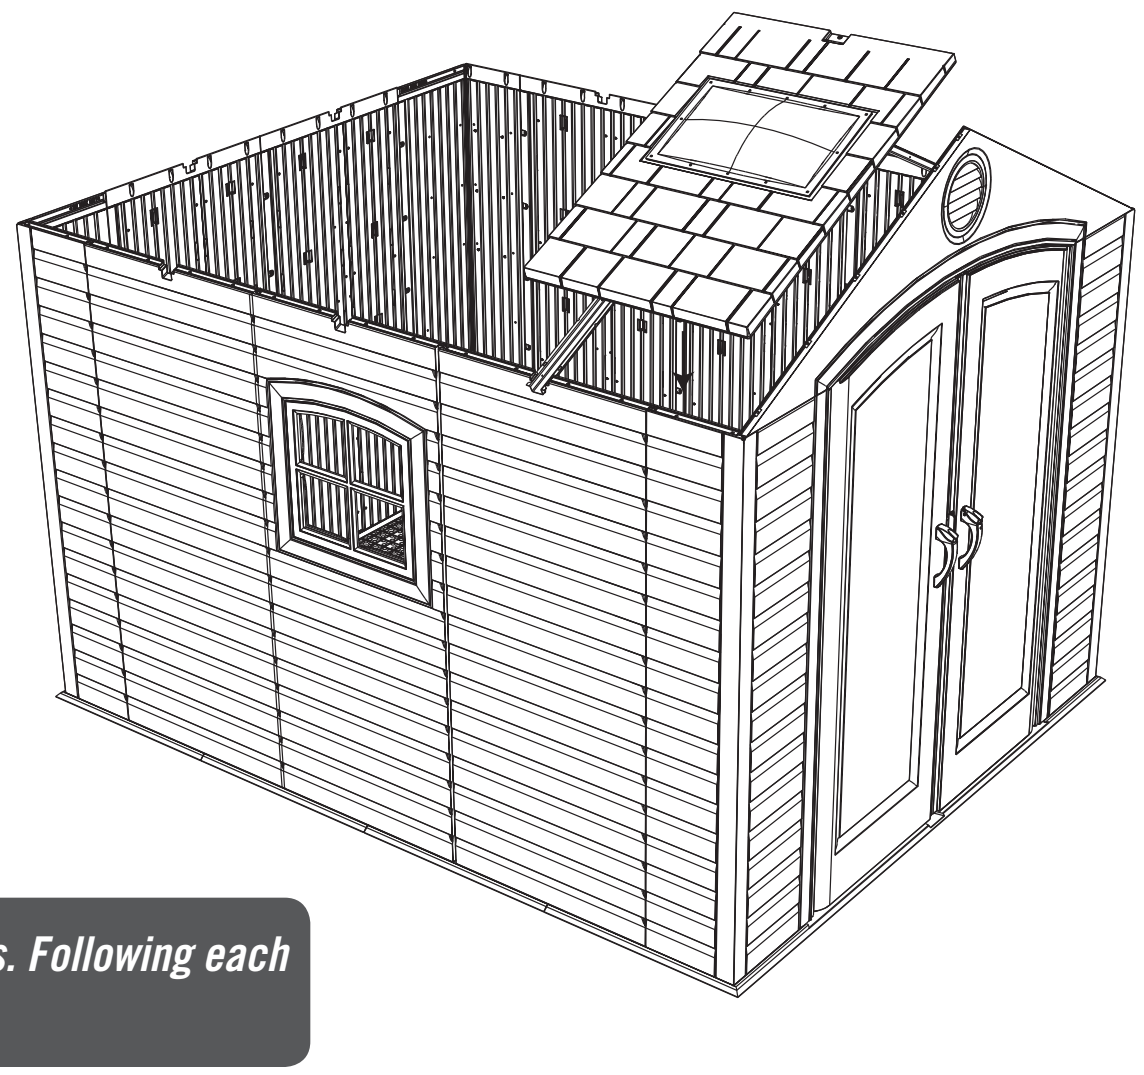

! *Note: Ensure to carefully read and follow the roof installation instructions and notes. Following each step in the order listed will minimize potential complications during installation.*

SEC 10.2

Ensure the alignment nub in the Roof Panel fits into the notch on the Truss (this helps to align the holes in the Roof Panel with those in the Truss, the Wall Panel, and Gable).

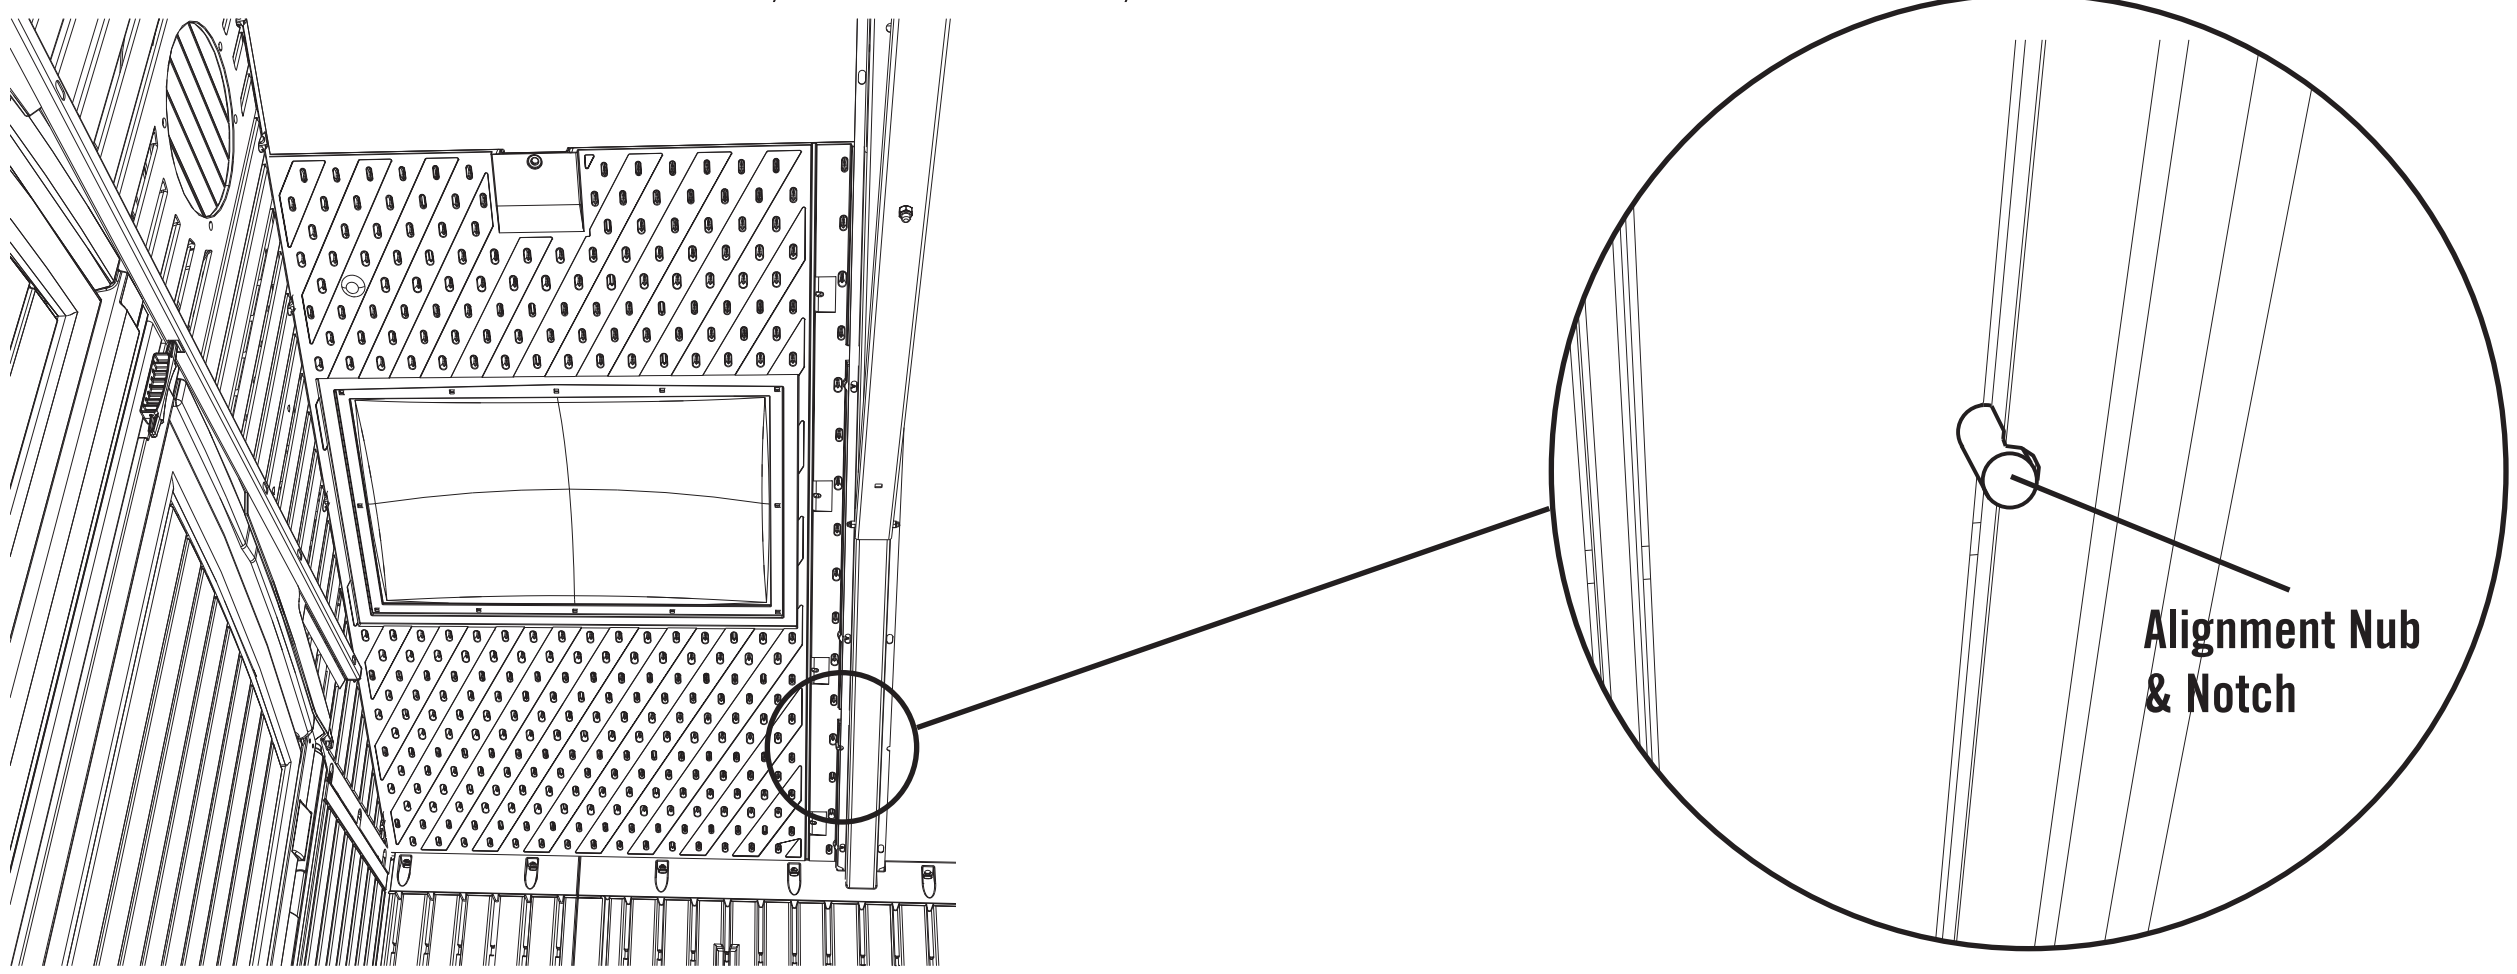

Interior Upward View

! *Note: The edge of the Roof Panel fits into the Truss Assembly.*

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE





(Not actual size) **AFL** (x3)



ADZ (x22)

SEC 10.3

With the Roof Panel for Domed Skylight in position between the Gable and Truss, slide two (2) **Roof Supports (AFL)** into place within the notches of the Roof Panel for Domed Skylight. The bottom lip of the Roof Panel fits over the Wall Panel. The top of the Wall Panel fits into the groove near the bottom of the Roof Panel.

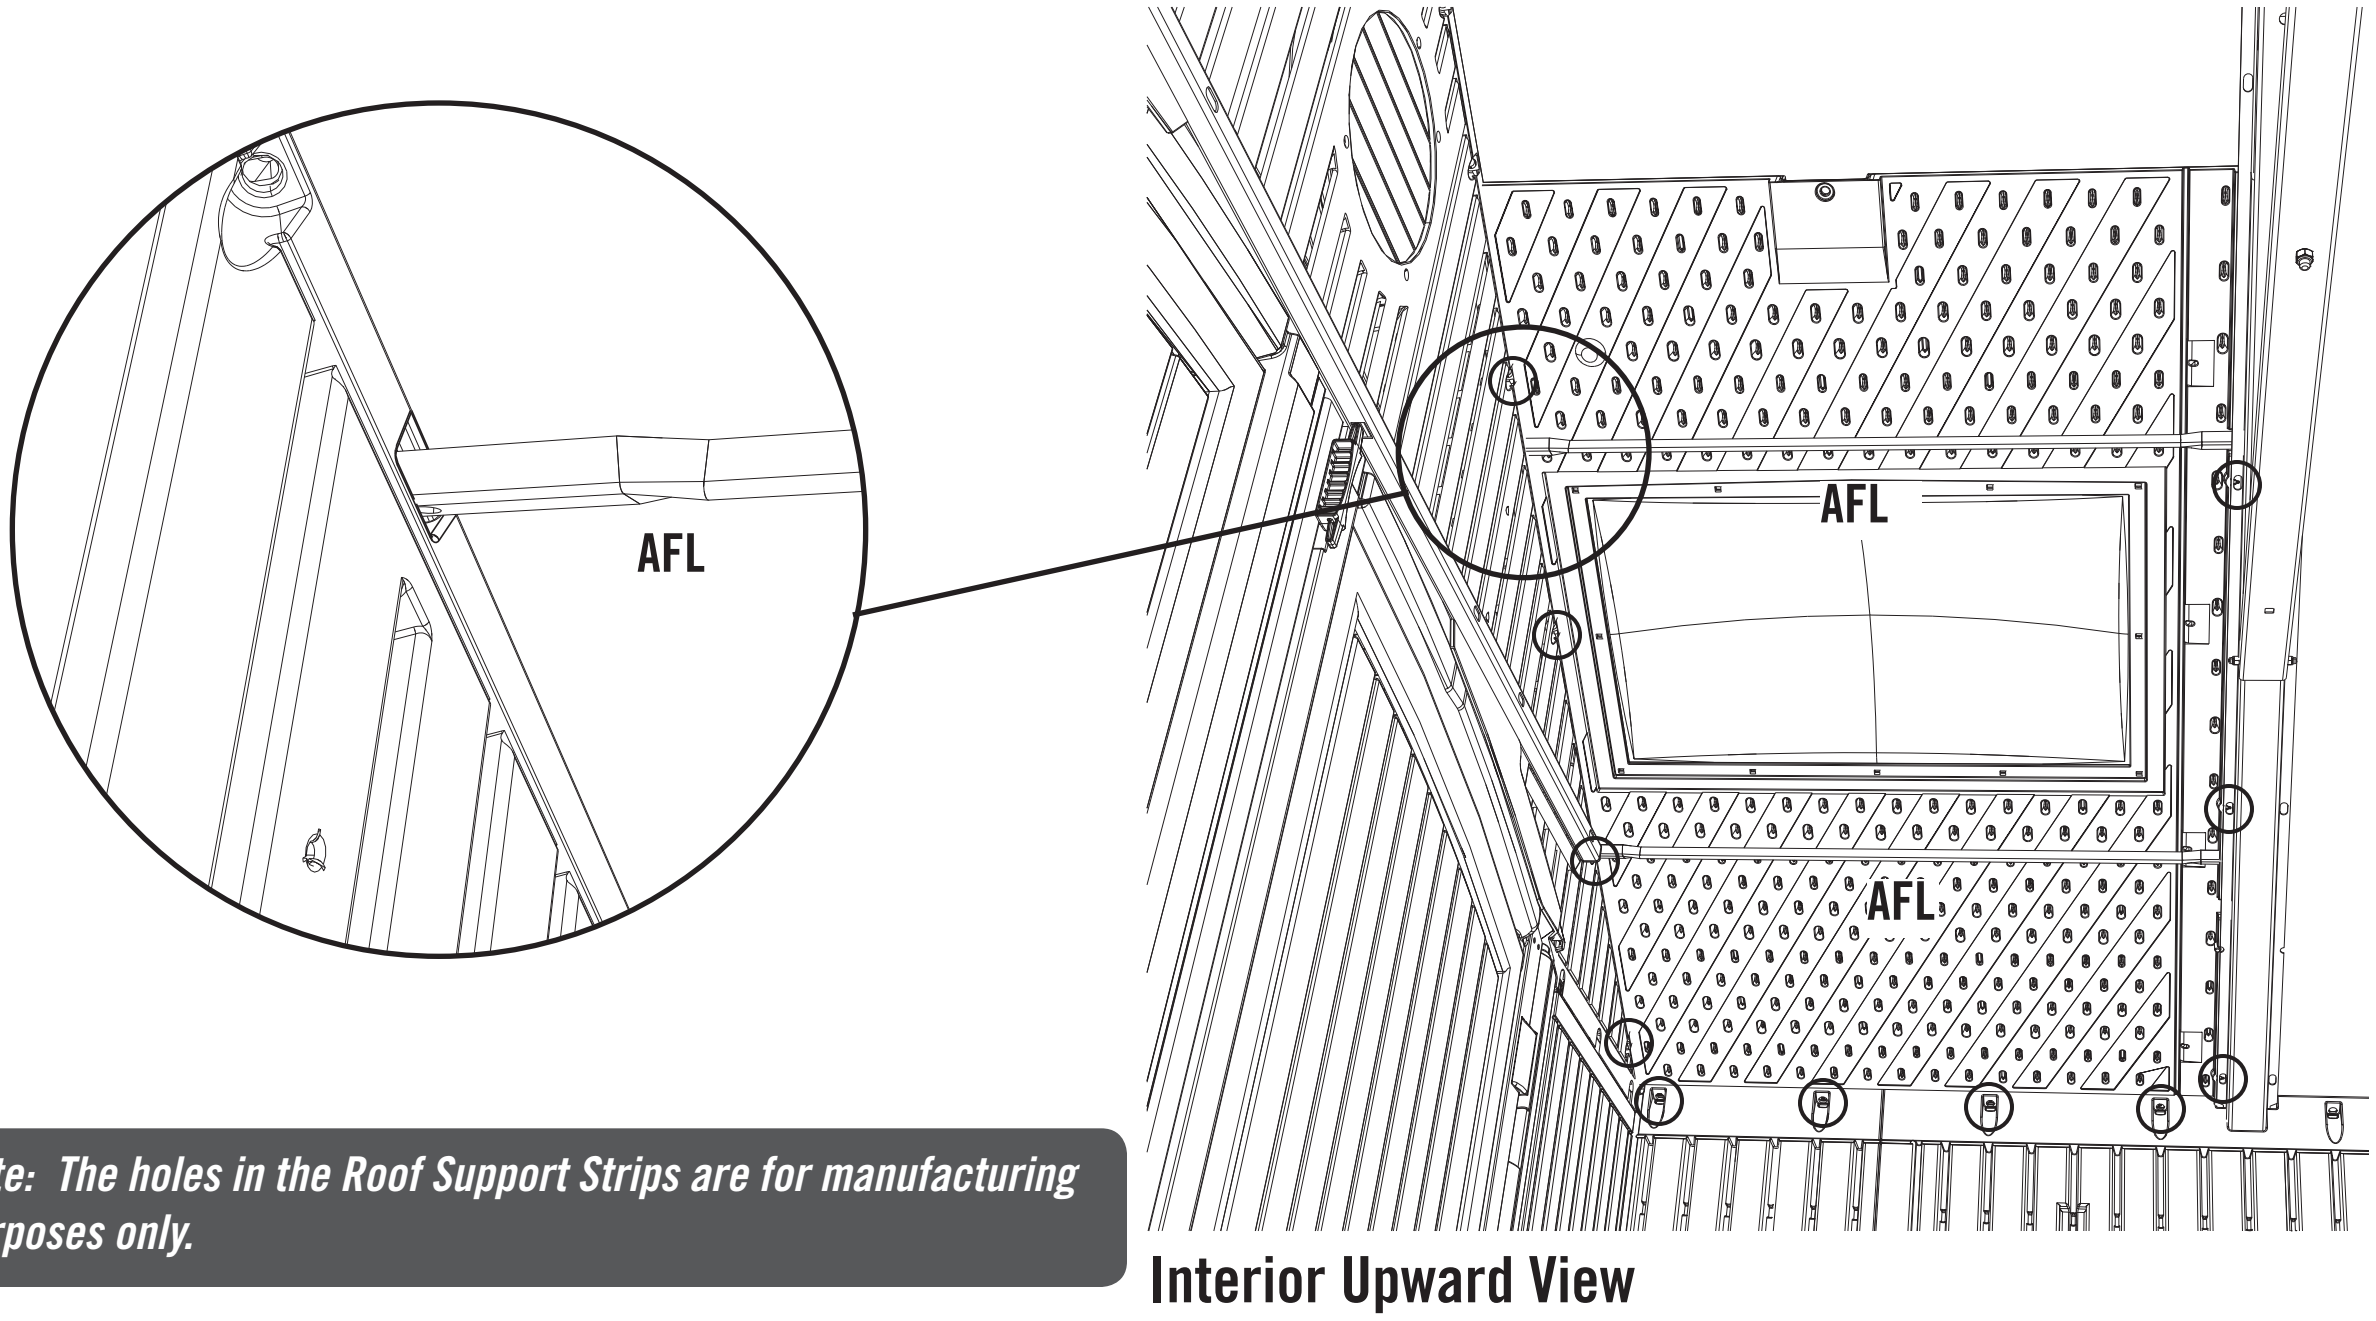

Interior Upward View

! *Note: The holes in the Roof Support Strips are for manufacturing purposes only.*

SEC 10.4

After aligning the holes in the Roof Panel with those in the Wall Panels, Truss, and Gable, secure the Roof Panel for Domed Skylight to the shed using the required hardware. Then, secure a **Roof Panel (AGQ)** and one (1) **Roof Support (AFL)** to the rear of the shed.

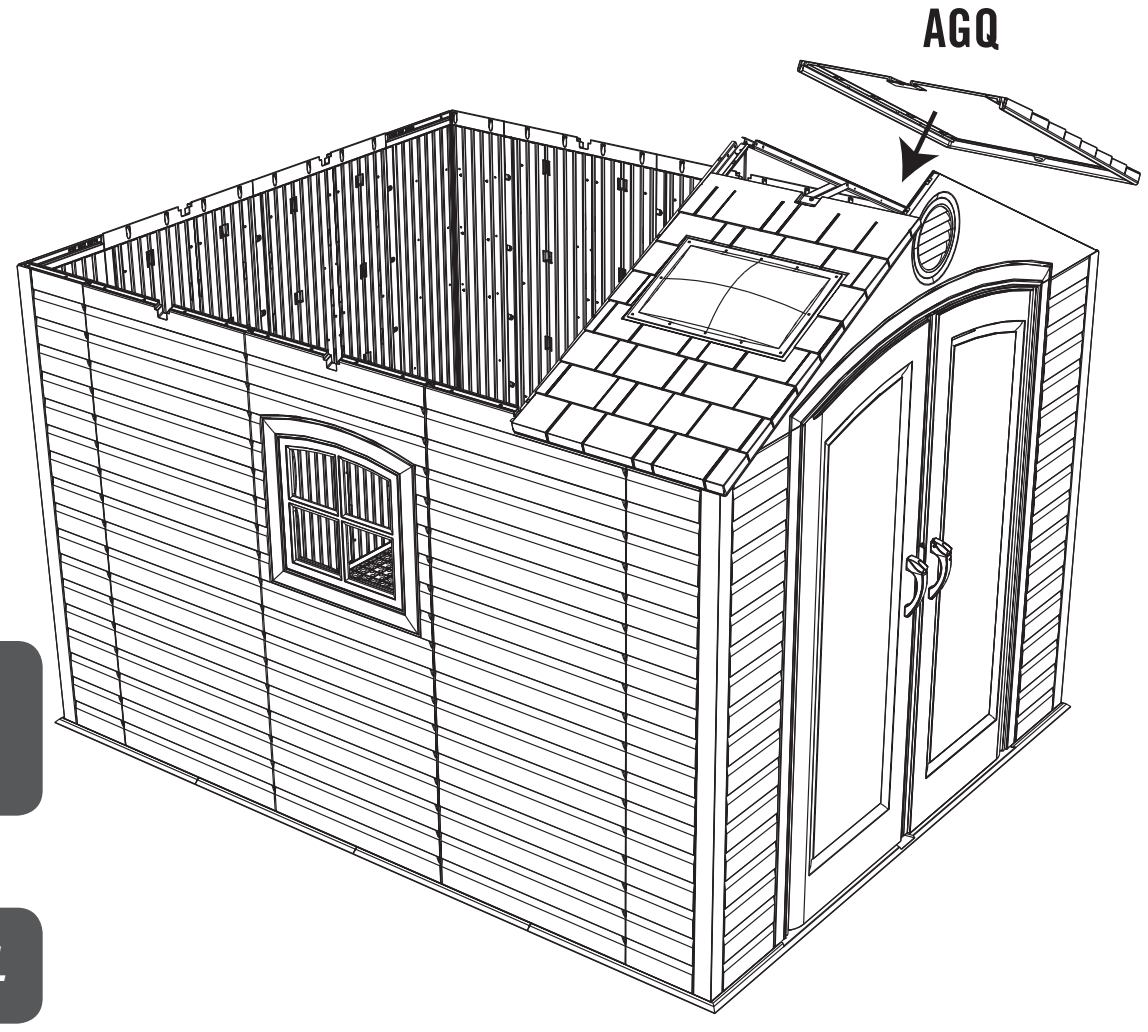

! *Note: Roof Panels for Domed Skylights require two (2) Roof Support Strips, while regular Roof Panels require only one (1) Roof Support Strip.*

! *Note: Ensure the ridge in the bottom of the Roof Panel fits into the top of the wall.*

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



(Not actual size) **AFL** (x2)



ADZ (x20)

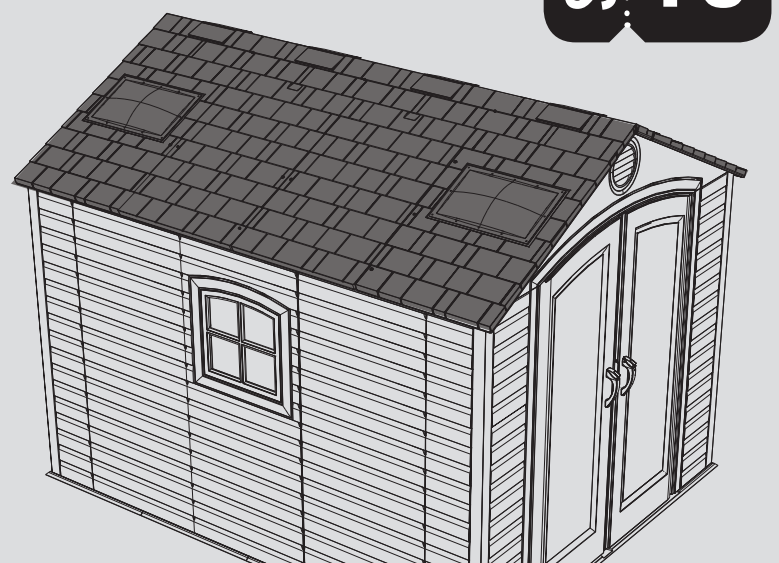

SEC 10.5

Place the ends of a second **Truss Assembly** into the notches on the next Wall Panel and Window Wall Panel as shown.

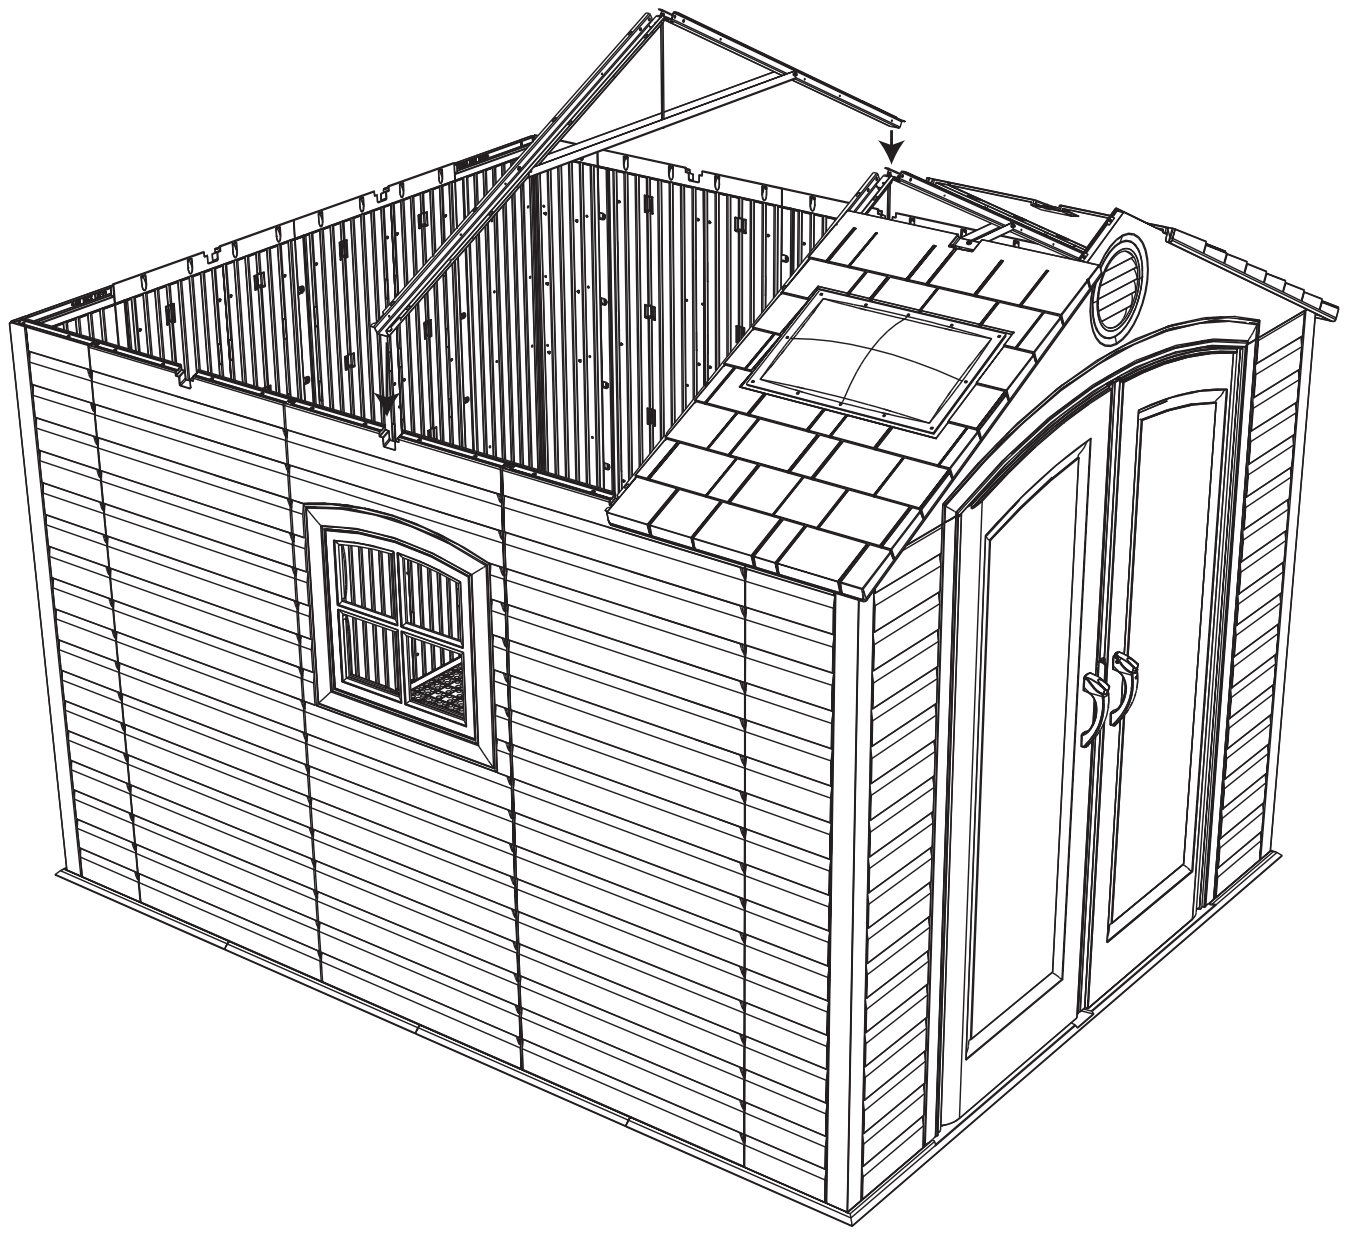

SEC 10.6

While one adult holds the Truss Assembly in place, attach two more **Roof Panels (AGQ)** and **Roof Support Strips (AFL)** into the Truss Assemblies as shown. The edge of the Roof Panels fit down inside the Truss Channels. Ensure the alignment nubs in the Roof Panels fit into the notches on the Trusses.

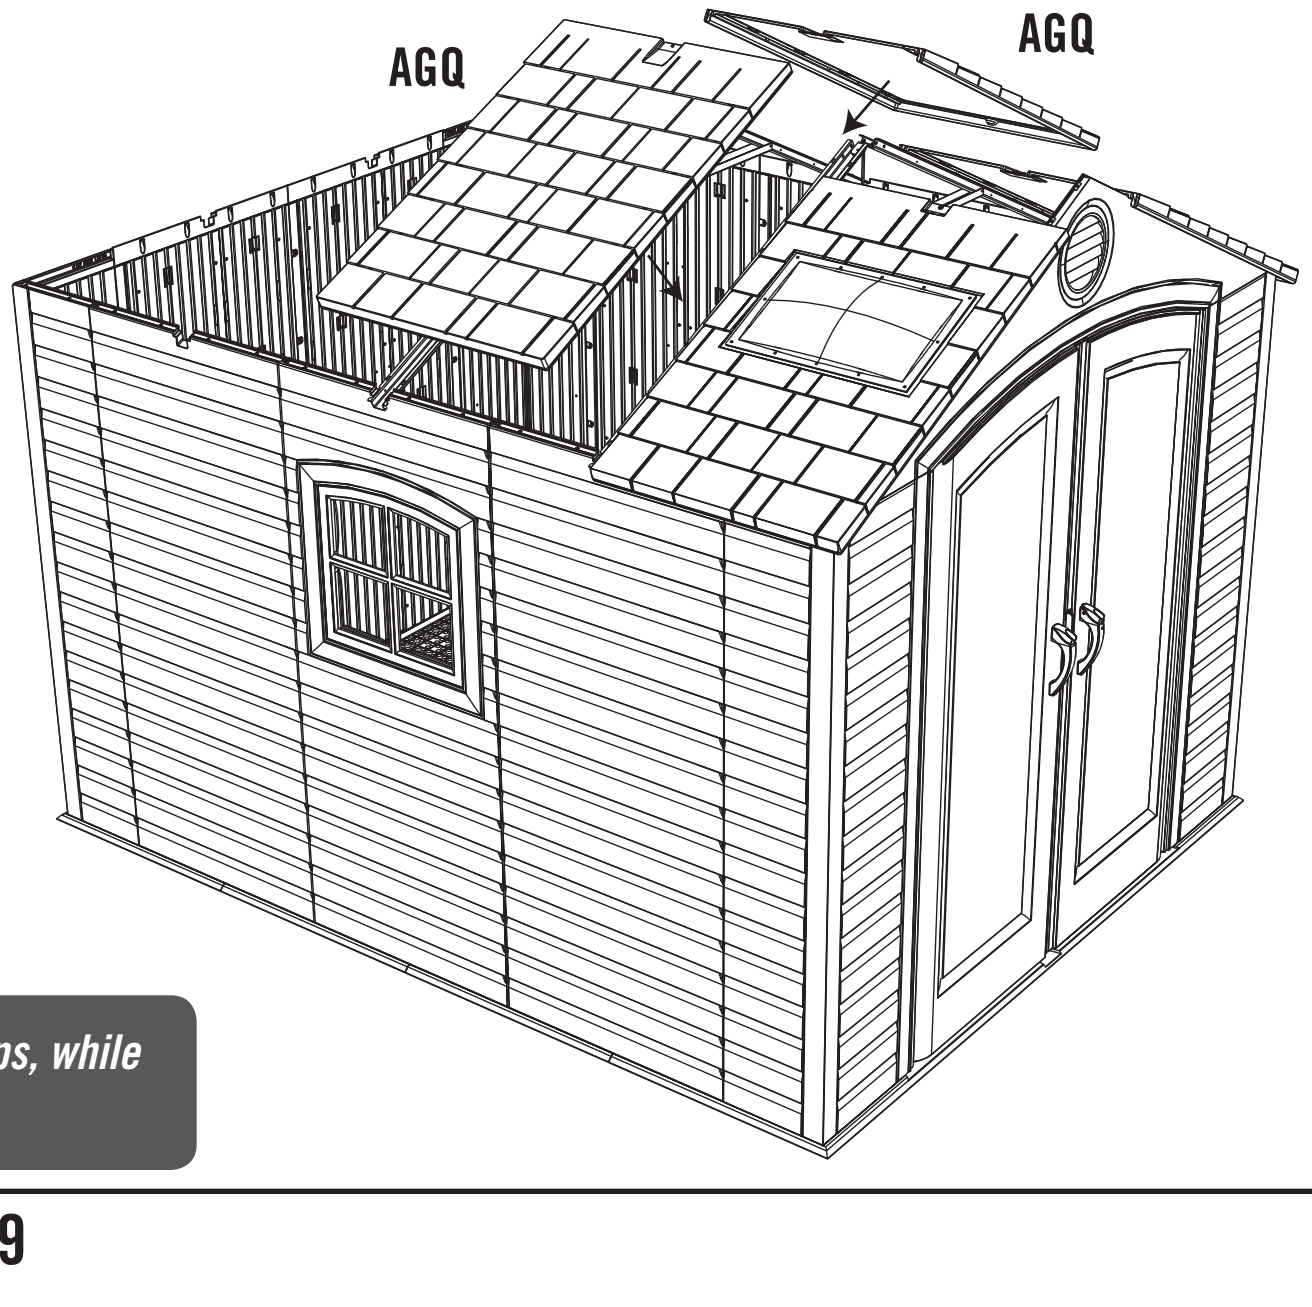

! *Note: Roof Panels for Domed Skylights require two (2) Roof Support Strips, while regular Roof Panels require only one (1) Roof Support Strip.*

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE





(Not actual size) **AFL** (x2)



ADZ (x20)

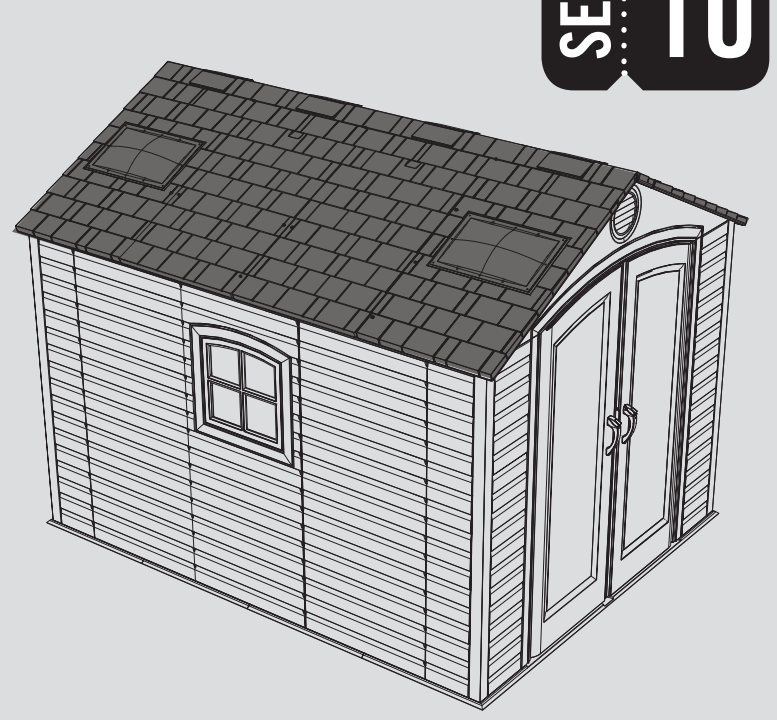

SEC 10.3

Place the ends of the last **Truss Assembly** into the notches on the next set of Wall Panels as shown.

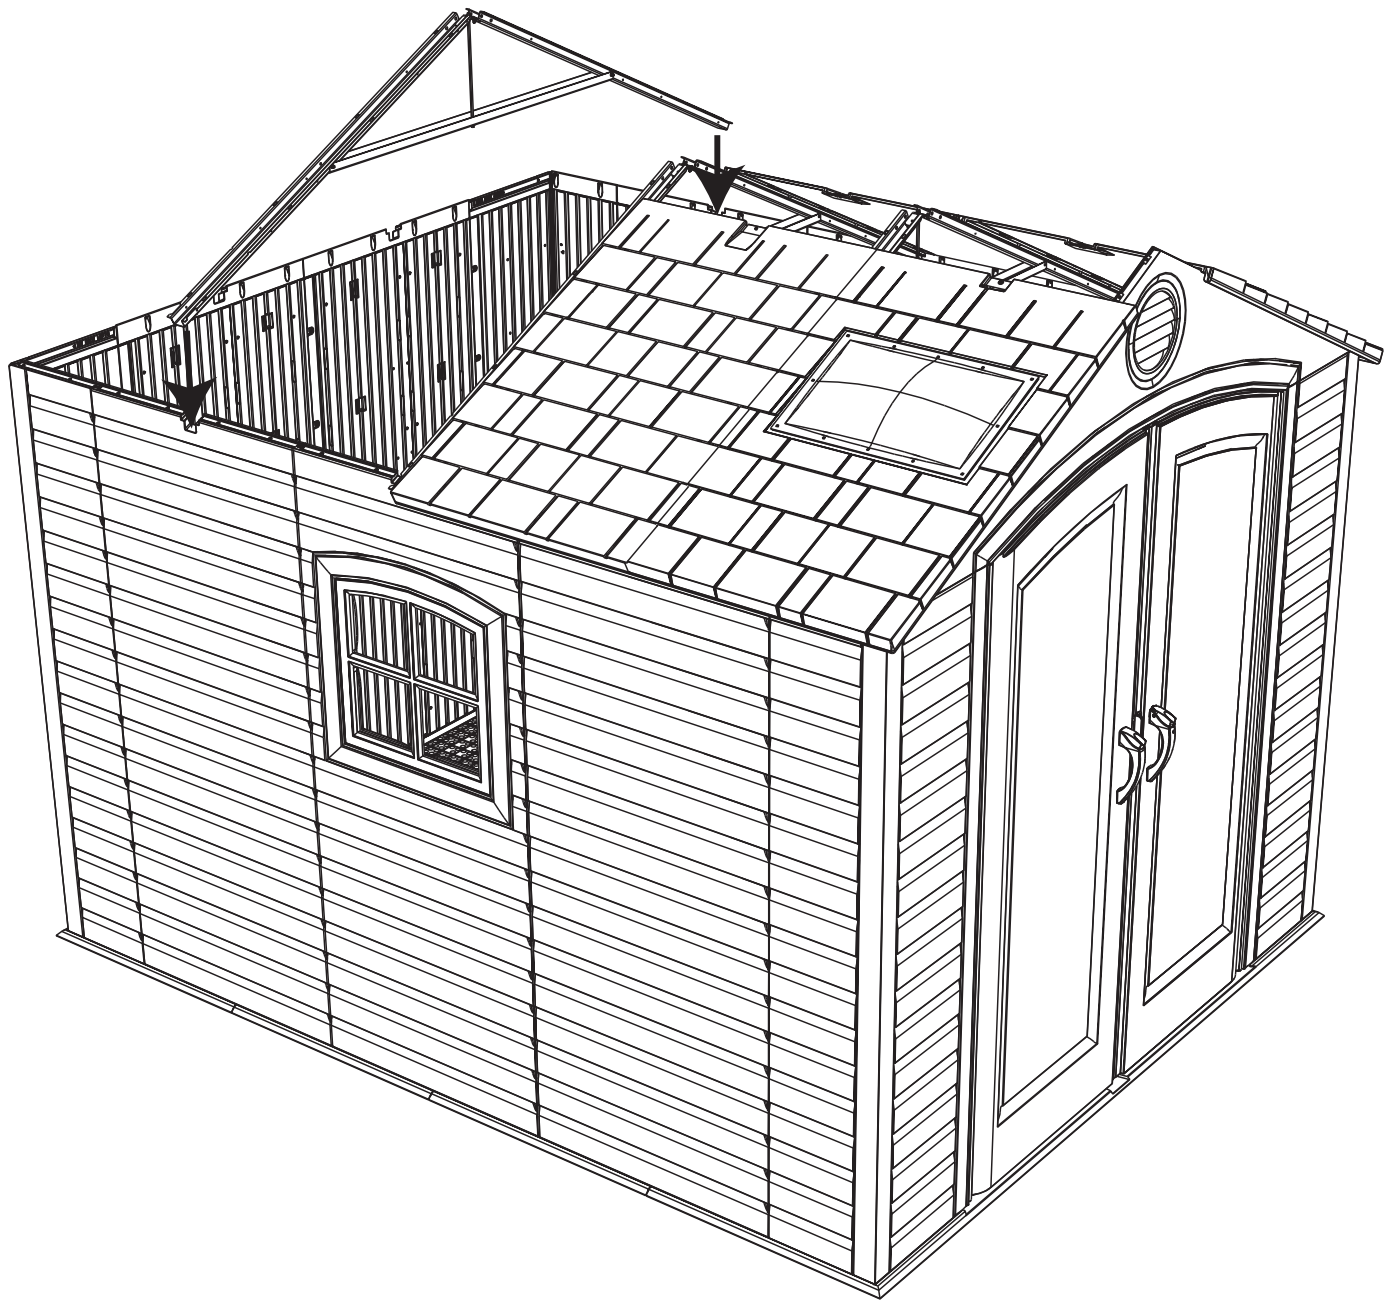

SEC 10.4

While one adult holds the Truss Assembly in place, attach two more **Roof Panels (AGQ)** and **Roof Support Strips (AFL)** into the Truss Assembly as shown. The edge of the Roof Panels fit down inside the Truss Channels. Ensure the alignment nubs in the Roof Panels fit into the notches on the Trusses.

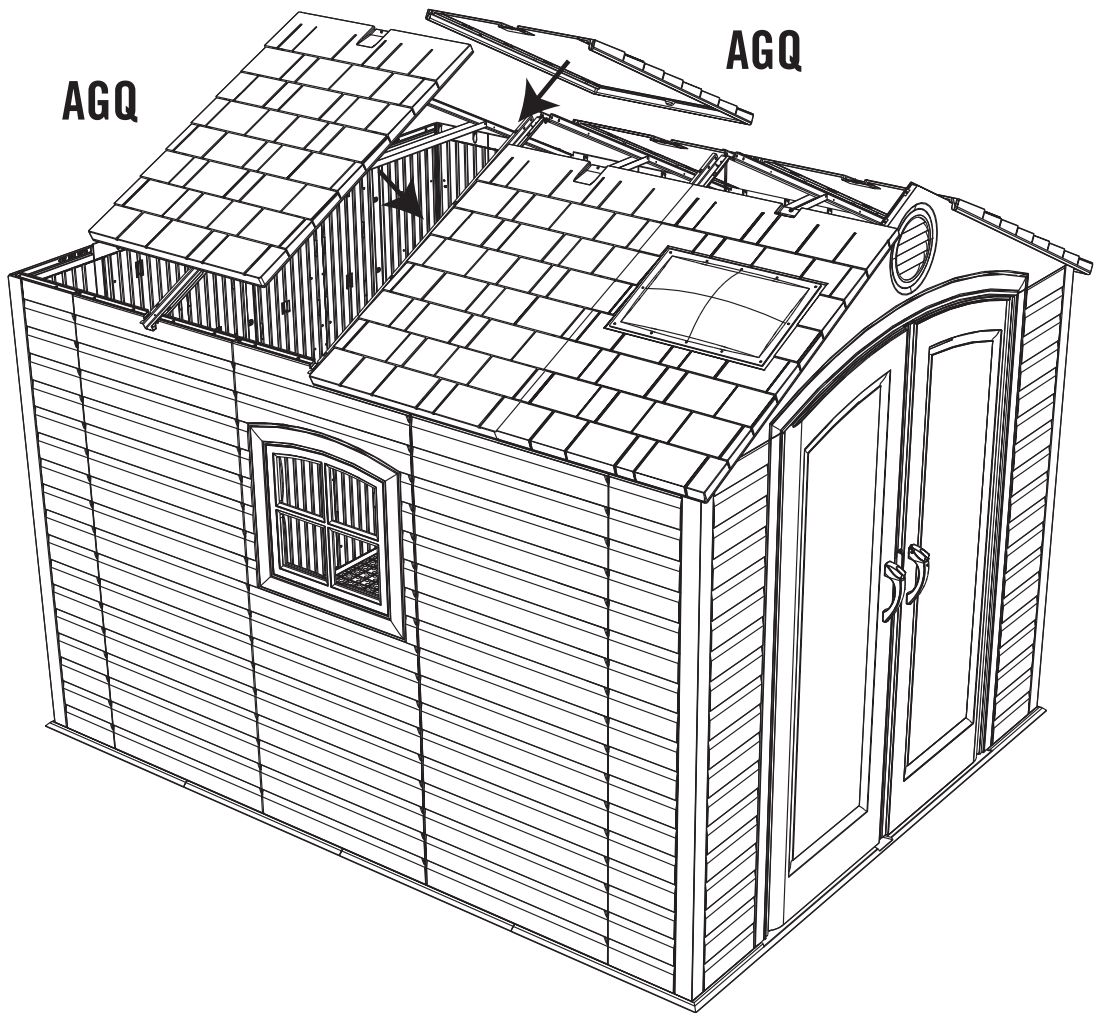

! ***Note: Roof Panels for Domed Skylights require two (2) Roof Support Strips, while regular Roof Panels require only one (1) Roof Support Strip.***

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE





(Not actual size) **AFL** (x3)



ADZ (x36)

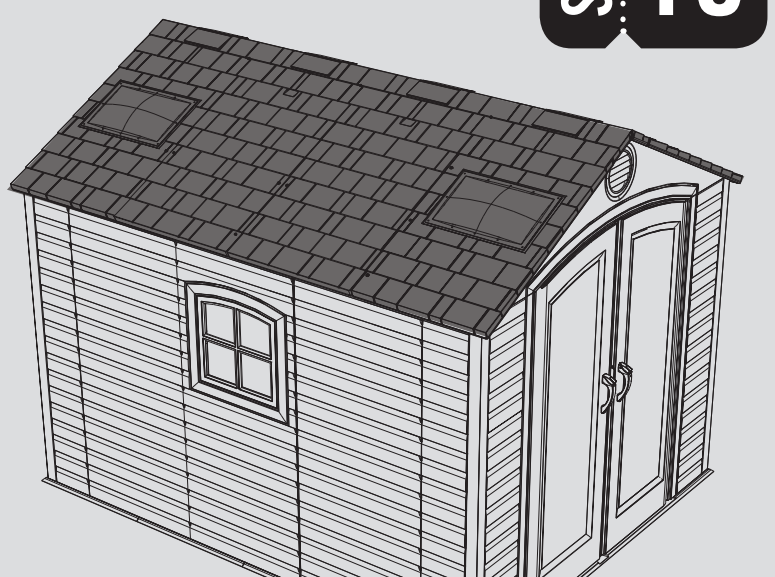

SEC 10.7

Attach the Rear Gable Assembly to the shed as shown and secure with fourteen (14) **1/4” x 5/8” Pan-Head Screws (ADZ)**.

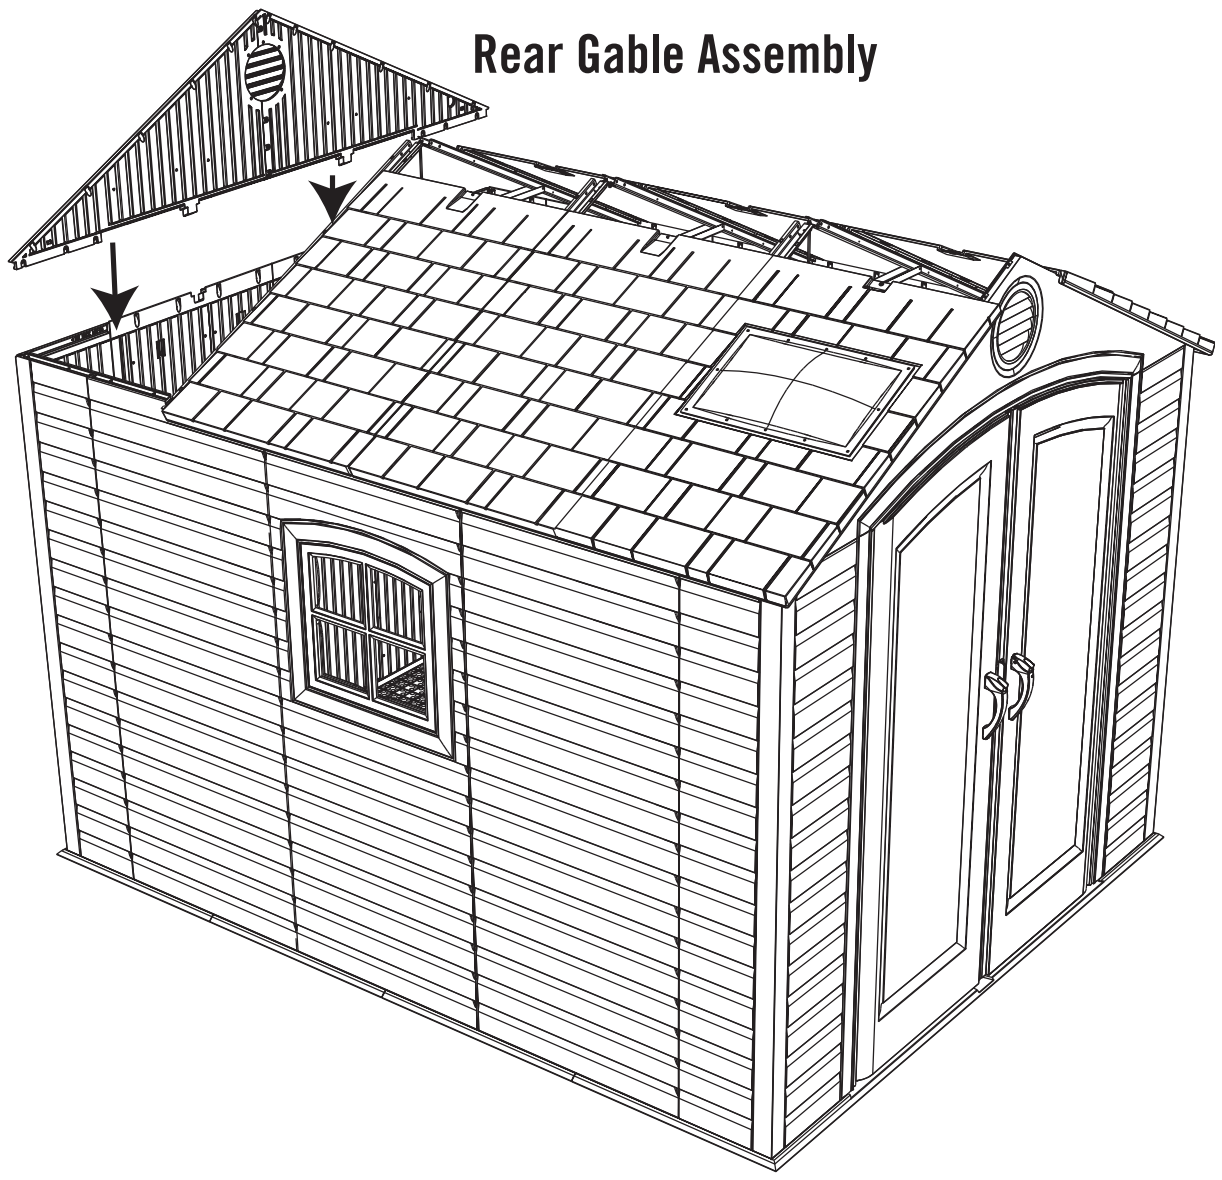

SEC 10.8

Secure the last **Roof Panel for Domed Skylight (AHB)** and **Roof Panel (AGQ)** onto the Truss Assembly and Rear Gable Assembly using the required hardware. The edge of the Roof Panels fit down inside the Truss Channels. Ensure the alignment nubs in the Roof Panels fit into notches on the Trusses.

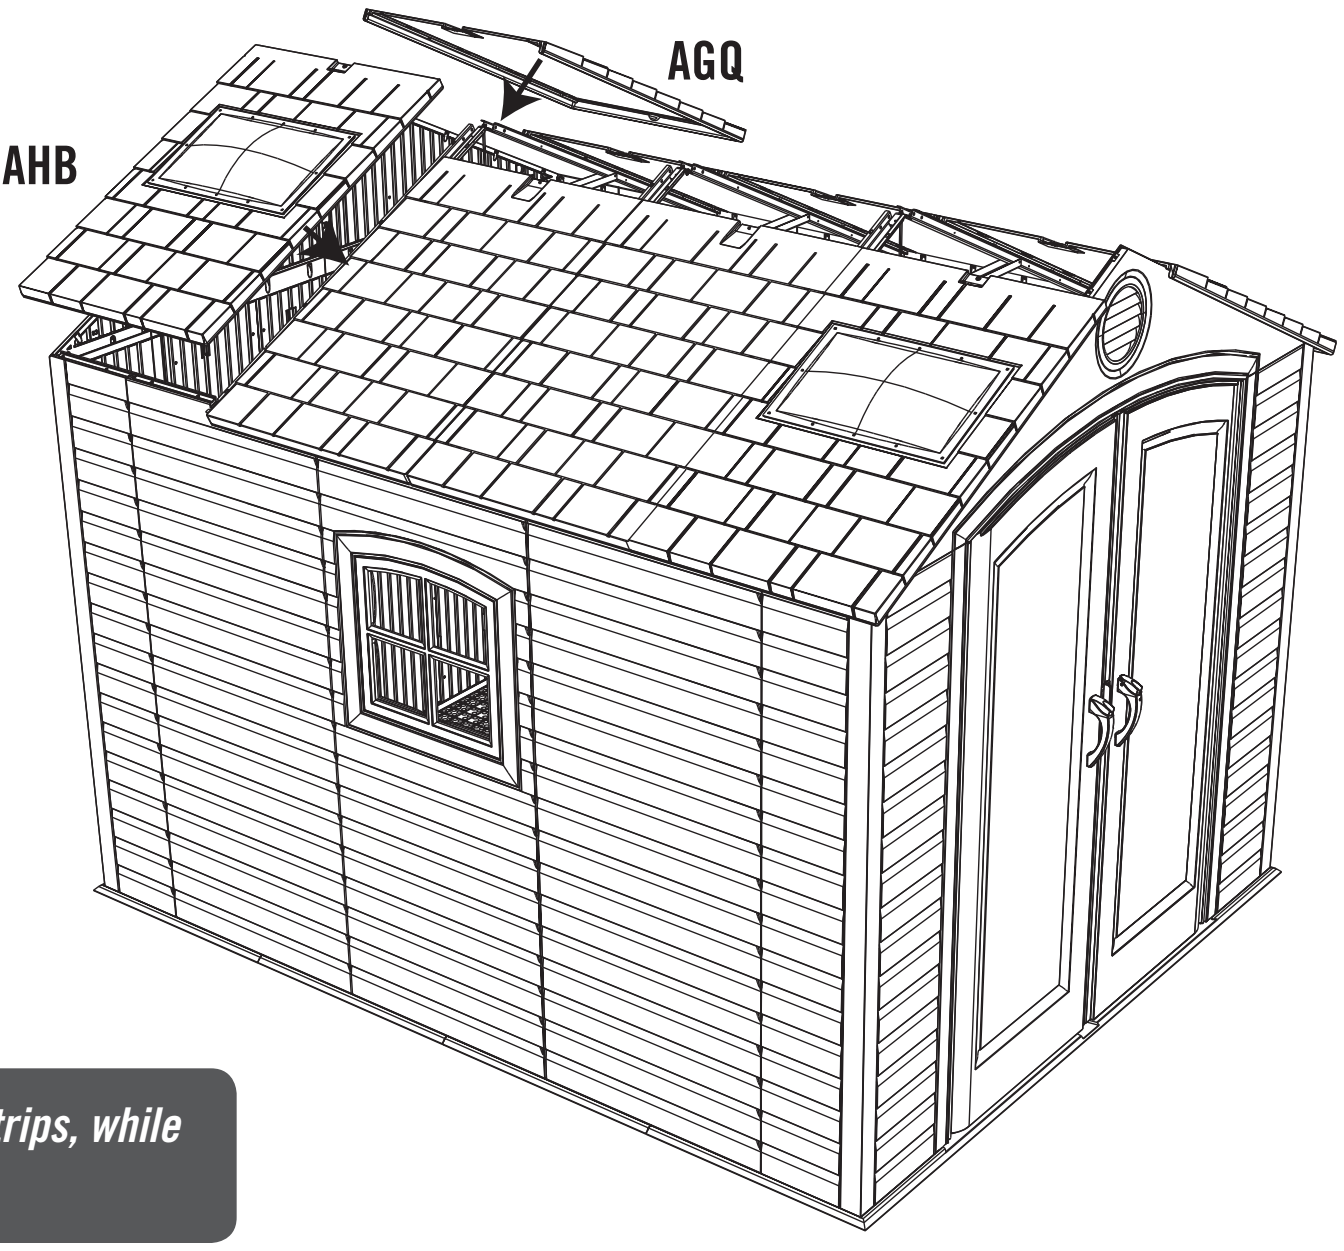

! ***Note: Roof Panels for Domed Skylights require two (2) Roof Support Strips, while regular Roof Panels require only one (1) Roof Support Strip.***

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE





ADZ (x28)

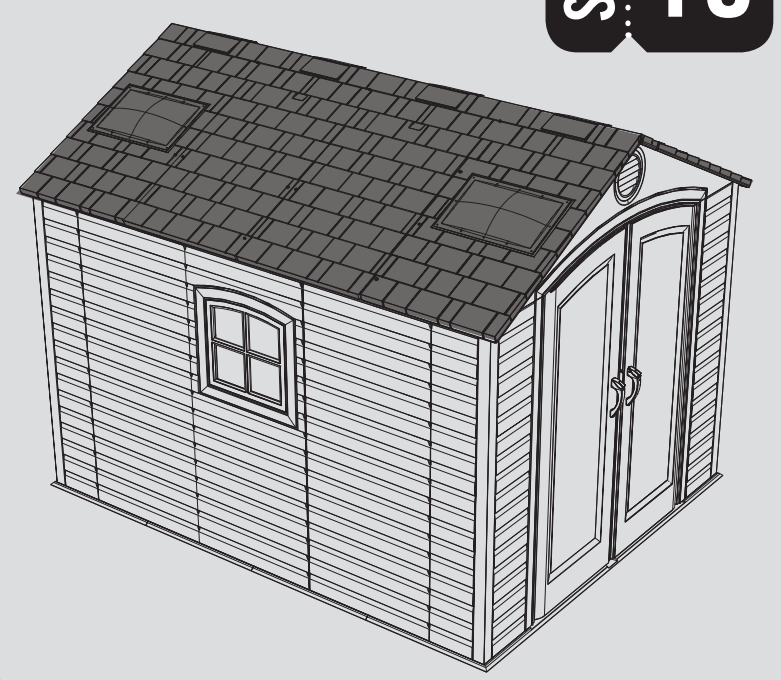

2 ADULTS REQUIRED FOR STEP 10.9 - 10.10

SEC 10.9

ROOF CAP INSTALLATION

Starting at the front side of your shed, attach the **Front Roof Cap (AGG)** to the Roof Panels and Entry Gable. Continue moving to the rear attaching the **Center Roof Caps (AFY)**. Finally, attach the **Rear Roof Cap (AFW)** to the Roof Panels and Rear Gable.



! *Note: Use only a hand screwdriver for this step.*

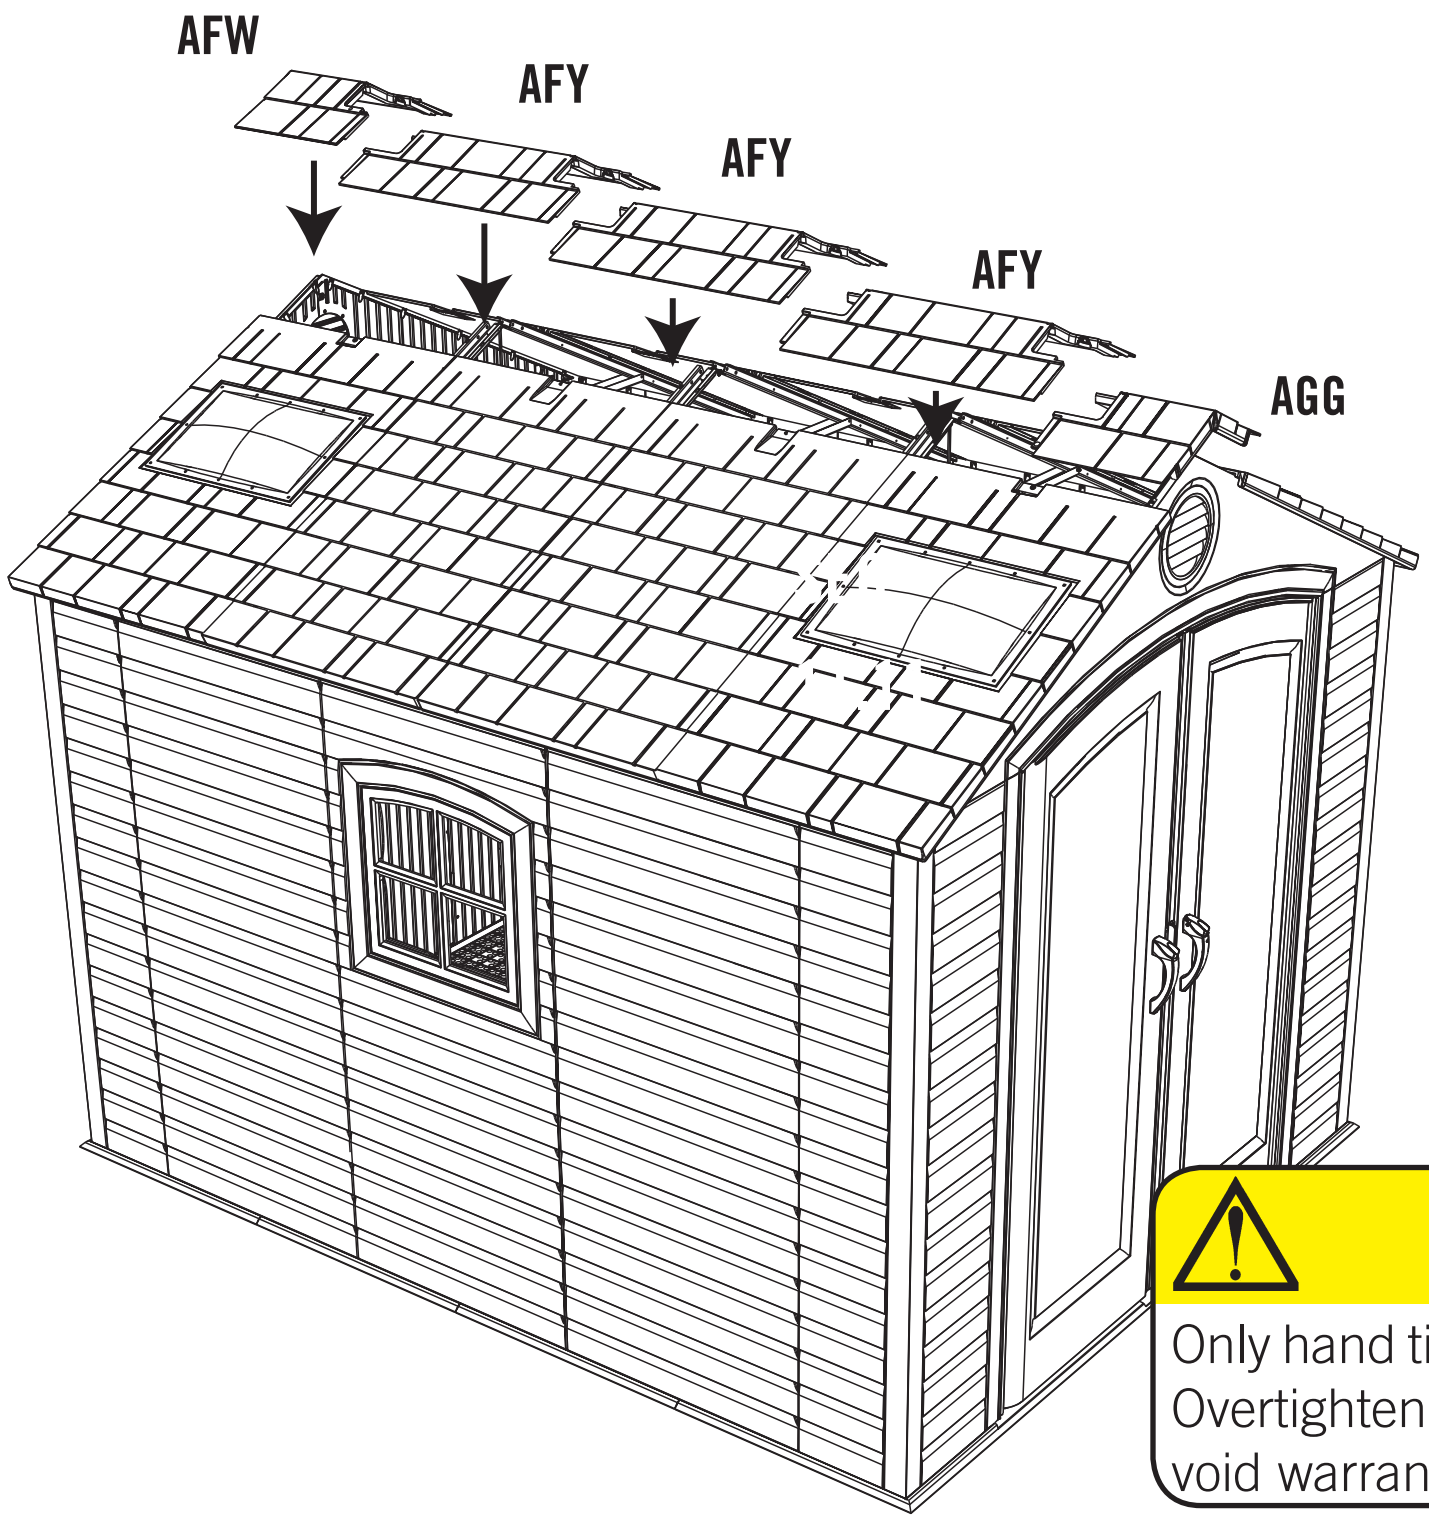

CAUTION

Only hand tighten screws. Do not overtighten. Overtightening may damage plastic parts and void warranty.

SEC 10.10

Connect the Roof Caps to each other using two (2) **1/4” x 5/8” Pan-Head Screws (ADZ)**. **Repeat this step for all Roof Caps.**

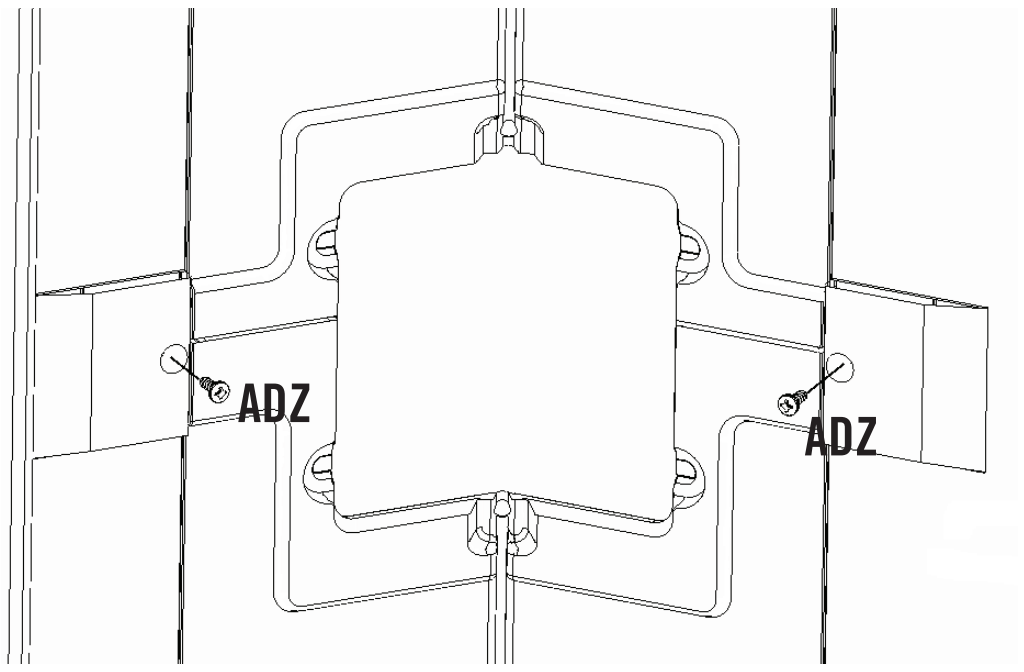

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE



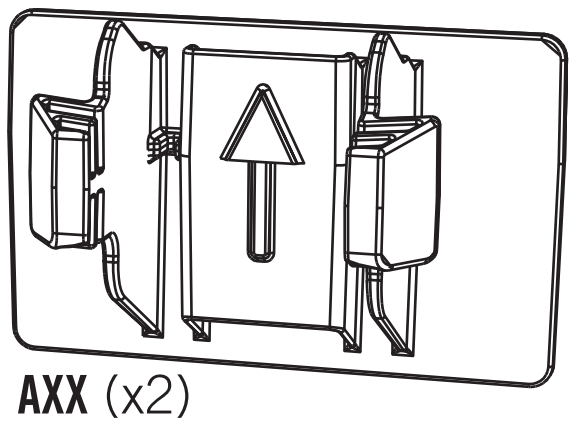

AXX (x2)
(Not to scale)



ADX (x24)

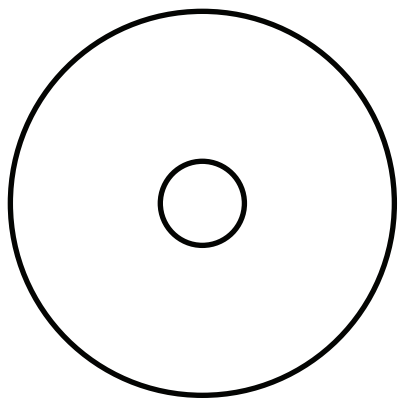

AED (x24)

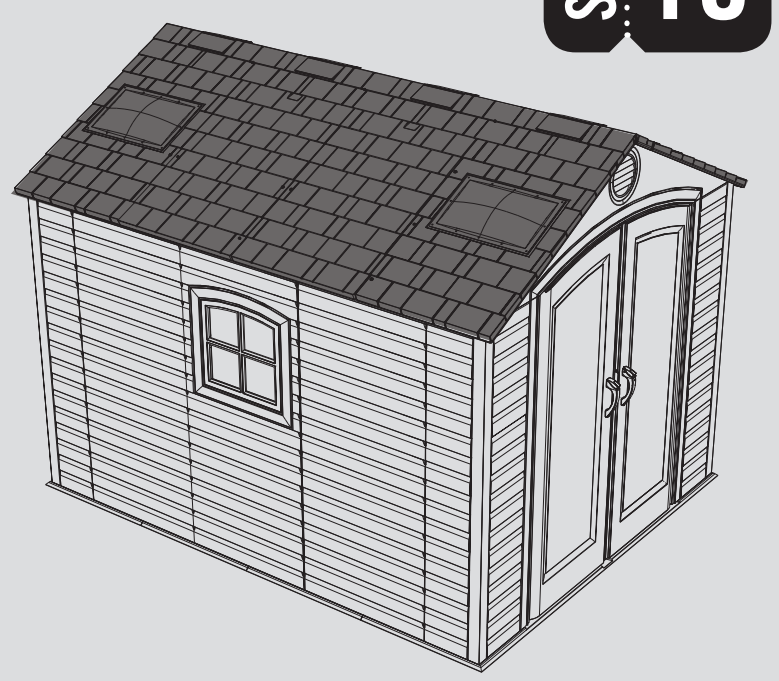

SEC 10.11

SKYLIGHT INSTALLATION

Pre-fold **Skylight (AHC)** before installing. Push folded Skylight up through opening between Roof Caps; open Skylight; use tabs to pull Skylight down into place. Fasten Skylight in place with six (6) **#10 x 1" Fender Washers (AED)** and six (6) **#10 x 1/2" Pan-Head Screws (ADX)** (pull down on tabs while inserting screws to provide resistance). **Repeat this step for each Skylight.**



! *Note: Use only a hand screwdriver for this step.*

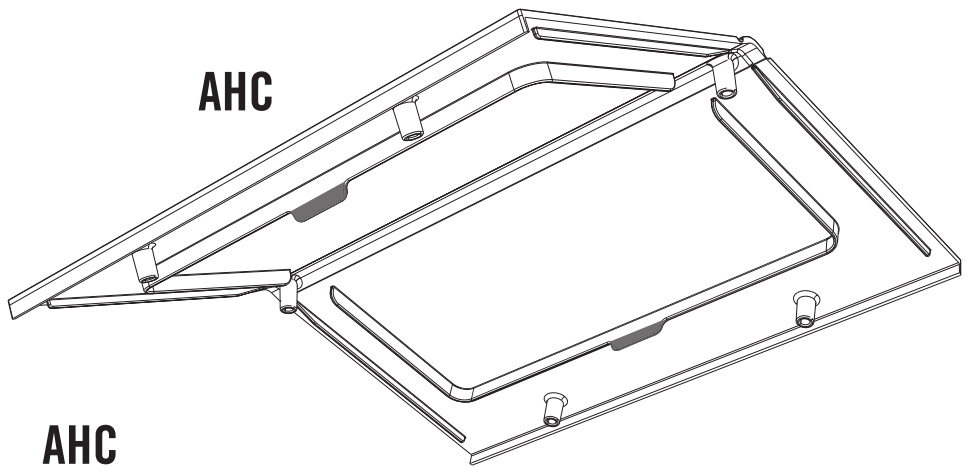

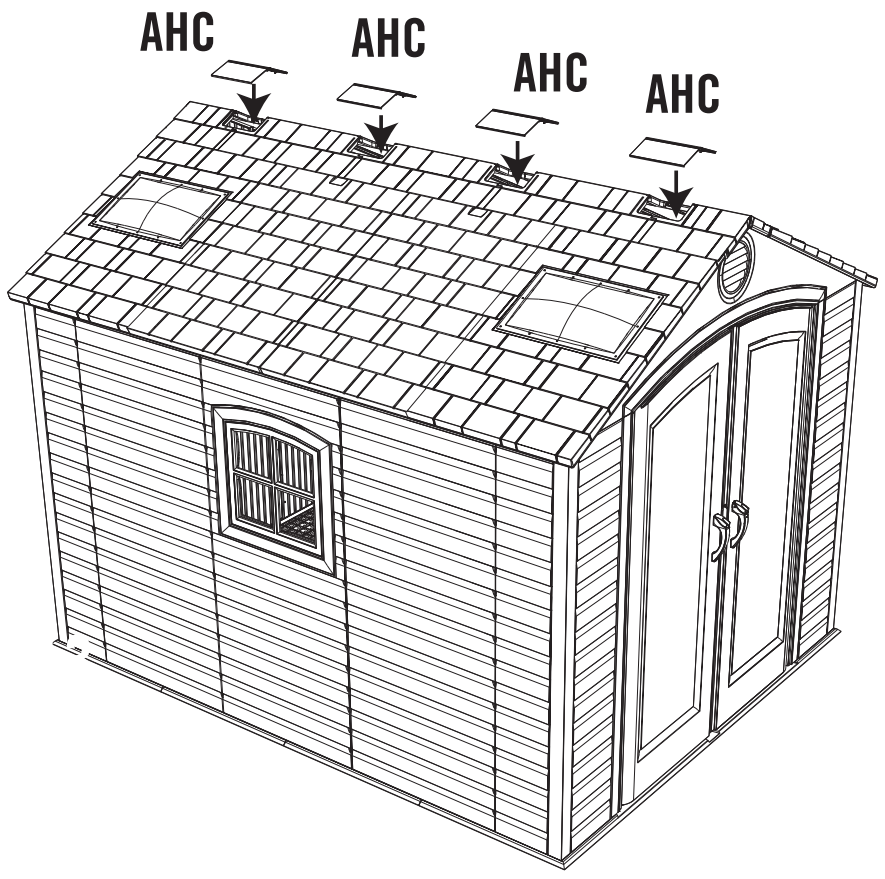

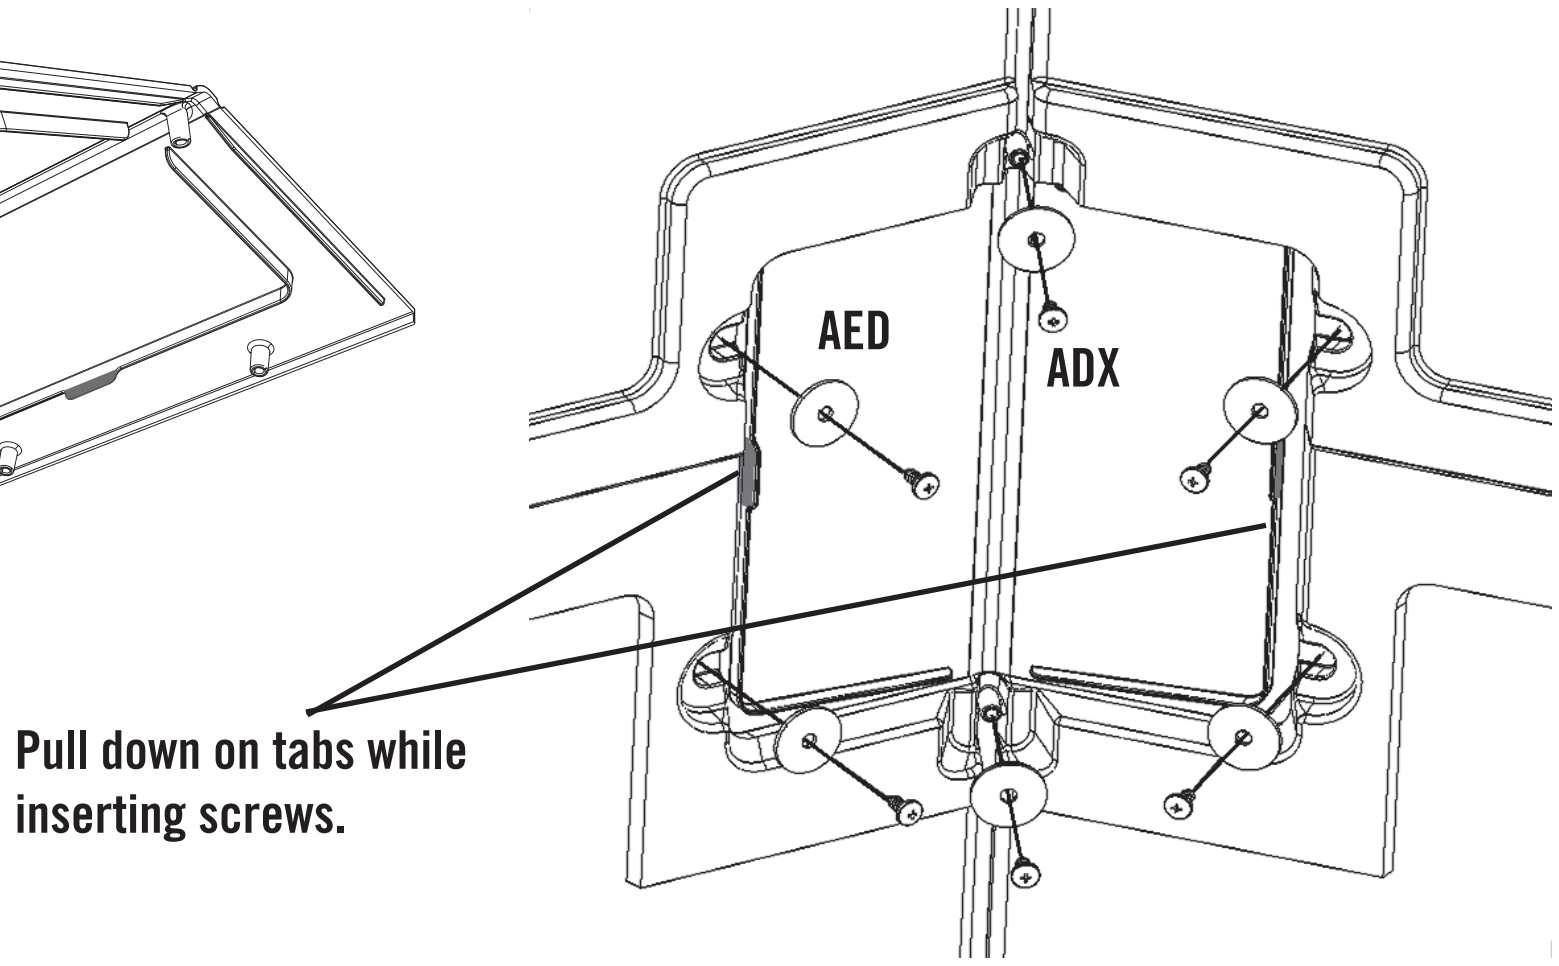

Pull down on tabs while inserting screws.

SEC 10.12

GABLE CLIP INSERTION

Insert the **Truss Hole Inserts (AXX)** between the rear Gable and the rear Wall of the Shed as shown.

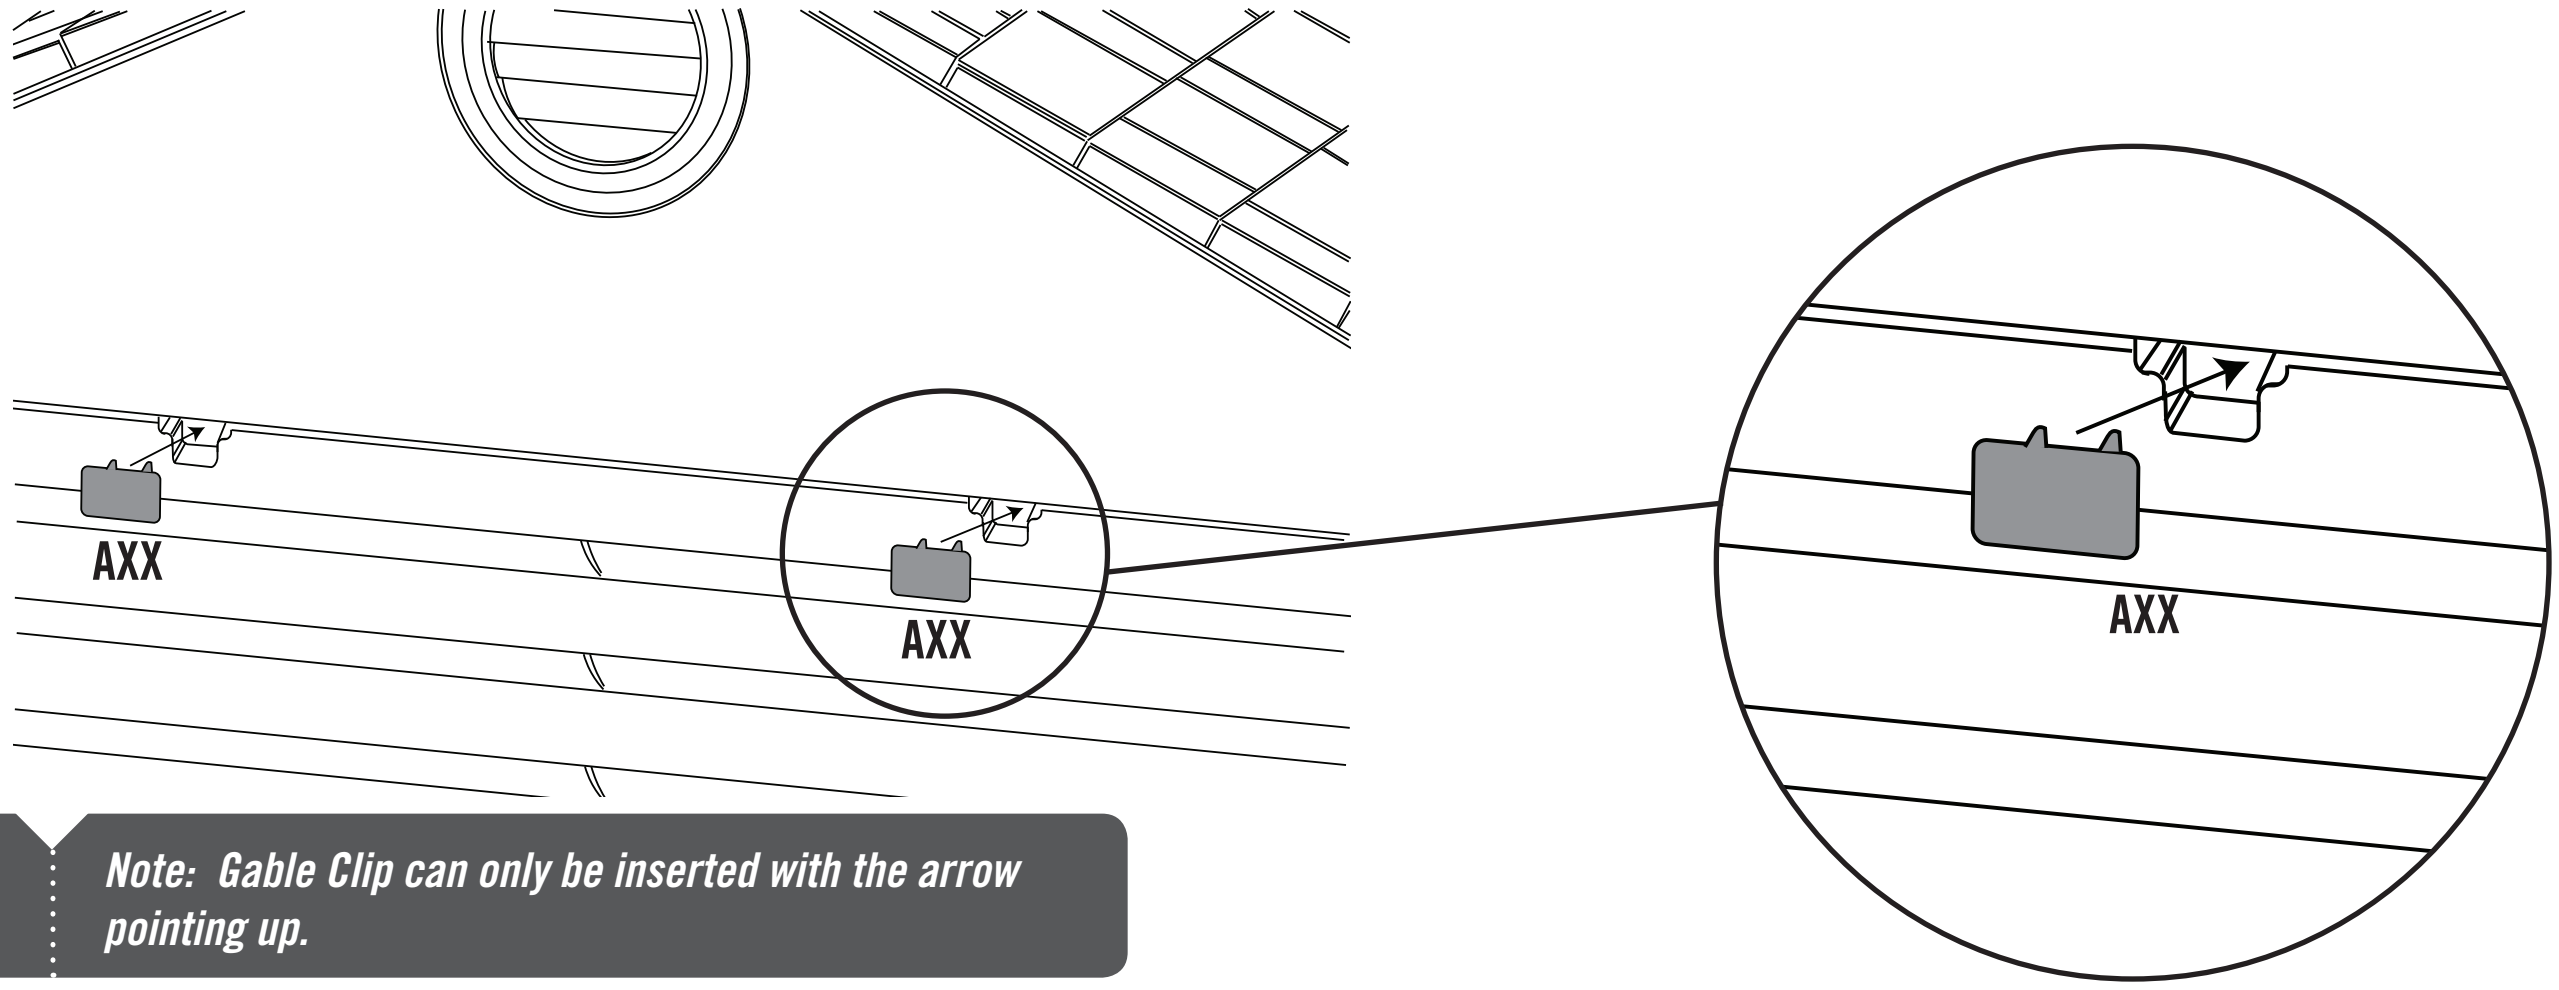

! *Note: Gable Clip can only be inserted with the arrow pointing up.*

SEC 11 SHELF INSTALLATION

HARDWARE REQUIRED *HARDWARE BAGS REQUIRED: BHH, BHI (x2)*

Hardware shown at actual size



ADZ (x14)
1/4" x 5/8" Pan-Head Screw

Parts shown at 15% of actual size



AIY (x2)
Shelf Support Bracket

Hardware shown at actual size



ADZ (x8)
1/4" x 5/8" Pan-Head Screw

METAL PARTS REQUIRED *METAL PARTS KIT REQUIRED: CTD*

Parts shown at 8% of actual size

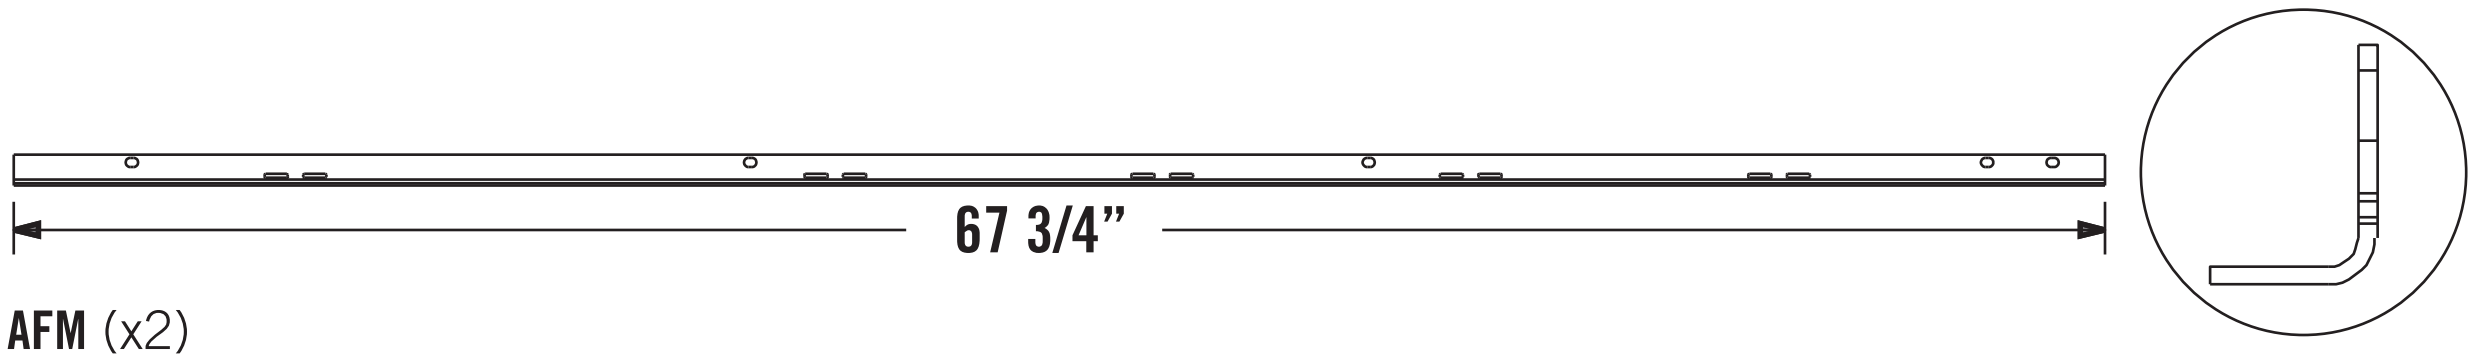

AFM (x2)
Wall/Shelf Support Channel

PLASTIC PARTS REQUIRED *LOCATED IN BOX 1 & SMALL PARTS KIT: BON*

Part shown at 4% of actual size



AFV (x1)
90" Shelf

Part shown at 8% of actual size

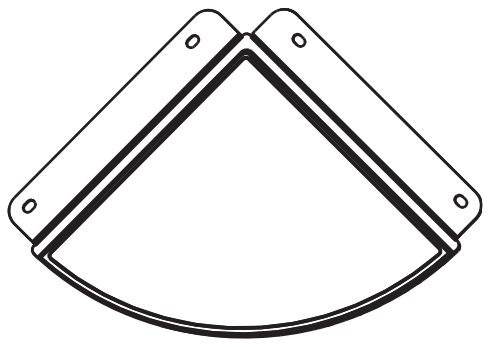

AFZ (x2)
Corner Shelf

TOOLS REQUIRED



Phillips Screwdriver



Safety Glasses

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE





ADZ (x8)

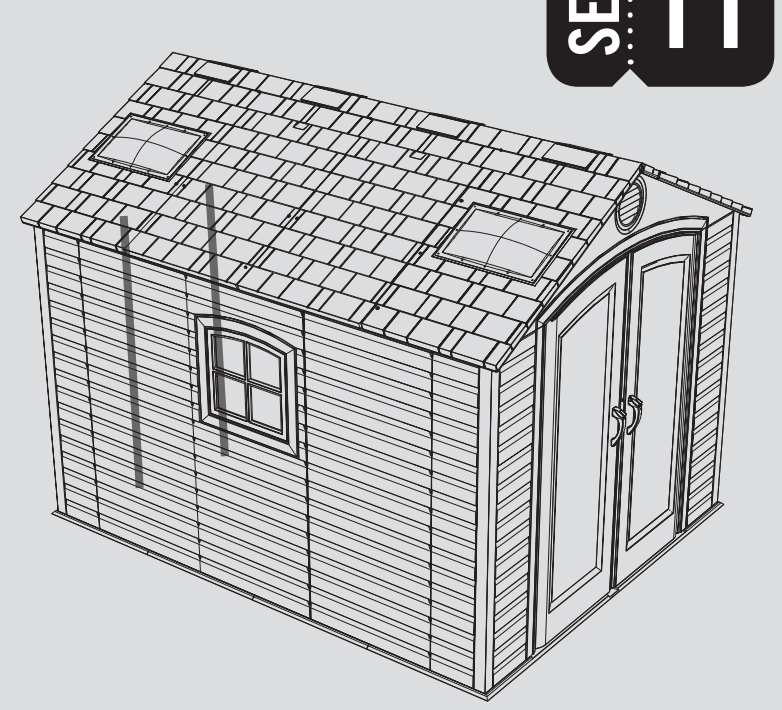

SEC 11.1

WALL/SHELF SUPPORT CHANNEL INSTALLATION

Insert a **Shelf Support Channel (AFM)** into the slots in the Wall Panels directly below the Right Truss notch, and secure with four (4) **1/4" x 5/8" Pan-Head Screws (ADZ)**. Insert a second Shelf Support Channel in the slot directly to the right of the Left Truss Notch and secure with four (4) 1/4" x 5/8" Pan-Head Screws.

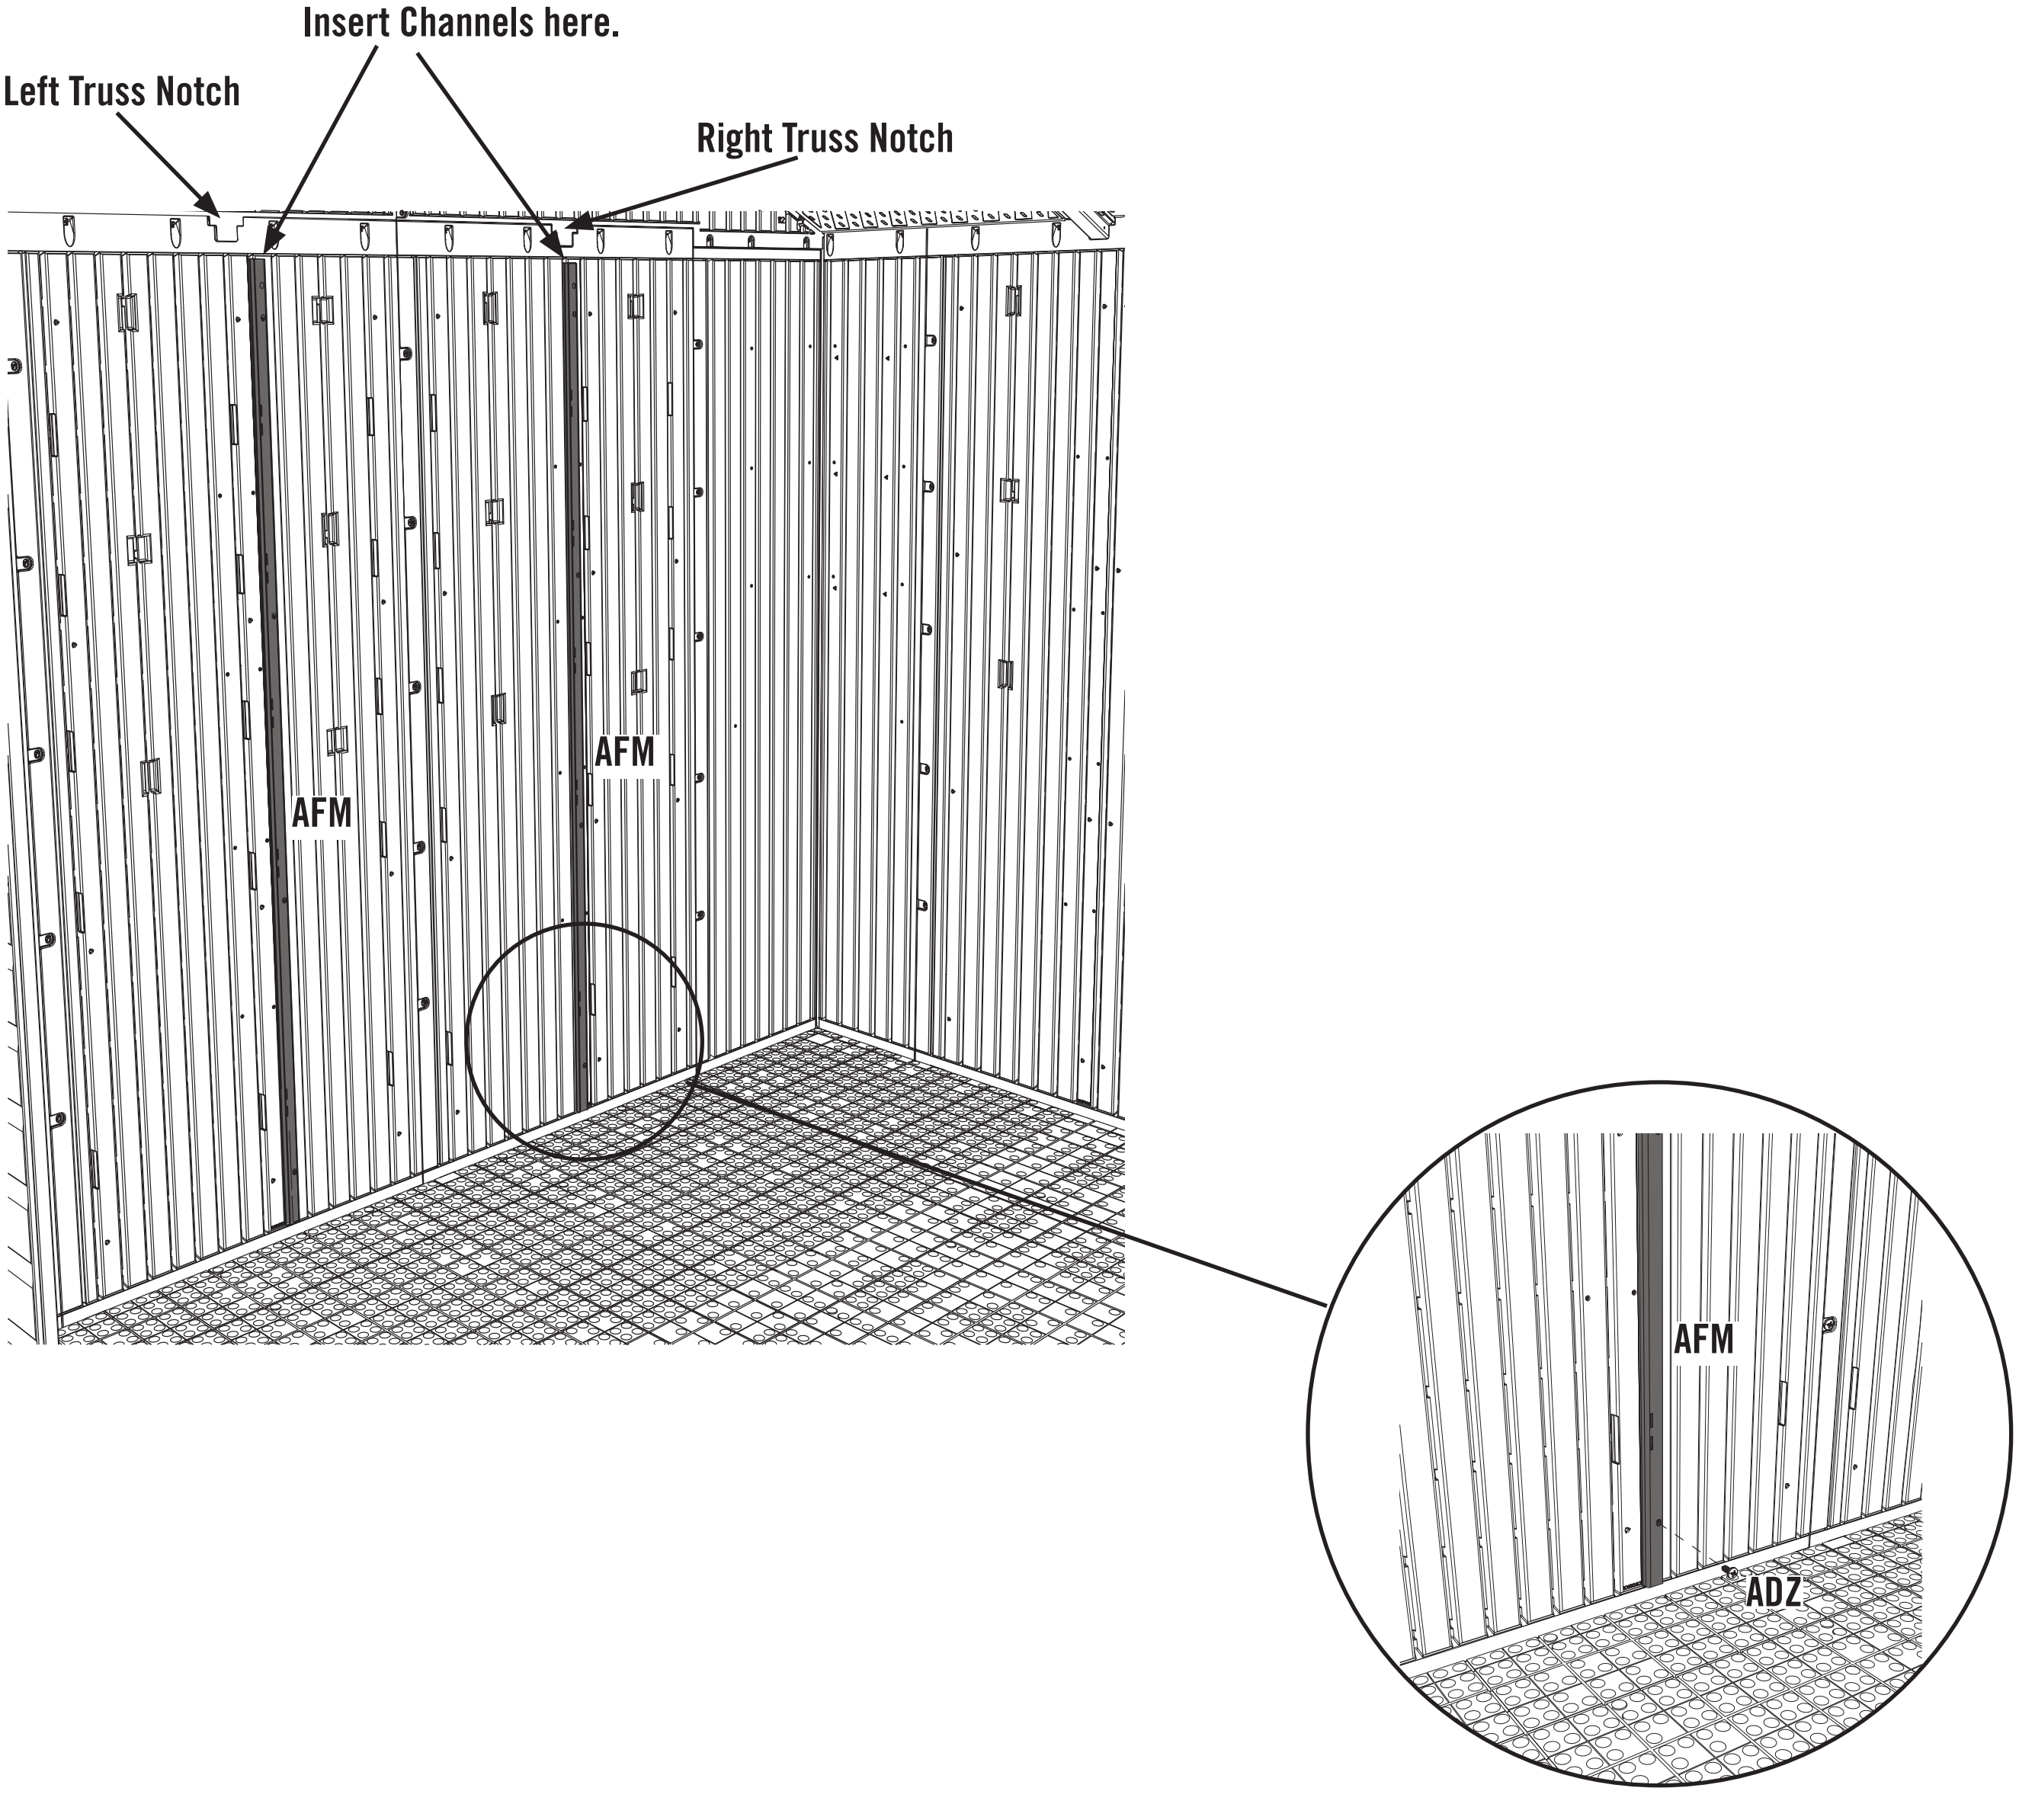
Insert Channels here.
Left Truss Notch
Right Truss Notch
AFM
AFM
AFM
ADZ

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE





ADZ (x6)

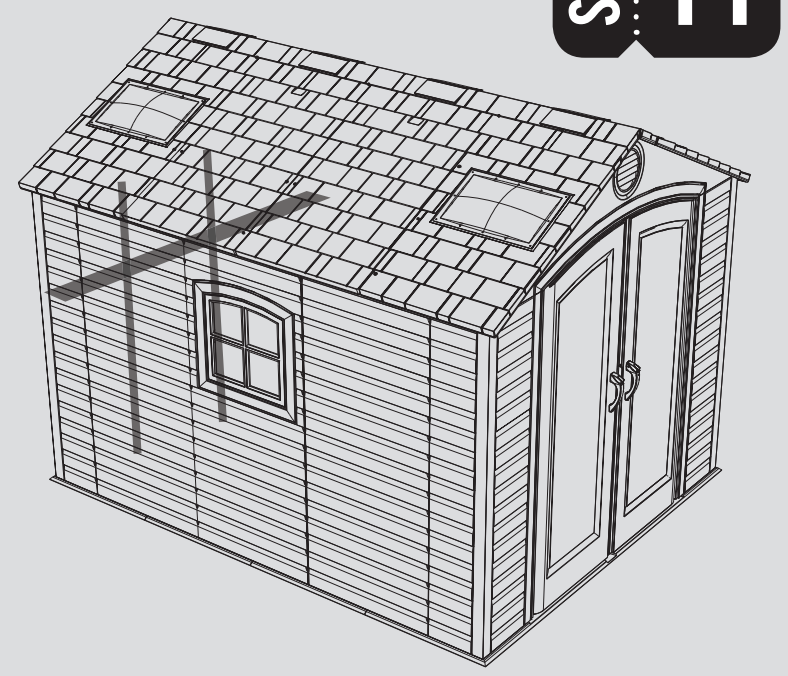

SEC 11.2

90” SHELF INSTALLATION

Set a **Shelf Support Bracket (AIY)** into the slots of each of the Shelf Support Channels. The slots must be at the same height.

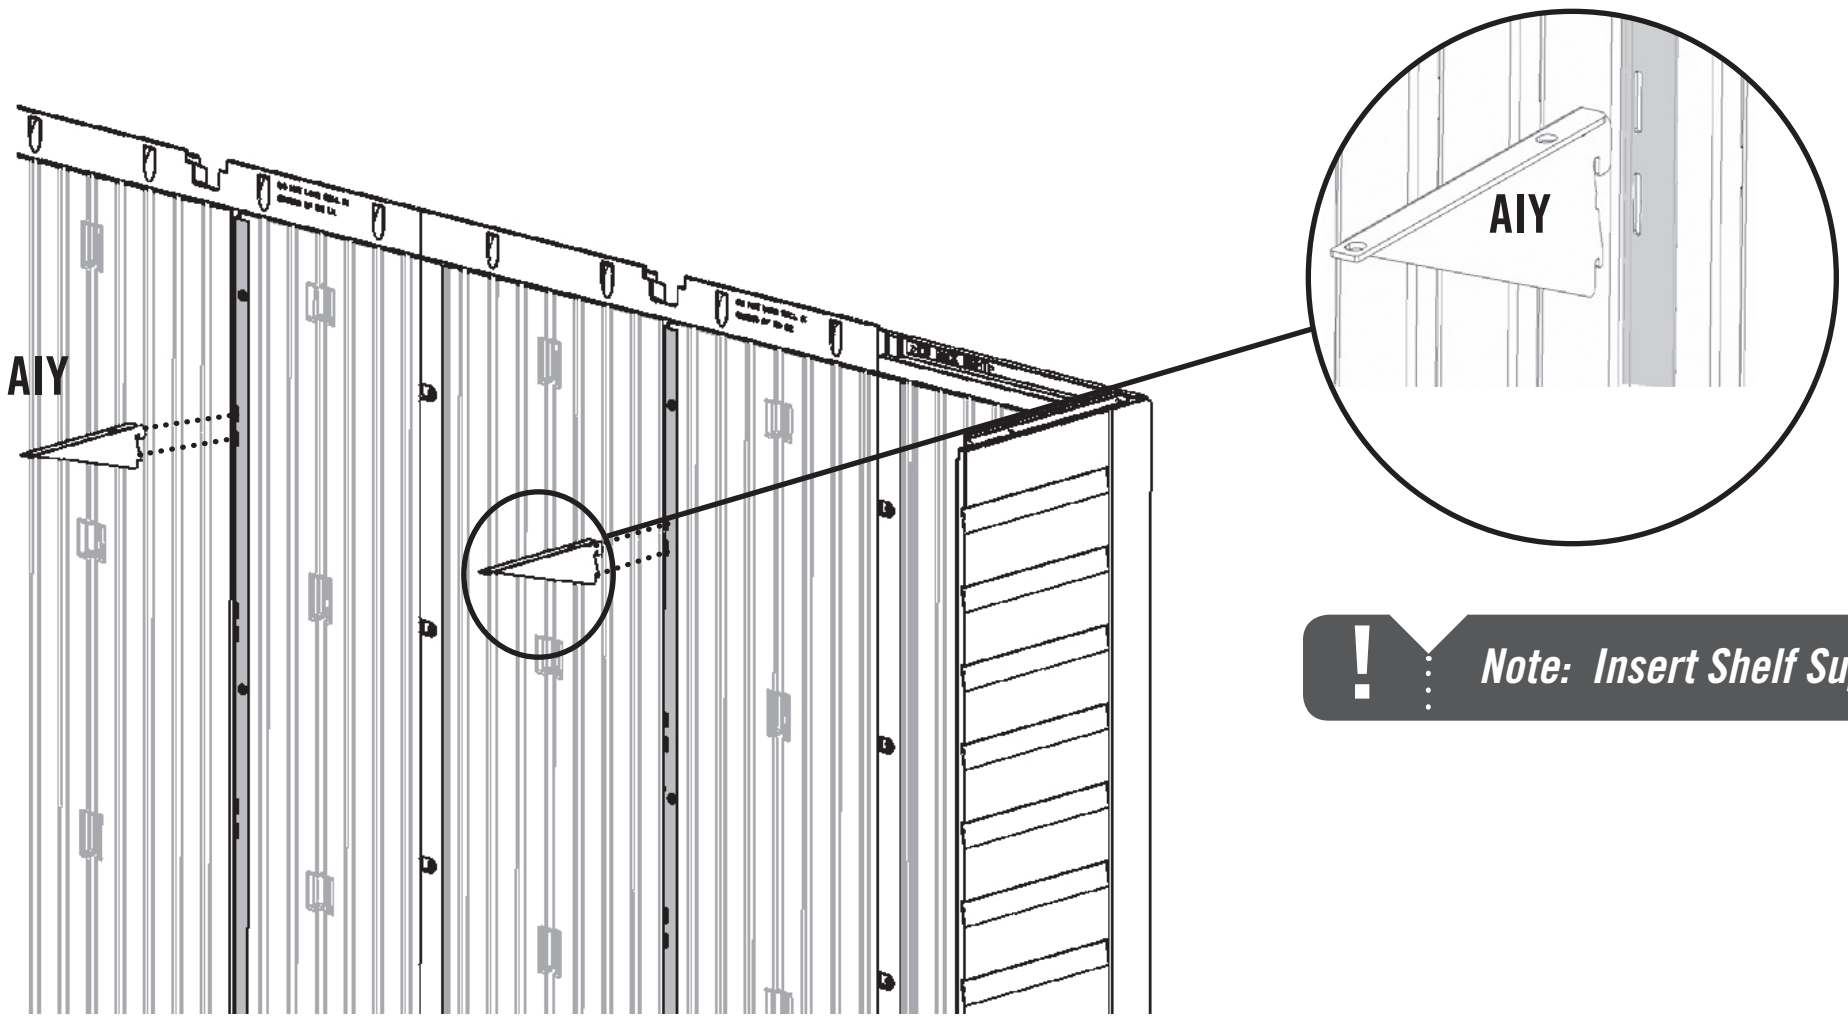

Note: *Insert Shelf Support Bracket at an angle.*

SEC 11.3

Fold up flaps on the end of **90” Shelf (AFV)**. Set Shelf on Brackets with indentations toward wall, and secure with six (6) **1/4” x 5/8” Phillips Pan-Head Screws (ADZ)**.

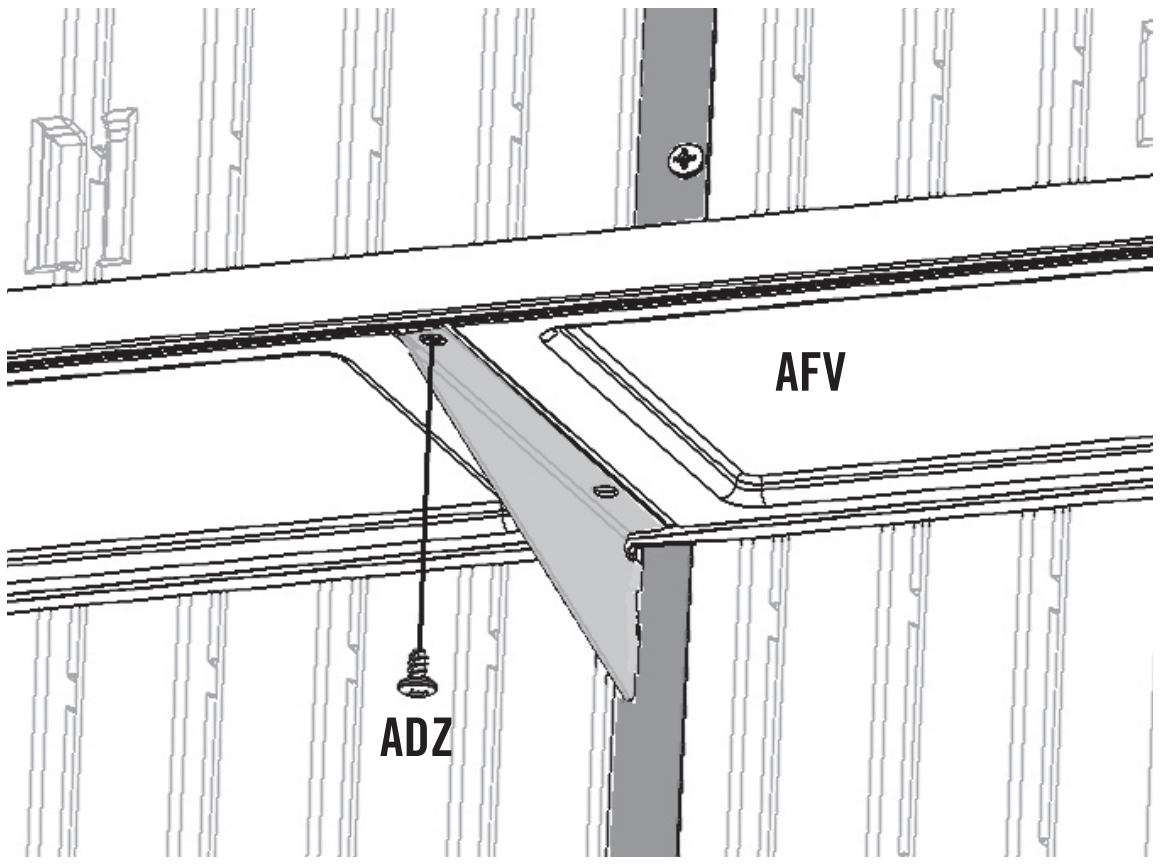

Upward view

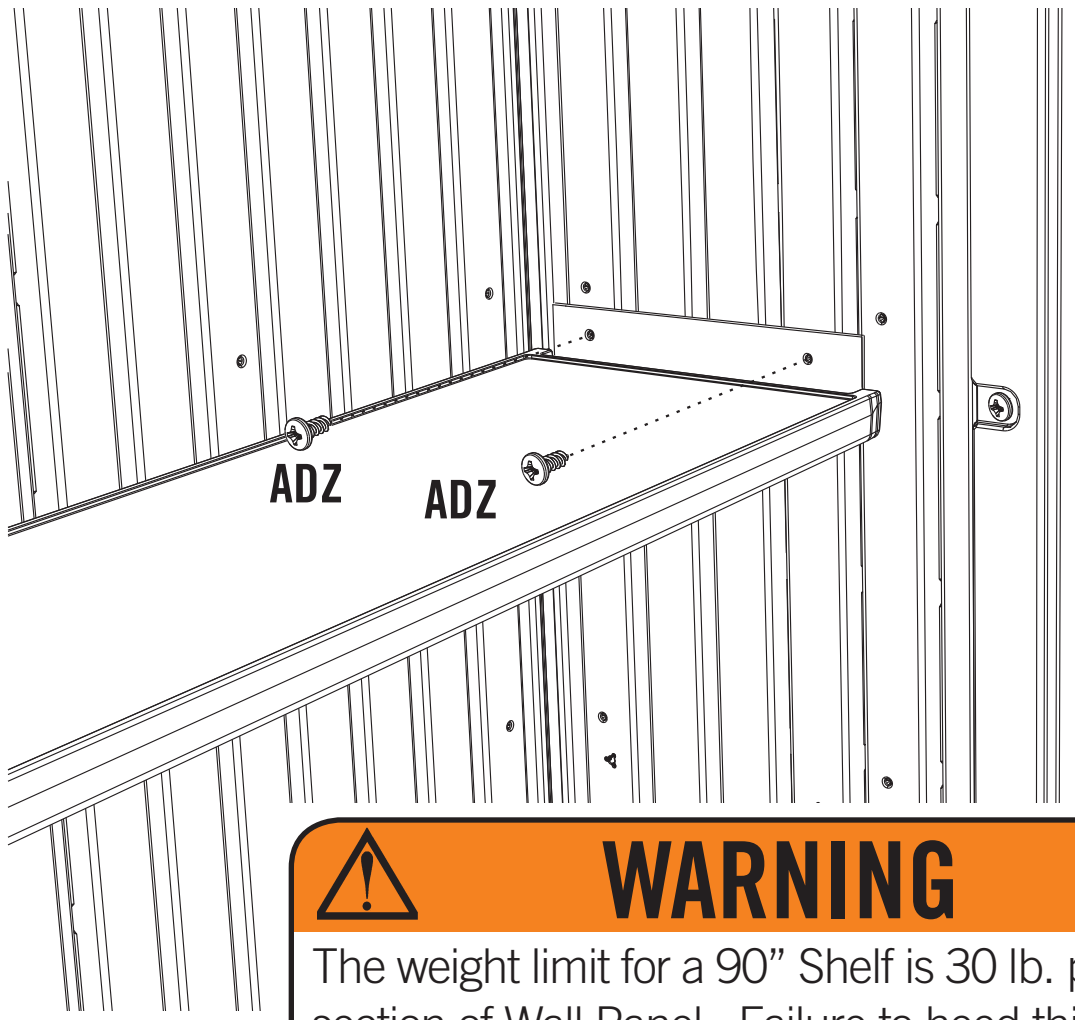

WARNING

The weight limit for a 90” Shelf is 30 lb. per 30” section of Wall Panel. Failure to heed this warning could result in property damage and/or personal injury.

Note: *There are only holes for screws along front side of the Shelf (front is labeled “Front” on underside of Shelf).*

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE





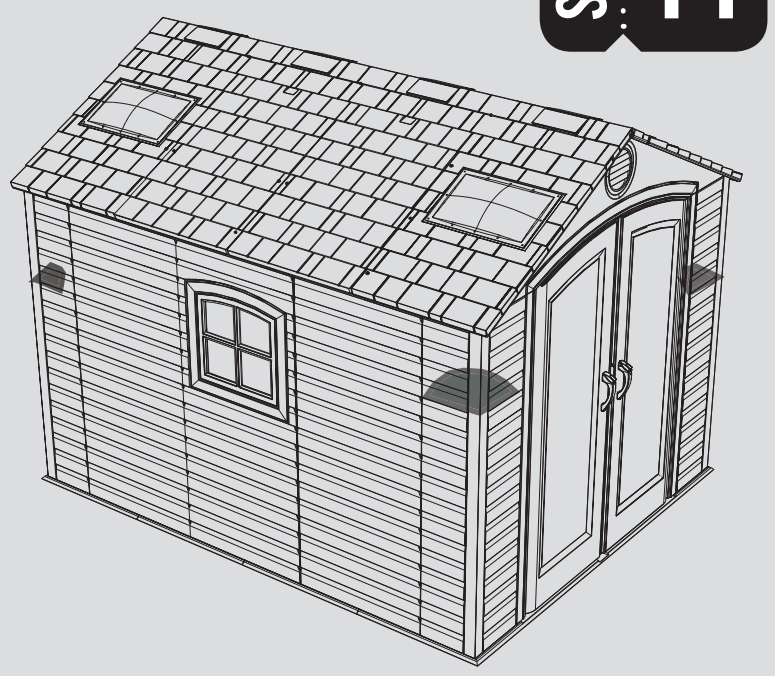

SEC 11.4

CORNER SHELF INSTALLATION

Fold up edges of a **Corner Shelf (AFZ)**. Line-up holes in the Corner Shelf with a set of pre-made holes in any Corner Panel as shown. Secure with four (4) **1/4” x 5/8” Phillips Pan-Head Screws (ADZ)**. **Repeat this step for the second Corner Shelf.**

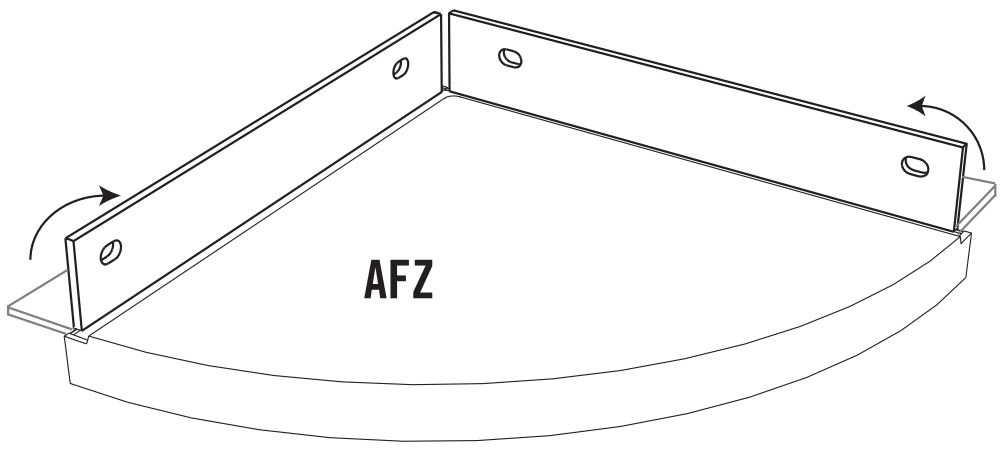

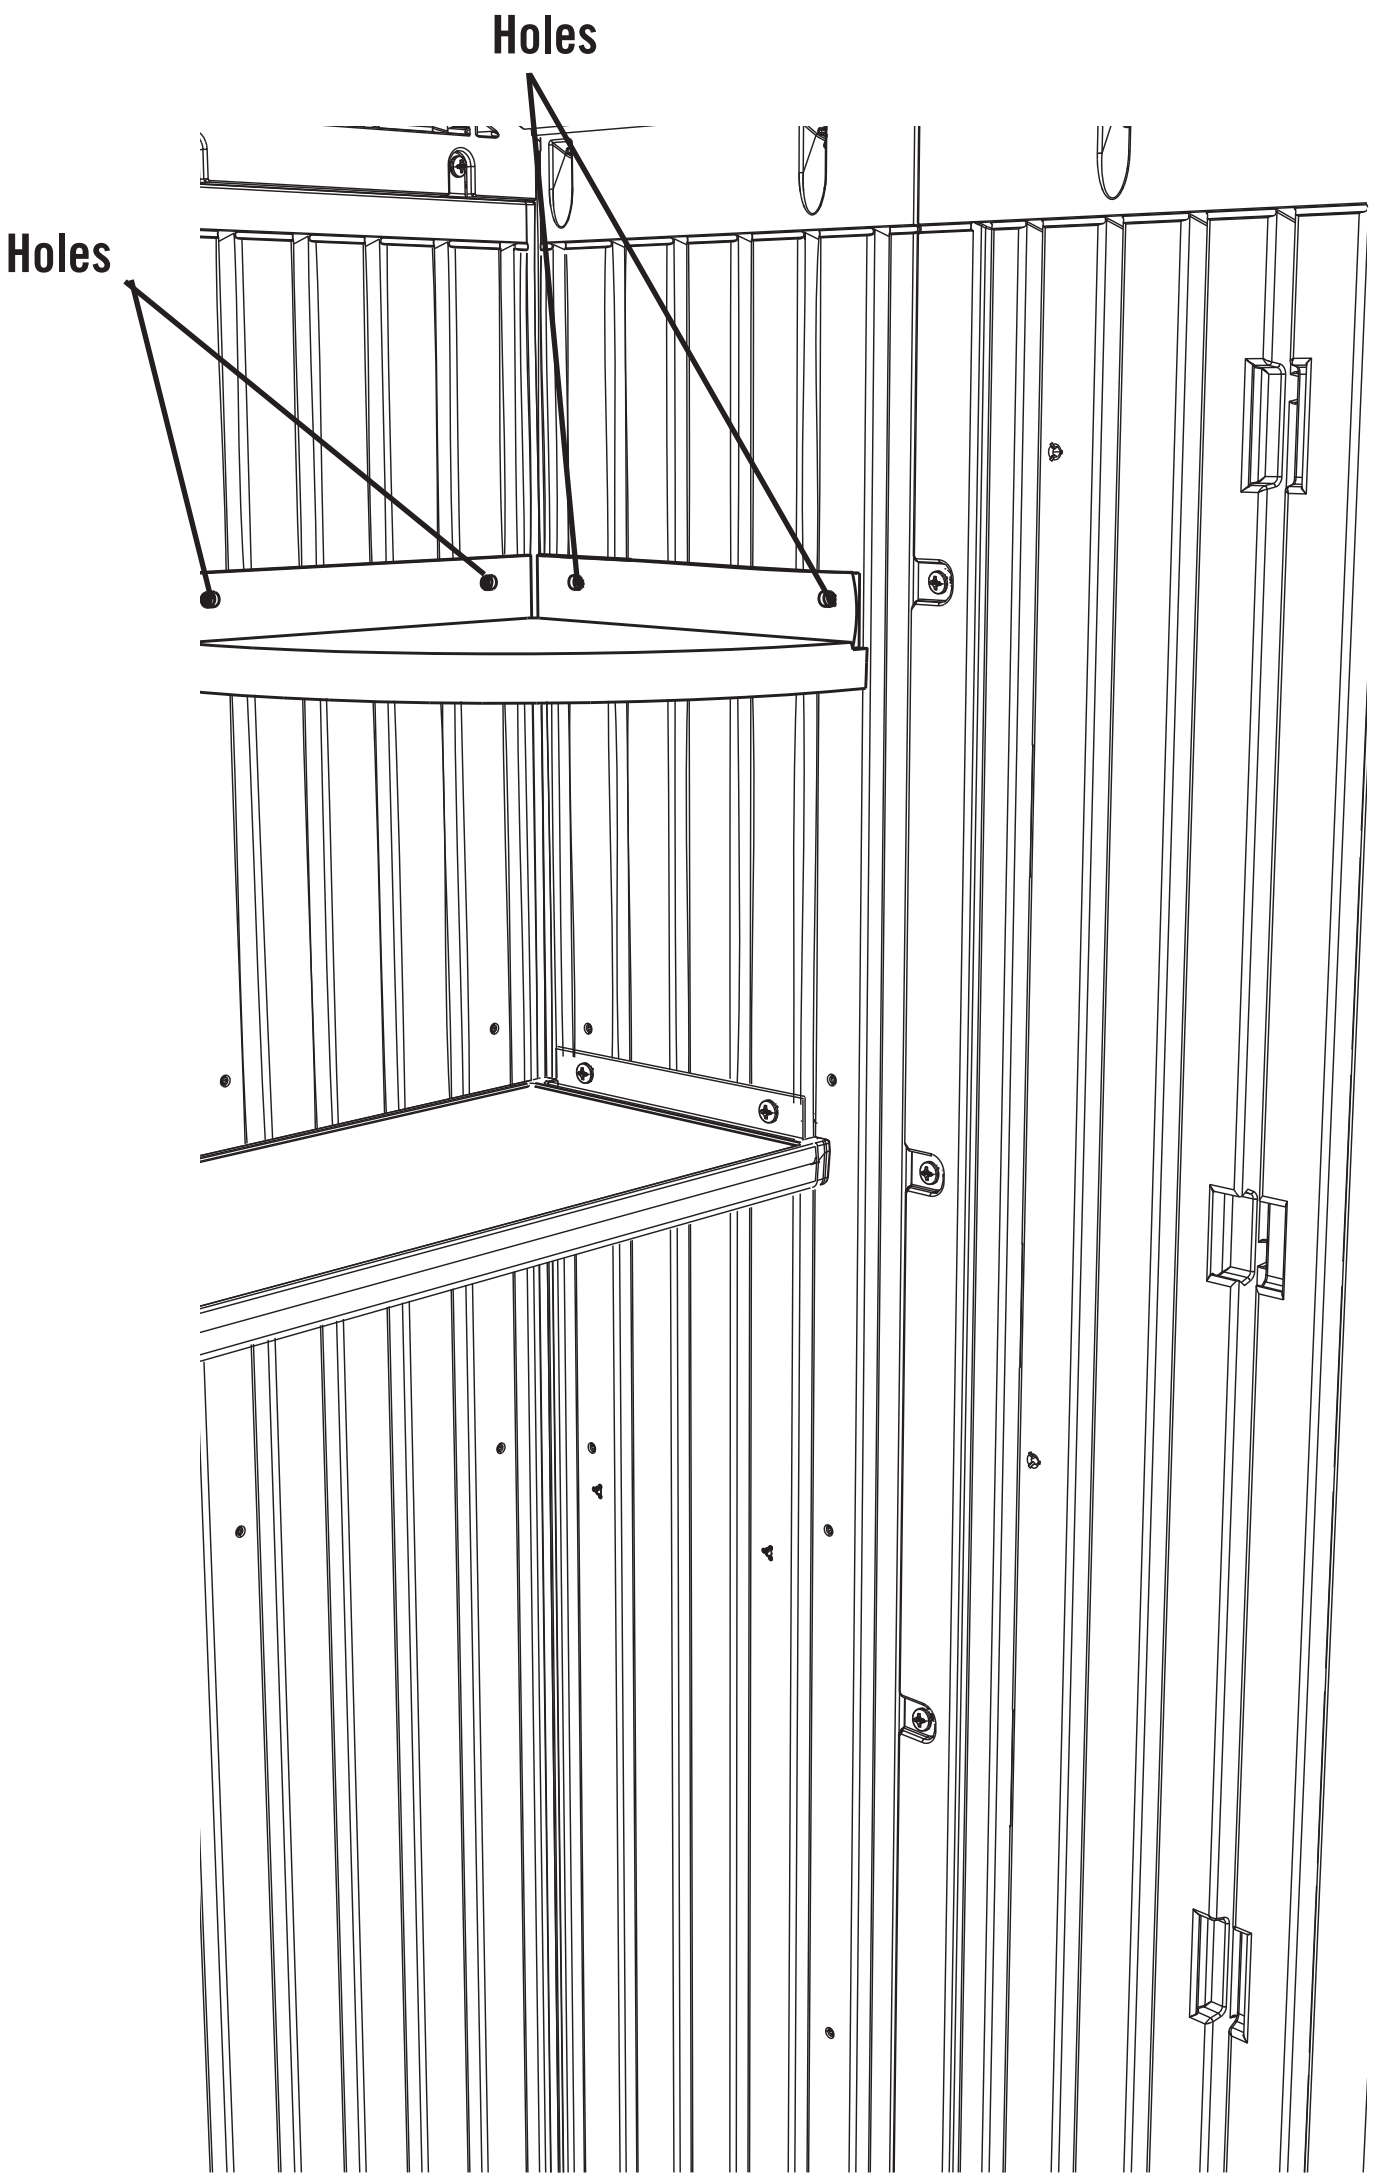

WARNING

The total weight placed on a Corner Shelf cannot exceed 10 lb. (4.5 kg).

SEC 12 WINDOW INSTALLATION

HARDWARE REQUIRED

HARDWARE BAG REQUIRED: BEJ

Hardware shown at actual size (*Unless indicated otherwise)



ADZ (x4)
1/4” x 5/8” Pan-Head Screw



ADY (x1)
#10 x 3/8” Pan-Head Screw

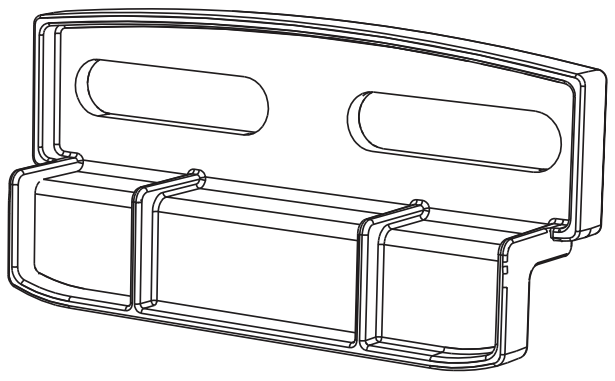

***AIS** (x2)
Window Latch

PLASTIC PARTS REQUIRED

SMALL PARTS KIT REQUIRED: BON

Part shown at 4% of actual size



AHE (x1)
Window

TOOLS REQUIRED



Phillips Screwdriver



Safety Glasses

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE





ADZ (x4)



ADY (x1)

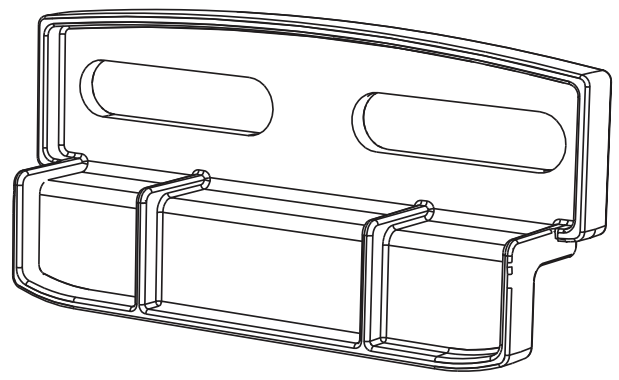

AIS (x2)
(Not to scale)

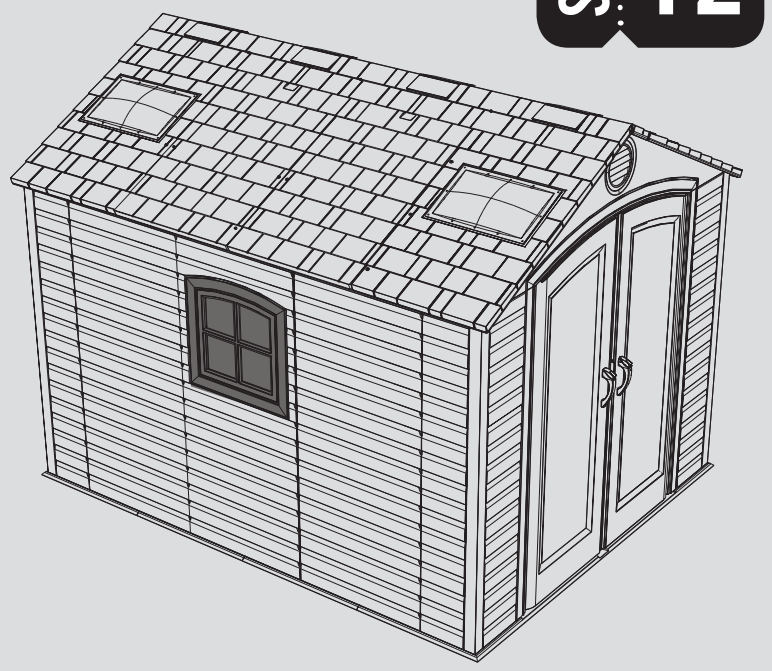

SEC 12.1 WINDOW INSTALLATION

Remove the plastic protective film from **both sides** of the **Window (AHE)** and slide the Window into the grooves along the sides of the opening in the Window Wall Panel (Fig. 1). Insert the **#10 x 3/8" Pan-Head Screw (ADY)** into the hole at the bottom of the Window (Fig. 2) until flush. Attach a **Window Latch (AIS)** above each corner of the Window as shown. When tightening the four (4) **1/4" x 5/8" Pan-Head Screws (ADZ)**, ensure the Window Latches slide freely (Fig. 3). Do not overtighten.

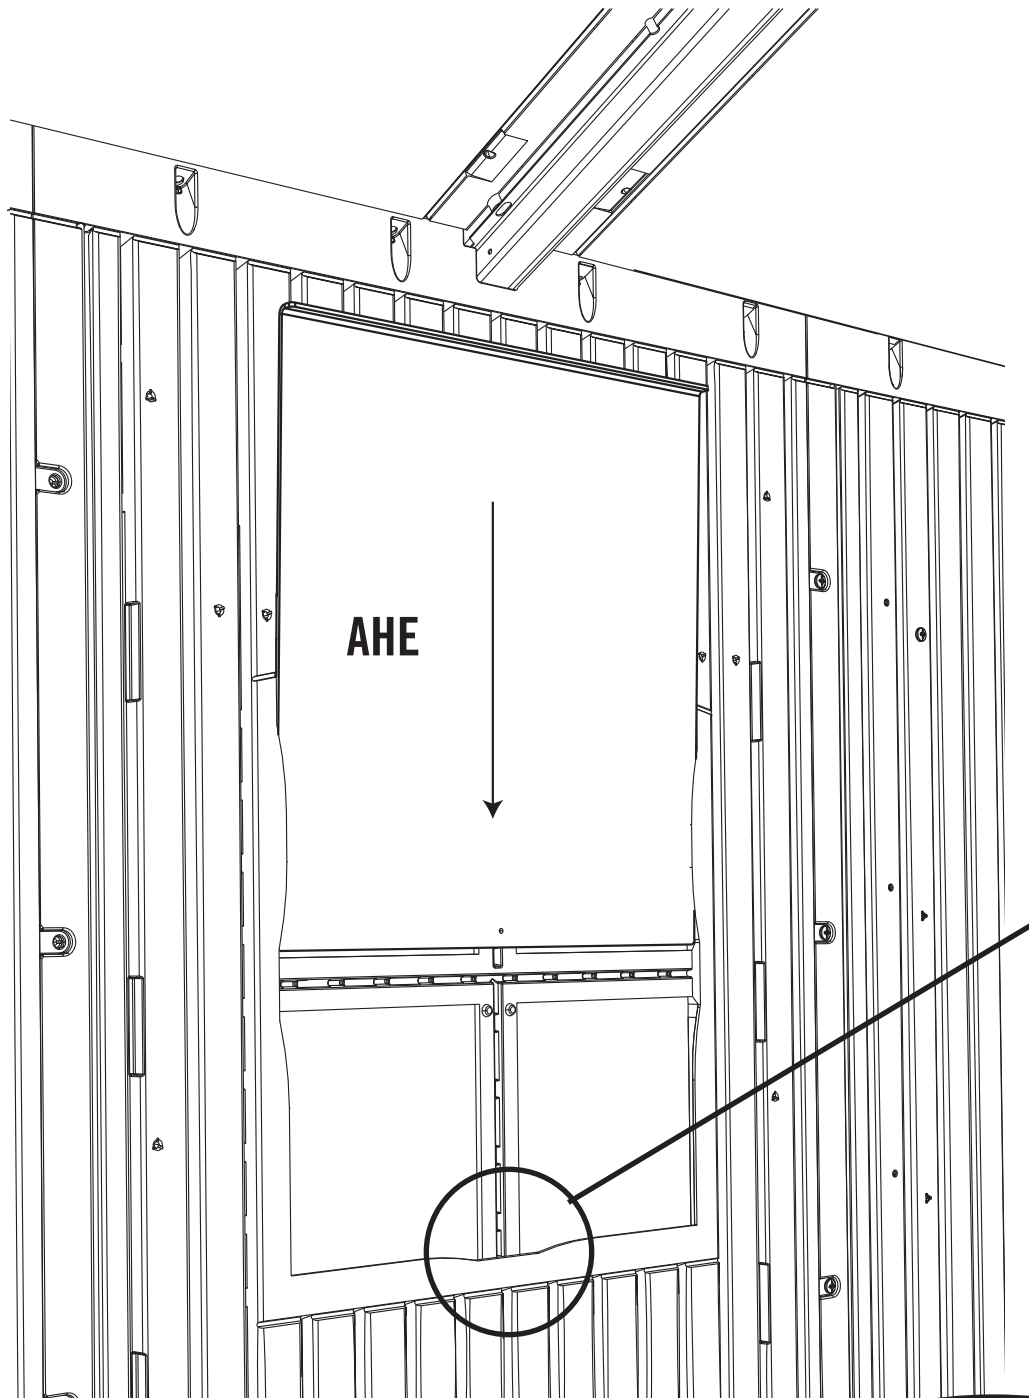

Fig. 1

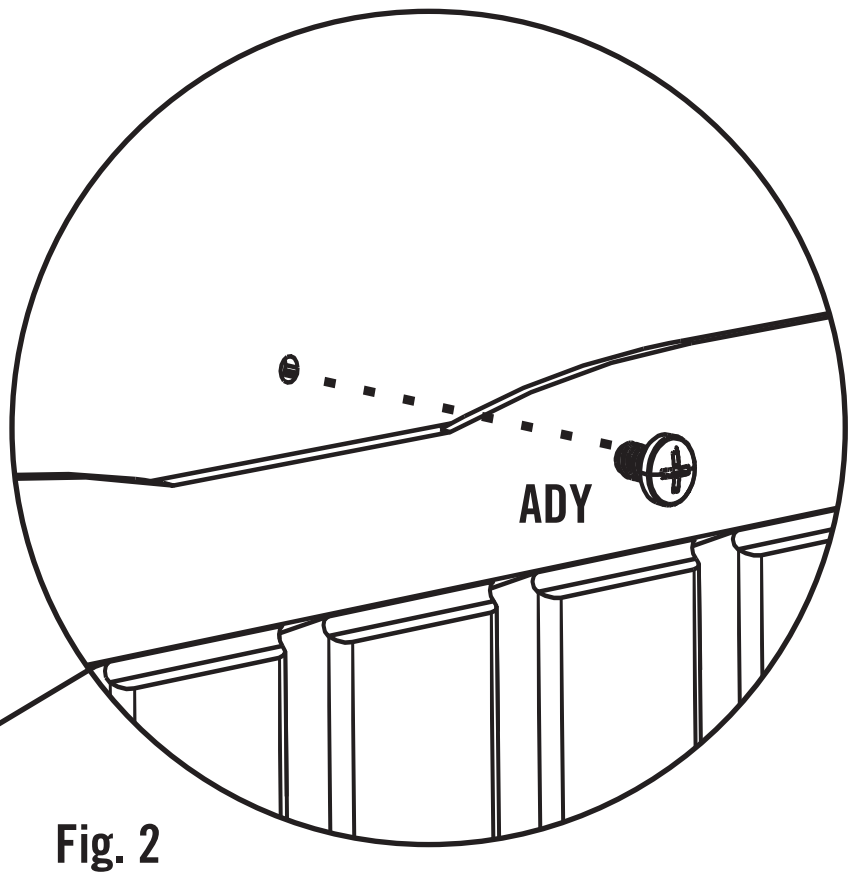

Fig. 2

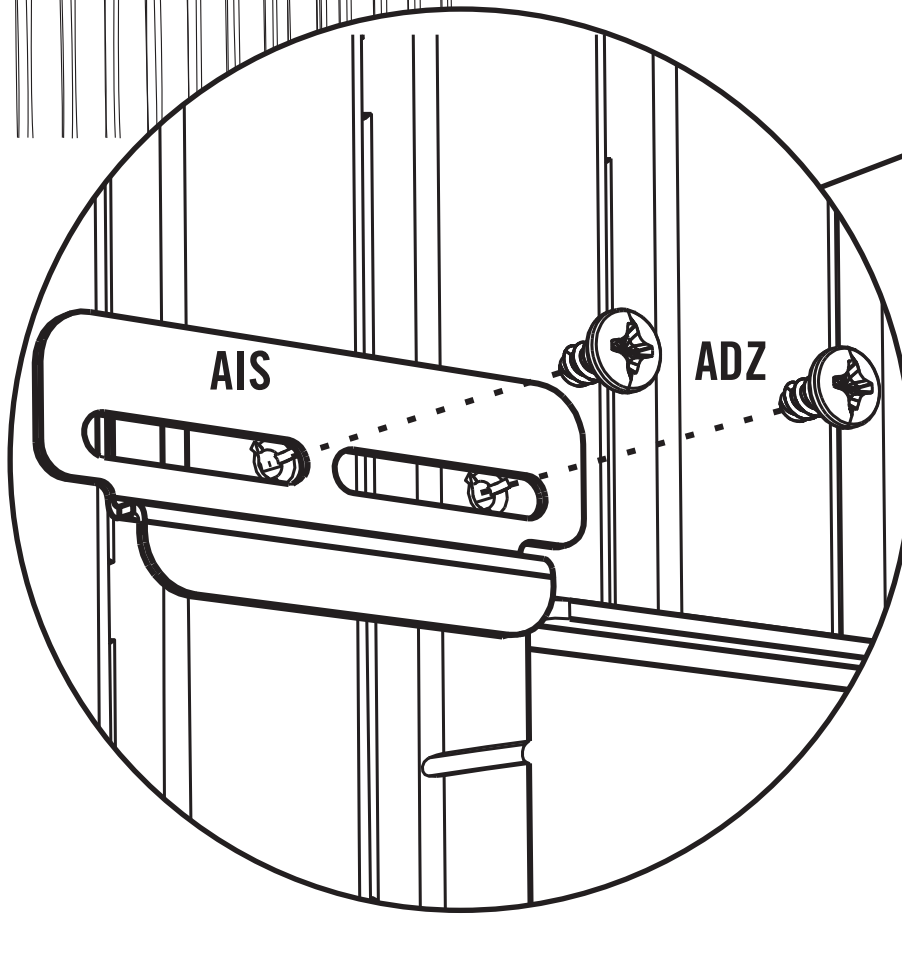

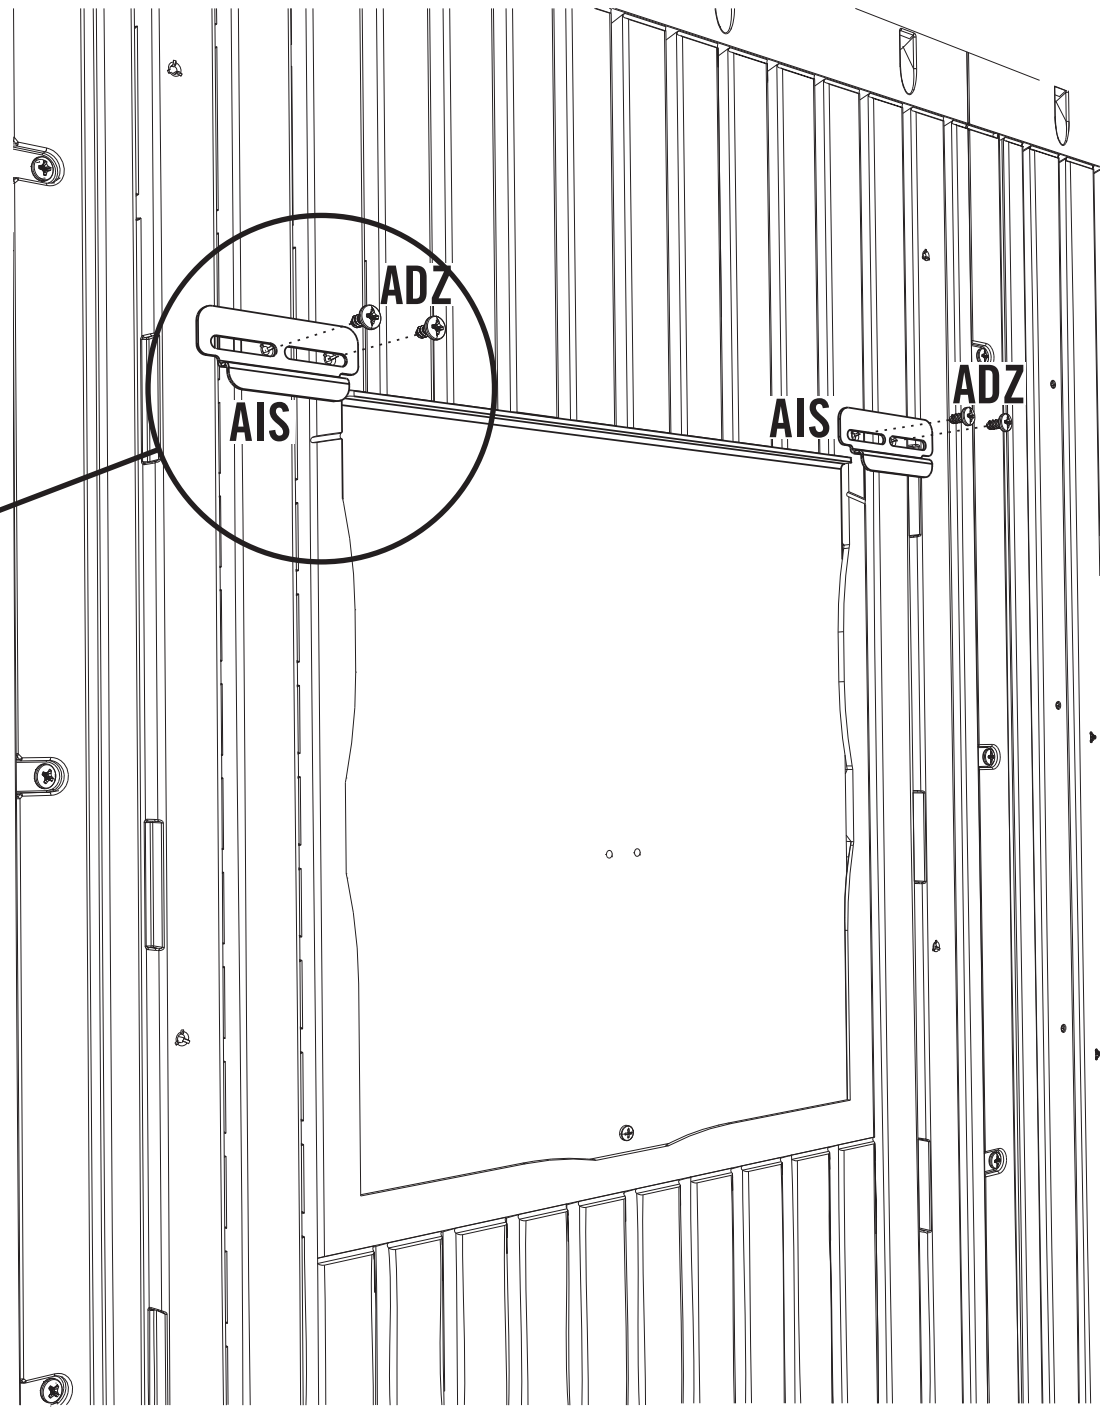

Fig. 3

! *Note: Insert Window with bent edge at top and pointing away from the wall.*

SEC 13 DOOR ALIGNMENT

HARDWARE REQUIRED

NO HARDWARE PROVIDED FOR THIS SECTION

TOOLS REQUIRED

SMALL PARTS BOX REQUIRED: B00


Phillips Screwdriver


Rubber Mallet


Level


AIX (x4)
Wood Shim (Provided)


Safety Glasses

TOOLS AND HARDWARE REQUIRED FOR THIS PAGE





AIX (x4)

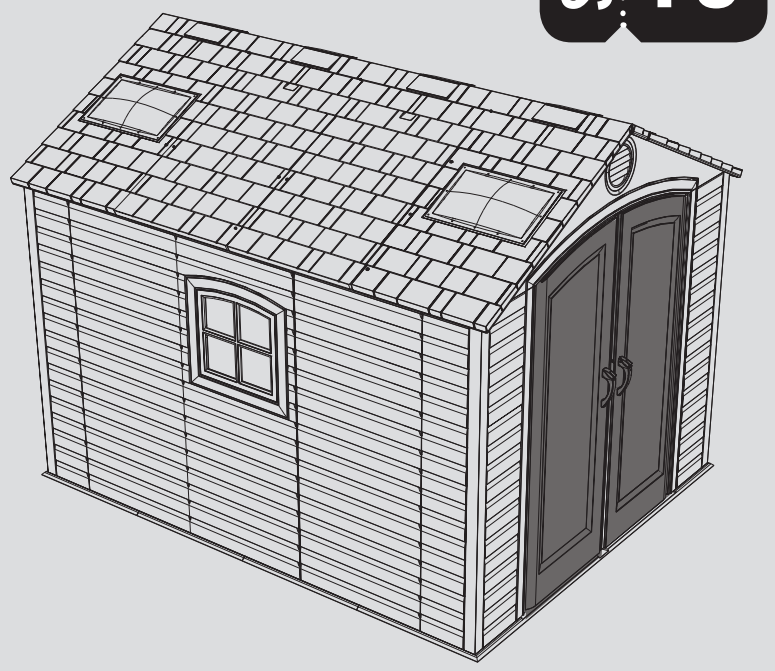

SEC 13.1

DOOR ALIGNMENT

In some cases, the shed doors may not completely line up at the tops (fig. 1). When this happens, identify which side is higher and use a **Wooden Shim (AIX)** to slightly raise the back corner of the high side until doors line up (fig. 2). If doors need further adjustment, insert another shim under the front corner opposite of the first shim. If the doors still need further adjustment, stack additional shims (one at a time) alternating between the back and front shims. After doors are aligned, cut off any portion of wood shim that is still exposed. From inside the shed, drive a 1” nail through the floor into the shim to hold it in place. **Tighten all anchoring hardware now.**

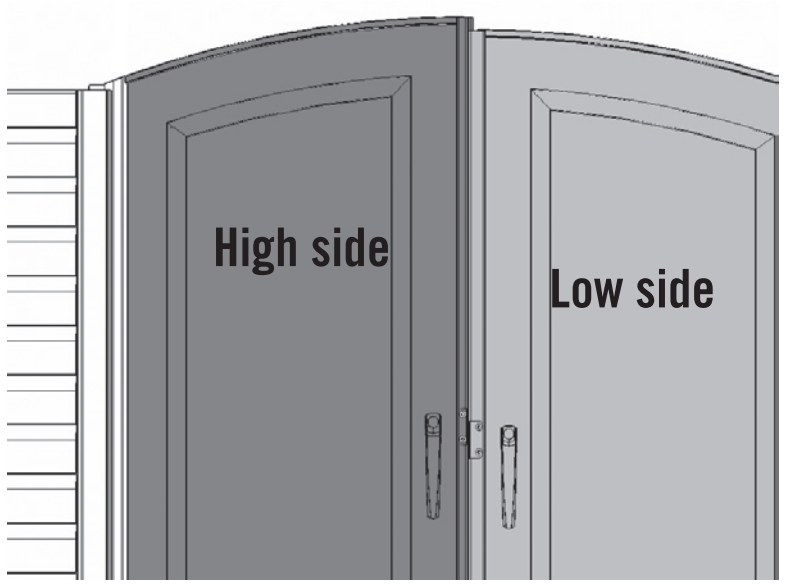

Fig. 1

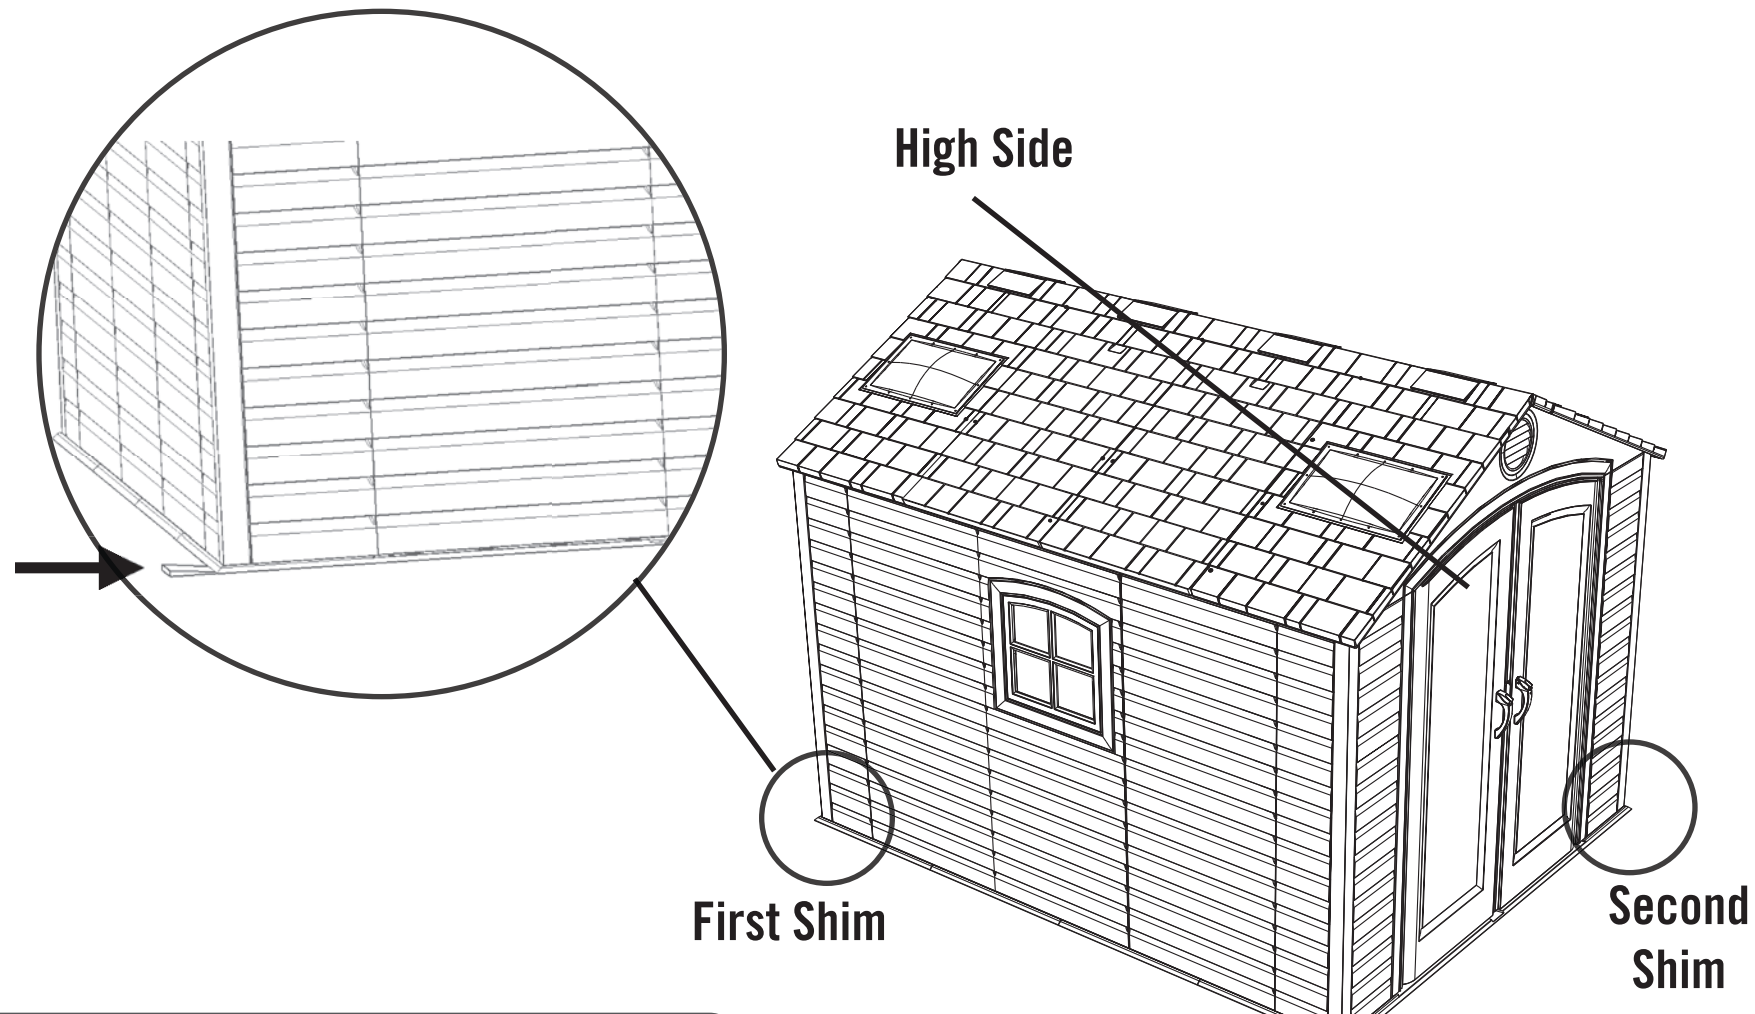

Fig. 2

! *Note: Shim should be placed at the corner, running directly under one wall.*

CLEANING & CARE

Congratulations on your Lifetime® product purchase. By following the instructions below, your new Lifetime product should provide you with years of service and enjoyment.

Cleaning and Care

The polyethylene panels are stain- and solvent-resistant. Most stains can be removed, using a mild soap and a soft-bristled brush. Abrasive cleaning materials may scratch the plastic and are not recommended. Repair scratches or rust spots on the metal by sanding the affected area lightly; using a rust preventative spray primer; and finally, spraying with a high-gloss spray enamel paint. Avoid placing a direct heat source on or near surfaces unless using a heat barrier.

LIFETIME OUTDOOR SHED EQUIPMENT

10-YEAR LIMITED FACTORY WARRANTY

THE MANUFACTURER RESERVES THE RIGHT TO MAKE SUBSTITUTIONS TO WARRANTY CLAIMS IF PARTS ARE UNAVAILABLE OR OBSOLETE.

1. Lifetime outdoor sheds are warranted to the original purchaser to be free from defects in material or workmanship for a period of ten years from the date of original retail purchase. The word “defects” is defined as imperfections that impair the use of the product. Defects resulting from misuse, abuse or negligence will void this warranty. This warranty does not cover defects due to improper installation, alteration or accident. This warranty does not cover damage caused by vandalism, rusting, “acts of nature” or any other event beyond the control of the manufacturer.

2. This warranty is nontransferable and is expressly limited to the repair or replacement of defective product. If the product is defective within the terms of this warranty, Lifetime Products, Inc. will repair or replace defective parts at no cost to the purchaser. Shipping charges to and from the factory or distribution center are not covered and are the responsibility of the purchaser. Labor charges and related expenses for removal, installation or replacement of the shed or its components are not covered under this warranty.

3. This warranty does not cover scratching or scuffing of the product that may result from normal usage. In addition, defects resulting from intentional damage, negligence, unreasonable use or hanging from the truss will void this warranty.

4. Liability for incidental or consequential damages is excluded to the extent permitted by law. While every attempt is made to embody the highest degree of safety in all equipment, freedom from injury cannot be guaranteed. The user assumes all risk of injury resulting from the use of this product. All merchandise is sold on this condition, and no representative of the company may waive or change this policy.

5. This product is not intended for institutional or commercial use; Lifetime Products, Inc. does not assume any liability for such use. Institutional or commercial use will void the warranty.

6. This warranty is expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use to extent permitted by Federal and state law. Neither Lifetime Products, Inc., nor any representative assumes any other liability in connection with this product. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

PLEASE INCLUDE YOUR DATED SALES RECEIPT AND PHOTOGRAPHS OF DAMAGED PARTS.

REPORT PRODUCT DEFECTS IN WRITING TO:
Lifetime Products, Inc., PO Box 160010 Clearfield, UT 84016-0010
or call 1-800-225-3865 M-F 7 a.m. to 5 p.m. MST.

REGISTER YOUR PRODUCT FOR QUICKER CUSTOMER SERVICE.

Visit www.lifetime.com or call 1-800-225-3865 to register your product today.

FOR INTERNATIONAL WARRANTY CLAIMS:

All warranty claims must be accompanied by a sales receipt. Report all warranty claims in writing to your regional sales support representative. Please include your dated sales receipt and photographs of damaged parts.
To Identify the representative for your region — Please visit: www.lifetime.com/international

LIFETIME®

www.lifetime.com

ENHANCE YOUR LIFETIME® PURCHASE BY ADDING ACCESSORIES OR OTHER GREAT PRODUCTS:

To purchase accessories or other Lifetime Products, visit us at:

www.lifetime.com

Or call: 1-800-424-3865